


## Note:

Unless marked, the length, width dimension tolerance should be ±5. The tray thickness dimension tolerance should be ±2.

 
The waste hole ID dimension tolerance should be -3.


## **INSTALLATION INSTRUCTION FOR HIGH FLOW WASTE - STHFW6190**

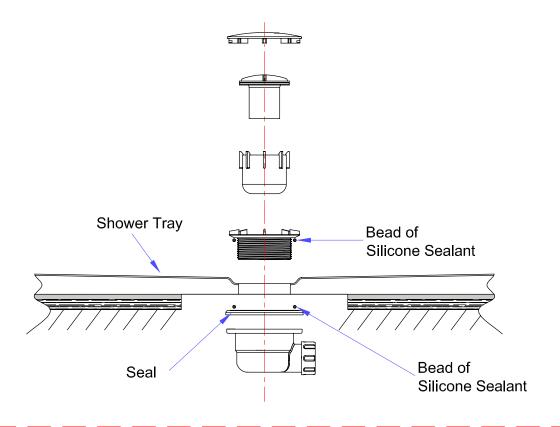

## **Maintenance:**

- Remove the waste cover.
- Remove the inner filter.
- Clean with hot soapy water.



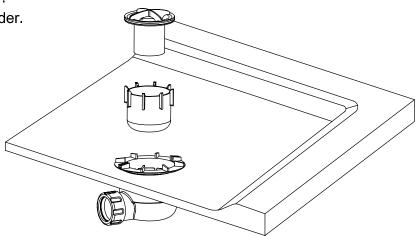



For any further information please contact Crosswater on 01322 628270

For any further information please contact Crosswater on 01483 303711 Or visit our web-site at www.simpsons-enclosures.co.uk The manufacturer reserves the right to make technical modifications without prior notification.

Or visit our web-site at www.crosswater.co.uk The manufacturer reserves the right to make technical modifications without prior notification.