



Please read these instructions thoroughly before starting installation



Bracket Box Components			
1	Blank Plug	4	Bracket Stem (e)
1	Air Vent Plug	4	Mini Screw (f)
4	Wall Plug (a)	1	Hexagon Key (g)
4	Wall Support (b)		
4	Washer (c)		
4	Wall Screw (d)		

PLEASE CHECK THAT ALL THE COMPONENTS ARE PRESENT AND THE PRODUCT HAS NOT SUFFERED ANY DAMAGES DURING TRANSIT



This radiator is manufactured from Mild Steel and it is only suitable for installation within a central heating system with a corrosion inhibitor added to the water.

Please ensure, when adding inhibitor, not to underdose overdose and follow the inhibitor instructions. The Ph level of the system water should be between 6.5 and 7.5

The inhibitor should not be nitrate based! Do not use softened water in your radiators!

Beware of own brand inhibitors!



Installation should be carried out by a suitably qualified professional or other fully competent person and in accordance with the relevant British and European Standards (BS7593:1992, EN12828:203, EN12831:2003, EN14336:2004) & all applicable Building Regulations.

When drilling or fixing into walls, floors or ceilings it is essential that you check for pipes and wires before commencing. Please ensure that you wear all necessary personal protective equipment.

Due to our commitment to continuous product development we reserve the right to alter specifications without notice. This product carries a 5 year warranty against faulty materials and manufacturing defects. The warranty does not cover any defect arising from damage, negligence, usage outside the products intended purpose or fair wear & tear. The warranty does not cover pinholes or other issues caused by insufficient cleansing or protection of the central heating system. Eastbrook Co. reserves the right to investigate all claims and conduct appropriate testing if deemed necessary. In the event of a leaking radiator, Eastbrook must be contacted before the central heating system is drained. Eastbrook Co.'s liability under any warranty expressed or implied is strictly limited to replacement of the defective radiator and no consequential losses of any kind will be entertained. The warranty applies to the first purchaser only, is non-transferable & proof of purchase will be required for all warranty claims. This warranty applies to the United Kingdom and Europe only and does not affect your statutory rights. Full terms and conditions can be found on our brochure.

Regular cleaning with a soft cloth will keep the surface of your product looking new. Soapy water can be used to remove stubborn marks. Do not use abrasive or chemical cleaners as these will damage the surface finish over time.



After installation the system must be thoroughly flushed with a 'Domestic Water Treatment Association' (DWTA) approved central heating cleanser. Following cleansing a DWTA approved central heating protector must be added to the system. Failure to cleanse and protect the system properly is likely to reduce the lifecycle & invalidate the warranty.




Please check that the radiator / towel rail is connected to an earth bonded system. In the event of non-conducting material being used for the pipework such as PVC, the radiator / towel rail should have its own earth bonding.

Maximum Working Temperature 110°C
Reaction to Fire Class A1

Eastbrook 
Eastbrook Road, Gloucester GL4 3DB
Technical Helpline : 01452 317890
Mon - Fri / 8am - 5pm
Email : technical@eastbrookco.com

1. Screw the Blank Plug and the Air Vent Plug into the top two threads in the upright channels. The Air Vent Plug can be fitted on either side. Tighten firmly with a 22mm or adjustable spanner.
2. Wind a thick layer (at least 6 turns) of PTFE tape, clockwise around the radiator valve tails (not supplied) and screw the radiator valve tails into the bottom two threads in the upright channels and tighten firmly.
3. Check that the wall is strong enough to hold the weight of the towel rail filled with water. On plasterboard walls we strongly recommend fixing to the timbers. Mark your preferred bracket positions on the wall and drill holes for the fixings you intend to use. The Wall Plugs supplied are only suitable for solid walls and you will need alternative fixings for other wall types.
4. Screw the Bracket Bases to the wall using the Washers & Wall Screws provided or alternative fixings. The Grub Screws should be facing downward.
5. Screw the Bracket Stems into the threads on the back of the towel rail.
6. Align the Bracket Stems with the Bracket Bases and push the towel rail back into position.
7. Hold the towel rail back against the wall and tighten the Grub Screws with the Hexagon Key provided.
8. Connect the radiator valves (not supplied) and fill the system to check for leaks and repair any leaks as necessary.
9. Flush the entire central heating system with a DWTA approved central heating cleanser, carefully following the manufacturer's instructions.
10. After thoroughly flushing the entire central heating system, refill adding a DWTA approved central heating protector, carefully following the manufacturer's instructions.
11. Run the central heating system up to full temperature and release any trapped air using the Air Vent Plug and the installation is finished.

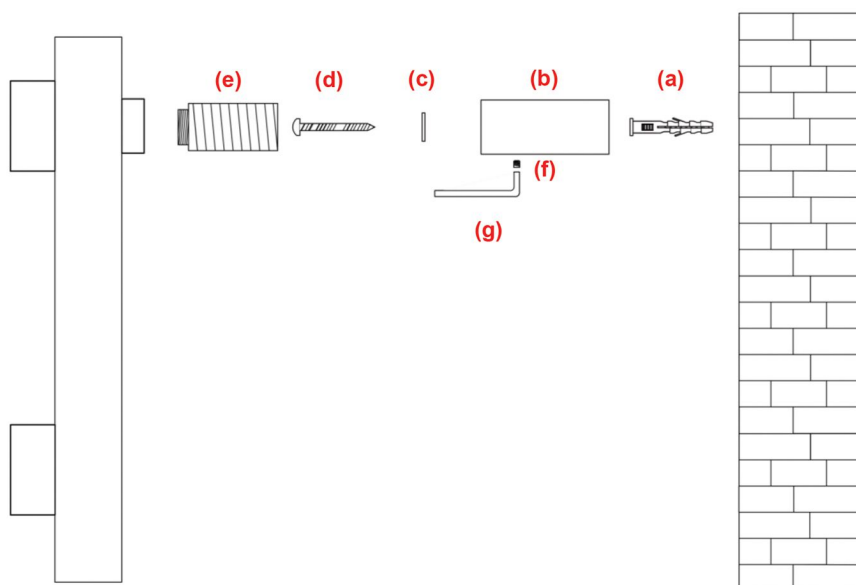

⚠ Maximum working pressure of this radiator is 4 bar. This radiator is to be used on Domestic Central Heating systems only. (Not suitable for use on direct hot water systems), Please consult your engineer or supplier.

If the radiator / towel rail is in a room such as bathroom, toilet or shower with running water, the room should be ventilated with an extractor fan complying with the relevant building regulations and should never be exposed direct contact with water.

Eastbrook 
Eastbrook Road, Gloucester GL4 3DB
Technical Helpline : 01452 317890
Mon - Fri / 8am - 5pm
Email : technical@eastbrookco.com

CONGRATULATIONS

You are the proud owner of an exclusive Helmsley Towel Rail which has been specially produced by our craftsmen who would wish you to enjoy many years of satisfaction from it.

INSTALLATION

This product must be installed by a fully qualified engineer.

- Please consider using an Eastbrook Valve Set – this will ensure that your radiator looks its best with matching radiator valves.
- On commissioning, flush the central heating system thoroughly using a proprietary solution to ensure that aggressive substances such as fluxes and manufacturing residue, from which internal surfaces of your radiator can sustain irreparable damage – are removed. A specifically approved inhibitor for aluminium radiators needs to be subsequently added to the heating system in order to protect the radiator and other parts of the central heating system to promote extended operating lifespan.

Please ensure, when adding inhibitor, not to underdose or overdose and follow the inhibitor instructions. The Ph level of the system water should be between 6.5 and 7.5

The inhibitor must not be based nitrate based!

Do not used softened water in your radiator!

Beware of own brand inhibitors!

Eastbrook recommends FERNOX F1 or equivalent inhibitor for your radiators.

MAINTENANCE

- From time to time it is advisable to clean your towel rail with a warm damp cloth. Never use any form of abrasive cleaner or chemical.
- Corrosion inhibitor must also be regularly maintained, please consult your engineer for details.

IMPORTANT

- Maximum working pressure of this radiator is 4 bar.
- This radiator is to be used on Domestic Central Heating systems only. (Not suitable for use on direct hot water systems). Please consult your engineer or supplier.

WARRANTY

Your Helmsley Towel Rail has a manufacturer's warranty for five years in respect of defective materials and workmanship and subject to installation being carried out by a qualified engineer in accordance with good practice and the appropriate corrosion inhibitor being regularly maintained.

REMEMBER Excellence is worth looking after.