

## Installation Instructions & User Guide

Please leave these instructions with the end user


Saffron Bath Filler Range | SAF BF (D1)

## **Specifications**

## **Dynamic Water Pressure** Max: 5.0 bar Min: 0.2 bar 3.0 2.0 Pressure

Maximum Static Pressure: 10.0 bar

#### **Inlet Water Temperature**

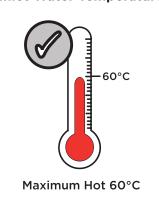

#### **Inlet Connections**




3/4" BSP

#### Outlet



M24 Recessed Honeycomb Aerator

### **Pack Contents**

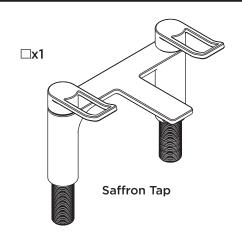

□x2



Plinth





Plinth Seal

□x2


□x2



Backnut

Washer

## **Operation**

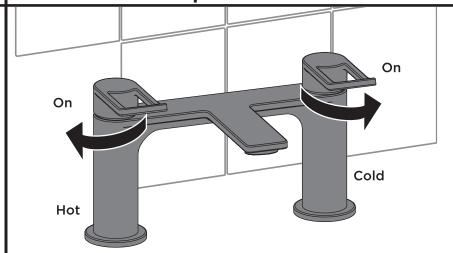

### Tools Required for Installation/ Maintenance



Adjustable Spanner



Hexagonal Keys



Philips Head





(Cartridge)

## **Prior to Installation**

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.

# Spare Parts



To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.

# **Important**


#### The images shown are for illustrative purposes only.

The tap you have purchased may look different to those pictured in this booklet but will follow the same installation steps.

#### Your contents page will be specific to your product.

If you find your product or any of its components differ from those shown on the contents page, please contact our customer support.

### Installation

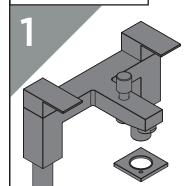


Feed the tap body through the plinths and ensure rubber plinth seals are in place

Once aligned, feed the threaded tails through tap holes


## IMPORTANT

Your model may come with a plinth and will either be included pre-attached or loose in the box\*

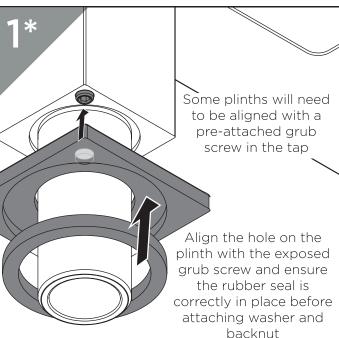





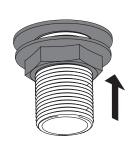


To secure the taps to the bath, use a box spanner to tighten the metal backnuts underneath ensuring the washer is correctly positioned in between the backnuts and the bath


## General Cleaning


Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

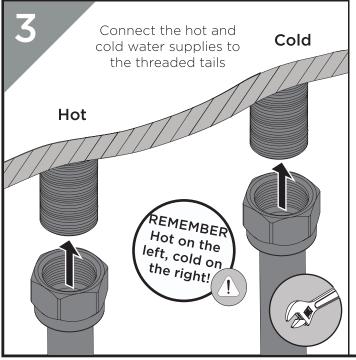

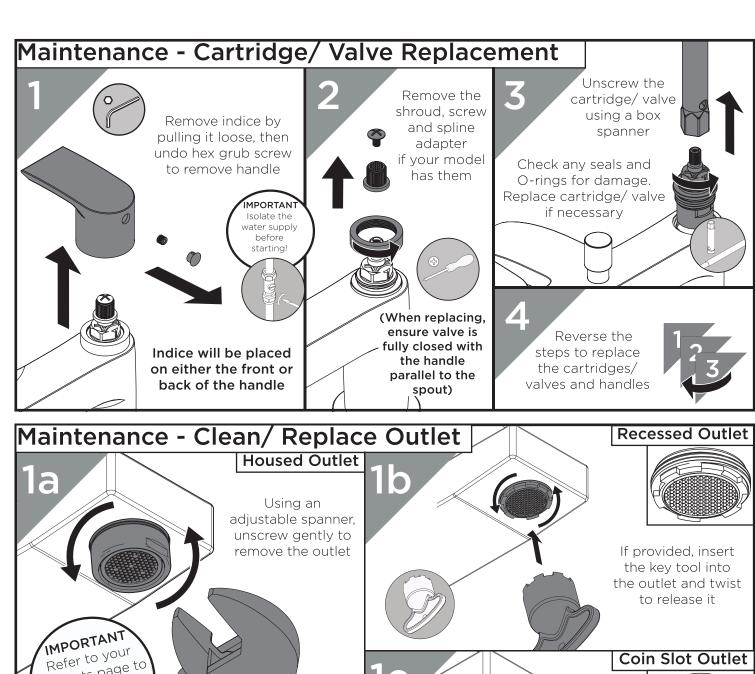

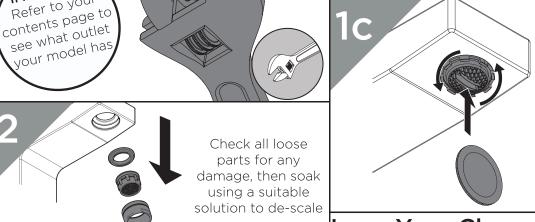

## Love Your Chrome

Bristan offers an effective chrome-friendly cleaning kit for use with your taps and showers. Scan the QR Code or search for 'CLEAN KITO1' on

www.bristan.com



Using a coin, insert

into the slot on the

outlet and twist to

release it

Reverse the steps to replace the outlet



#### Troubleshooting **Symptom** Cause Remedy Partially closed isolation valve. Open isolation valve. Refer to specification for minimum distance required. Head of water is below the minimum distance required. No flow or Hot or cold water being drawn off Do not use other water outlets when using the taps. low flow elsewhere causing pressure changes or rate instantaneous boiler temperature changes. Airlock or partial blockage in the supply Flush through pipework to ensure removal of debris and any airlocks. pipework. This is normal for a short time after This is caused by residual water tension, the build up of water in the tap body. Water using the taps. dripping If water continues to drip, Remove valves and clean, refer to 'Maintenance' from taps possibly due to the ceramic disc valves section before starting any maintenance. Closed isolation valve. Open isolation valve. Taps do not turn on Mains water supply turned off.

### **Notes**

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

### **Contact Us**

Turn on mains water supply.

## **BRISTAN**

#### Bristan Group Ltd.

**UK:** Bristan Group, B78 1SG. EU: Masco Europe S.à.r.l. 14 Rue Strachen

6933 Mensdorf Luxembourg

**Customer Service:** +44330 026 6273 Web: www.bristan.com Email: enquire@bristan.com

A Masco Company

## **Our Guarantee**

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

