



## crosswater<sup>×</sup>

## WS1701LBPC - Watersqure 1701 thermo trim set (with sk962c)

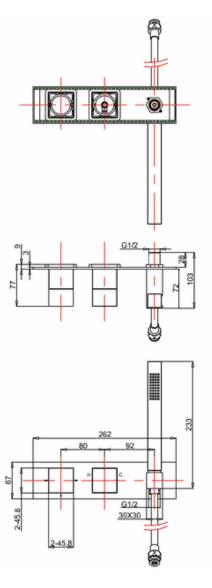

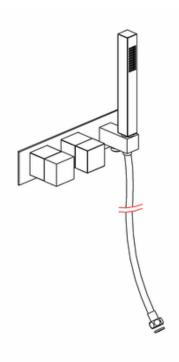

## Note:

For the each part, the dimension tolerance should be followed the list below.

	0 ~ 100	101 ~ 200	201 ~ 400	≱ 401
ĺ	±1	±2	±3	±5

For the finished assembly, the dimension tolerance should be followed the list below.

0 ~ 300	≥ 301	
±2	±5	