


## **Important**

- Suggest cleaning the product surface with clean water or soft detergent, and then dry with soft towel.
- Please do not use any detergent containing hydrochloric acid or caustic chemicals.
- Avoid scratching the surface with hard objects, and do not use a coarse cloth to wipe.
- The product should be installed by a professional, following the recommended installation instructions.
- Please note that the A51 product can only be used with the Burlington wooden seats as per the dimensions and instructions shown.

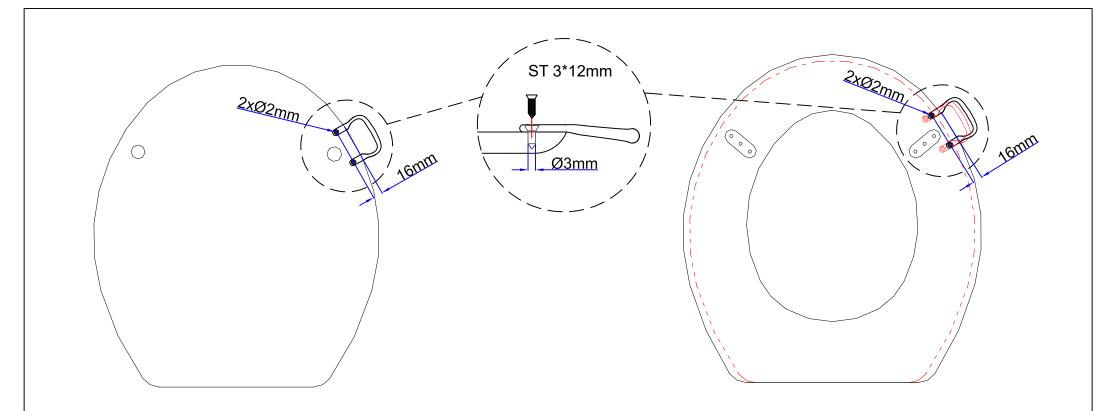

- 1. There is a flat surface on the installation section of handle. Put it onto the lid of the seat to determine the final installation position (as above diagram), mark the fixing hole positions in pencil. Please note the buffer is in the center of two fixing holes.
- 2. Using a 2mm drill bit, drill holes on the marked positions.
- 3. Secure the handle onto the lid of the seat using the screws supplied.
- 4. Then install the handle onto the ring of the seat per the position of the 1st handle. The two handles should be aligned properly as shown above.