















# **installation** instructions

One Part Bath Screen  
with/without Towel Rail  
1450 x 800mm

# installation instructions

## Parts supplied

A	B	C	D
			
Wall Profile (x1)	Yellow Wall Plug (x4)	Wall Fixing Screw (x4)	Bath Screen incorporating Aluminium Vertical Profile (x1)
E	F	G	H
			
Spacer (x1)	Screw Cup (x3)	Self Tapping Screw (x3)	Screw Cover Cap (x3)
I	J	K	L
			
Profile Cap (x2 – Left & Right Versions)	Small Screw (x2)	Bath Screen Seal	Handle Clamp Assembly (x1)

M

N



Towel Bar  
Assembly (x1)



Hexagon Key (x1)

### Tools required (not supplied)

- Tape Measure
- Level
- Pencil
- Electric Drill
- 7mm Drill Bit
- Screwdriver PH3
- Screwdriver PZ2
- Eye Protection
- Hacksaw
- Silicone Sealant

### Before You Start

**PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.**

Check the pack and make sure you have all the parts listed.

Certain spare parts and additional components are available if necessary and these can be obtained by contacting your merchant.

When you are ready to start, make sure that you have the right tools to hand and that the installation area is clean and dry.

When drilling or fixing into walls or floors it is essential that you check for pipes and wires before commencing.

**WHEN HANDLING GLASS PLEASE ENSURE THAT APPROPRIATE SAFETY PROTECTION IS WORN.**



### Step 1

Measure the wall to the inside rim edge of the bath, then measure out 10mm from this point in order for the Bath Screen Seal to be watertight against the bath rim when unstalled. Mark this point on the wall with a pencil.



### Step 2

Place the Wall Profile (A) against the wall with the extended lip facing the inside of the bath as shown. Using the pencil marks made in Step 1, place the profile into position ensuring the extended lip marries with the pencil mark. Mark the drill positions through the holes in the Wall Profile (A) with a pencil then put to one side.



### Step 3

Before proceeding, check thoroughly for pipes and wires in the wall.

Drill four holes as marked in Step 2 using a 7mm drill bit. Push four Yellow Wall Plugs (B) into the holes. Run a bead of silicone along the back of the Wall Profile (A) then place the Wall Profile (A) into position and screw four Wall Fixing Screws (C) hand tight to secure the profile into position. Make sure the Wall Profile (A) is completely vertical using a level then fully tighten the four Wall Fixings (C) with a PH3 Screwdriver.



### Step 4

Offer the Bath Screen (D) into place ensuring that the door is positioned so that it can swing outwards.

**Note:** The Minimal Bath Screen has a 90 degree hinge and therefore can only open outwards. This is to help retain the water when in use. Ensure that the Bath Screen (D) is level and that an even gap between the bottom of the glass and the rim of the bath is achieved using the spacer (E). Place a Self Tapping Screw (G) through a Screw Cup (F) and screw into the inside of the Wall Profile (A) through one of the pre-drilled holes of the Bath Screen's Aluminium Vertical Profile (E). Push Screw Cap (H) over Screw Cup (F) to cover the Screw Head. Repeat for the other two holes.



#### Step 5

Place a Profile Cap (I) into the top of the Wall Profile (A) and secure into position using a Small Screw (J)



#### Step 6

Swing the Bath Screen (D) outwards to expose the underside of the glass then attach the Bath Screen Seal (K) so that the splash strip is facing into the bath.



#### Step 7

Loosen the two cushioning grub screw fixings on the Handle Clamp Assembly (L) and carefully offer into position (generally about midway up the screen). Ensure that the clear glass protector included with the Handle Clamp Assembly is fitted to offer additional cushioning against the glass. Hand tighten the cushioning grub screw fixings with a PZ2 screwdriver. Do not overtighten.



#### Step 8

Using a silicone based sealer, seal along the outside edge of the Wall Profile (A).




### Step 9

Fit the Towel Bar (M) on to the Bath Screen (D). Ensure that there are clear cushioning pads either side of the glass and the rubber washers are through the glass holes, then tighten the two hexagon fixings with the Hexagon Key (N).

**If you require any assistance or advice,  
please contact your merchant.**

## Notes

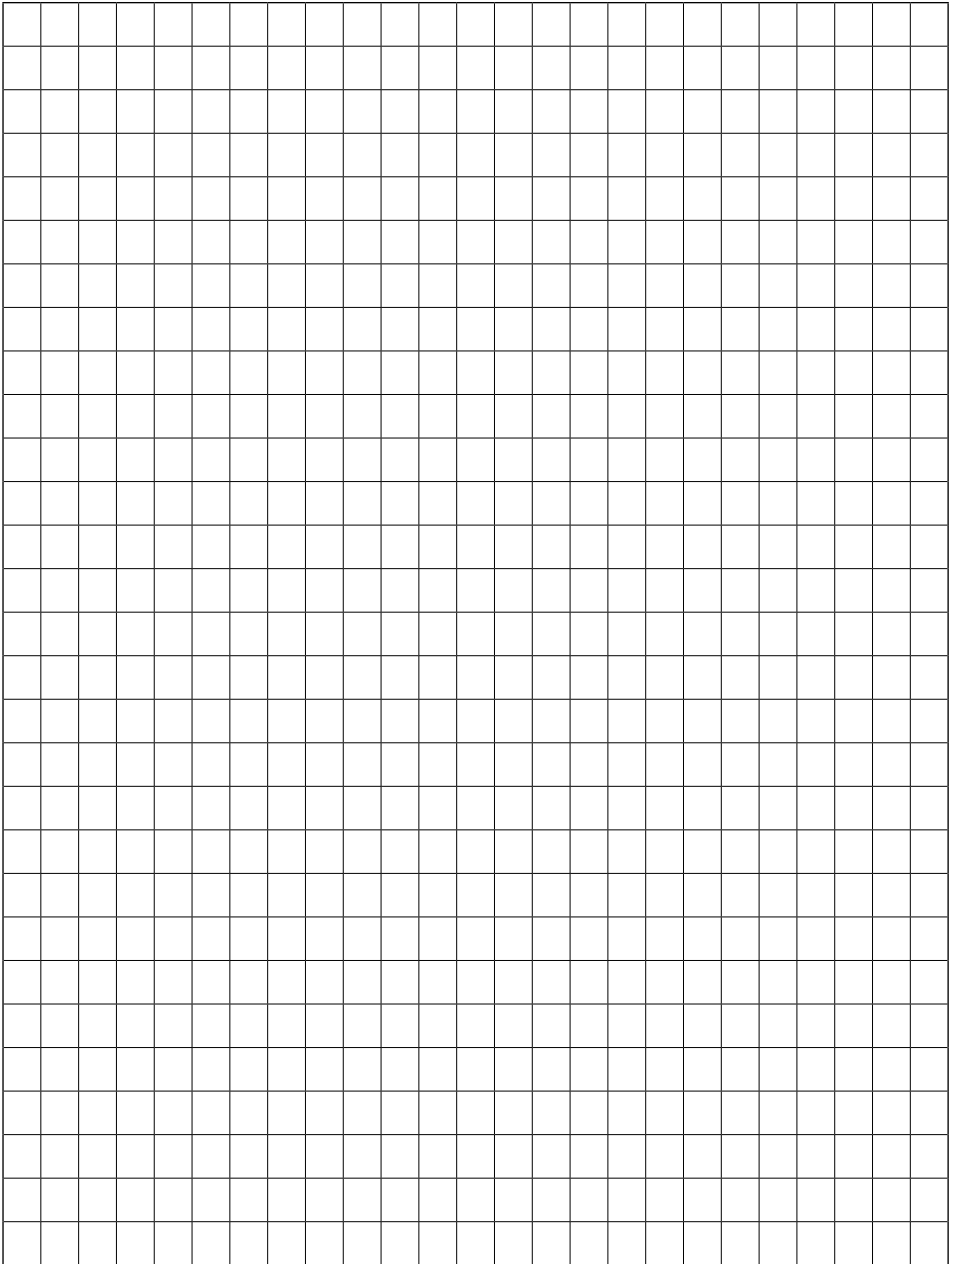

Due to our commitment to continuous product development we reserve the right to alter specifications without notice. Products are guaranteed against manufacturing defects for the first purchaser only and the guarantee is non-transferable. Our liability under any guarantee expressed or implied is strictly limited to replacement of defective goods or a refund at our discretion and no consequential losses will be entertained. Proof of purchase will be required.