






















installation instructions

Two Part Bath Screen
with/without Towel Bar
1450 x 940mm

installation instructions

Parts supplied

A		B		C		D	
	Wall Profile (x1)		Yellow Wall Plug (x6)		Wall Fixing Panhead Screw (x4)		Bath Screen Side Panel incorporating Aluminium Profile (x1)
E		F		G		H	
	Screw Cup (x3)		Self Tapping Screw (x3)		Screw Cover Cap (x3)		Profile Cap (x2 – Left & Right Versions)
I		J		K		L	
	Glass to Horizontal Bar Clamp (x1)		Horizontal Wall Support Bar (x1)		Wall Fixing Countersunk Screw (x2)		Wall Support Fixing Assembly (x1)
M		N		O		P	
	Cover Cap (x2)		Glass to Glass Hinge Assembly (x2)		Bath Screen Main Panel (x1)		Spacer (x1)
Q		R		S			
	Bath Screen Vertical Seal (x1)		Bath Screen Seal		Handle Clamp Assembly (x1)		

T

U



Towel Bar
Assembly (x1)



Hexagon Key (x1)

Tools required (not supplied)

- Tape Measure
- Level
- Pencil
- Electric Drill
- 7mm Drill Bit
- Screwdriver PH3
- Screwdriver PZ2
- Eye Protection
- Hacksaw
- Silicone Sealant

Before You Start

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

Check the pack and make sure you have all the parts listed.

Certain spare parts and additional components are available if necessary and these can be obtained by contacting your merchant.

When you are ready to start, make sure that you have the right tools to hand and that the installation area is clean and dry.

When drilling or fixing into walls or floors it is essential that you check for pipes and wires before commencing.

WHEN HANDLING GLASS PLEASE ENSURE THAT APPROPRIATE SAFETY PROTECTION IS WORN.



Step 1

Measure the wall to the inside rim edge of the bath, then measure out 10mm from this point in order for the Bath Screen Seal to be watertight against the bath rim when unstalled. Mark this point on the wall with a pencil.



Step 2

Place the Wall Profile (A) against the wall. Using the pencil marks made in Step 1, place the profile into position then mark the drill positions through the holes in the Wall Profile (A) with a pencil then put to one side.



Step 3


Before proceeding, check thoroughly for pipes and wires in the wall.

Drill four holes as marked in Step 2 using a 7mm drill bit. Push four Yellow Wall Plugs (B) into the holes. Run a bead of silicone along the back of the Wall Profile (A) then place the Wall Profile (A) into position and screw four Wall Fixing Screws (C) hand tight to secure the profile into position. Make sure the Wall Profile (A) is completely vertical using a level then fully tighten the four Wall Fixings Screws (C) with a PH3 Screwdriver.



Step 4

Offer the Bath Screen Side Panel (D) and it is level. Place a Self Tapping Screw (F) through a Screw Cup (E) and screw into the inside of the Wall Profile (A) through one of the pre-drilled holes of the Bath Screen's Aluminium Vertical Profile (D). Push Screw Cover Cap (G) over the Screw Cup (E) to cover the exposed screw head. Repeat for the other two holes.

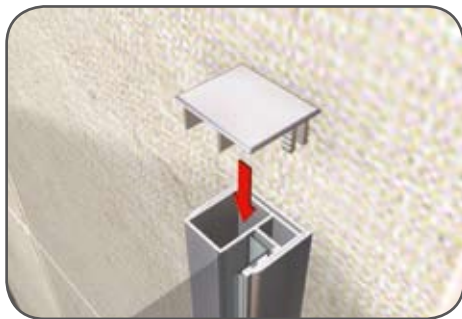

Step 5

Place a Profile Cap (H) into the top of the Wall Profile (A).



Step 6

Place the glass to Horizontal Bar Clamp (I) over the Bath Screen Side Panel (D) with the BDL logo on the outside of the glass. Ensure that the Small Glass Protector is inside the glass to Horizontal Bar Clamp (I) on the opposite side of the cushioning grub screw. When in the desired position tighten the cushioning grub screw using a PZ2 Screwdriver.




Step 7

Loosely assemble all the parts for the Horizontal Wall Support Bar (J), (I), (K) & (L). Using a level to ensure the Horizontal Wall Support Bar (J) is completely horizontally level, draw around the Wall Support Fixing Assembly (L) with a pencil. Then disassemble the Wall Support Fixing Assembly (L) and put the Hexagon Countersunk Bolt somewhere safe. Whilst holding the Wall Support Fixing (L) in place, mark with a pencil the two holes.

Before proceeding check thoroughly for pipes and wires in the wall. Drill two holes in the positions marked through part (L) using a 7mm drill bit. Push two Yellow Wall Plugs (B) into the holes.

Note: please be aware that if you fixing to certain materials it may be necessary to use specialist fixings.

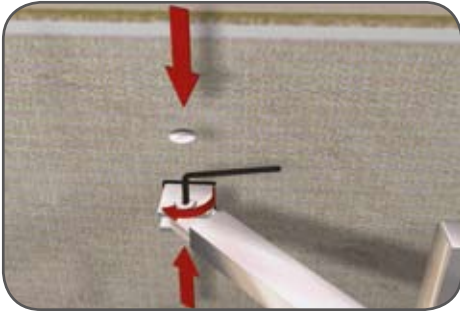

Step 8

Remove the Hexagon Countersunk Bolt from the Glass to Horizontal Bar Clamp (K) and put to one side. Offer the Horizontal Wall Support Bar into place then fix into position by means of the two Hexagon Countersunk Bolts put aside earlier.



Step 10

Remove the four Hexagon Countersunk Bolts from the two Glass to Glass Assemblies (N) then offer the Bath Screen Main Panel (O) into place. Secure the Bath Screen Main Panel (O) into place with the four Hexagon Countersunk Bolts and hand tighten. Ensure that the Bath Screen Main Panel (O) is level and that an even gap between the bottom of the glass and the rim of the bath is achieved using the spacer (P). Tighten all of Countersunk Bolts fully.



Step 9

Remove the two Hexagon Countersunk Bolts on the Glass to Glass Assembly (N) then fit the Glass to Glass Assembly (N) to the Bath Screen Side Panel (D) ensuring that the clear thin rubber cushions are installed so that the glass does not directly contact the hinge metal surface. Note: The Bolt heads should be facing the inside of the bath. Handtighten the two Hexagon Countersunk Bolts to secure. Repeat for the second Glass to Glass Assembly (N).





Step 12

Loosen the two cushioning grub screw fixings on the Handle Clamp Assembly (S) and carefully offer into position (generally about midway up the screen). Ensure that the clear glass protector included with the Handle Clamp Assembly is fitted to offer additional cushioning against the glass. Hand tighten the cushioning grub screw fixings with a PZ2 screwdriver. Do not overtighten.



Step 11

Swing the Bath Screen Main Panel (O) to expose the underside of the glass then attach the Bath Screen Seal (R) so that the splash strip is facing into the bath. Attach the Bath Screen Vertical Seal (Q) so that it will seal between the Main Panel (O) and Side Panel (D) when closed.



Step 13

Using a clear silicone based sealer, seal along the outside edge of the Wall Profile (A) and on the inside edge where the Bath Screen Side Panel (D) meets the bath rim.





Step 14

Fit the Towel Bar (T) on to the Bath Screen Main Panel (O). Ensure that there are clear cushioning pads either side of the glass and the rubber washers are through the glass holes, then tighten the two hexagon fixings with the Hexagon Key (U).

**If you require any assistance or advice, please
contact your merchant.**

Notes

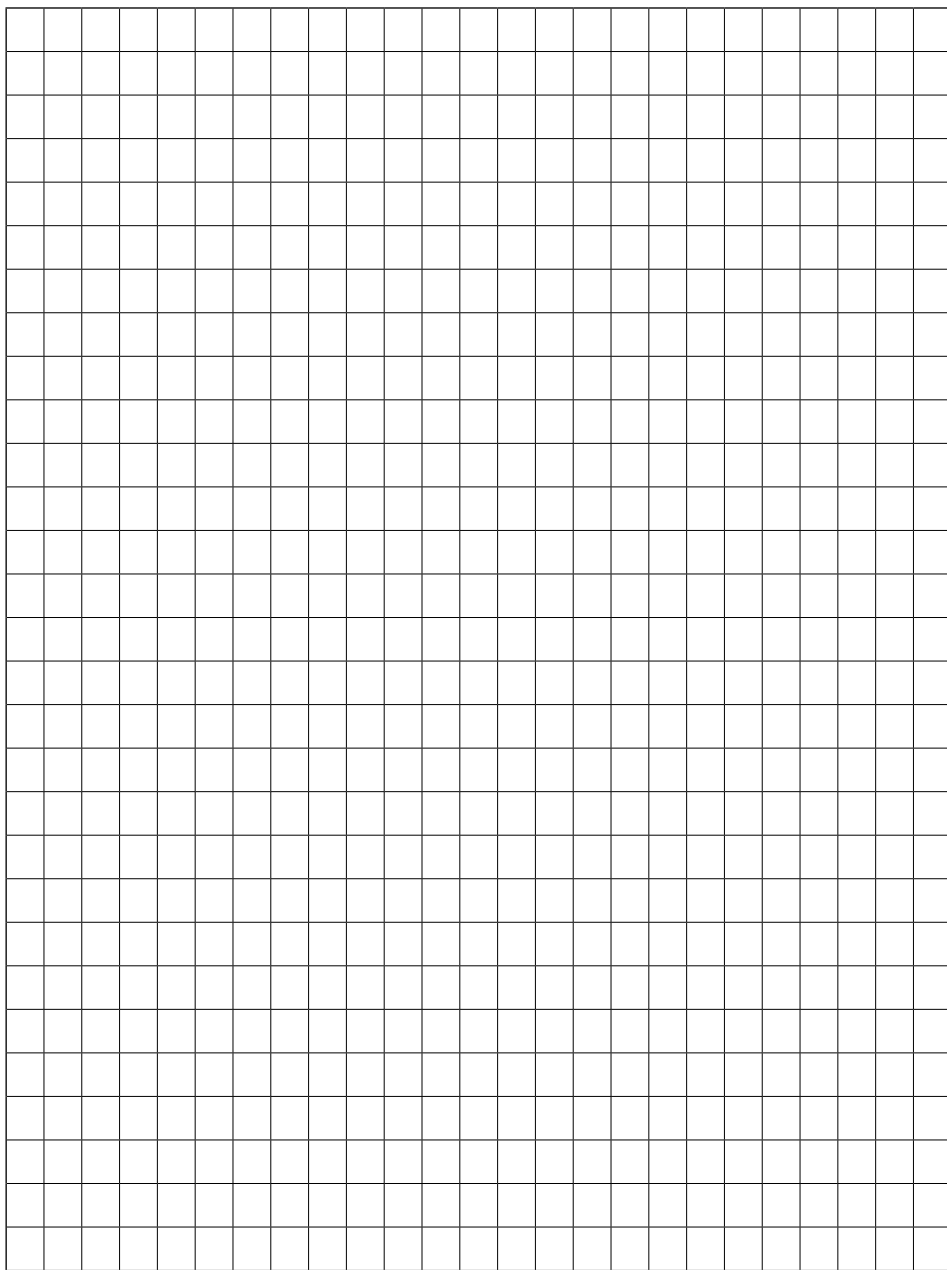

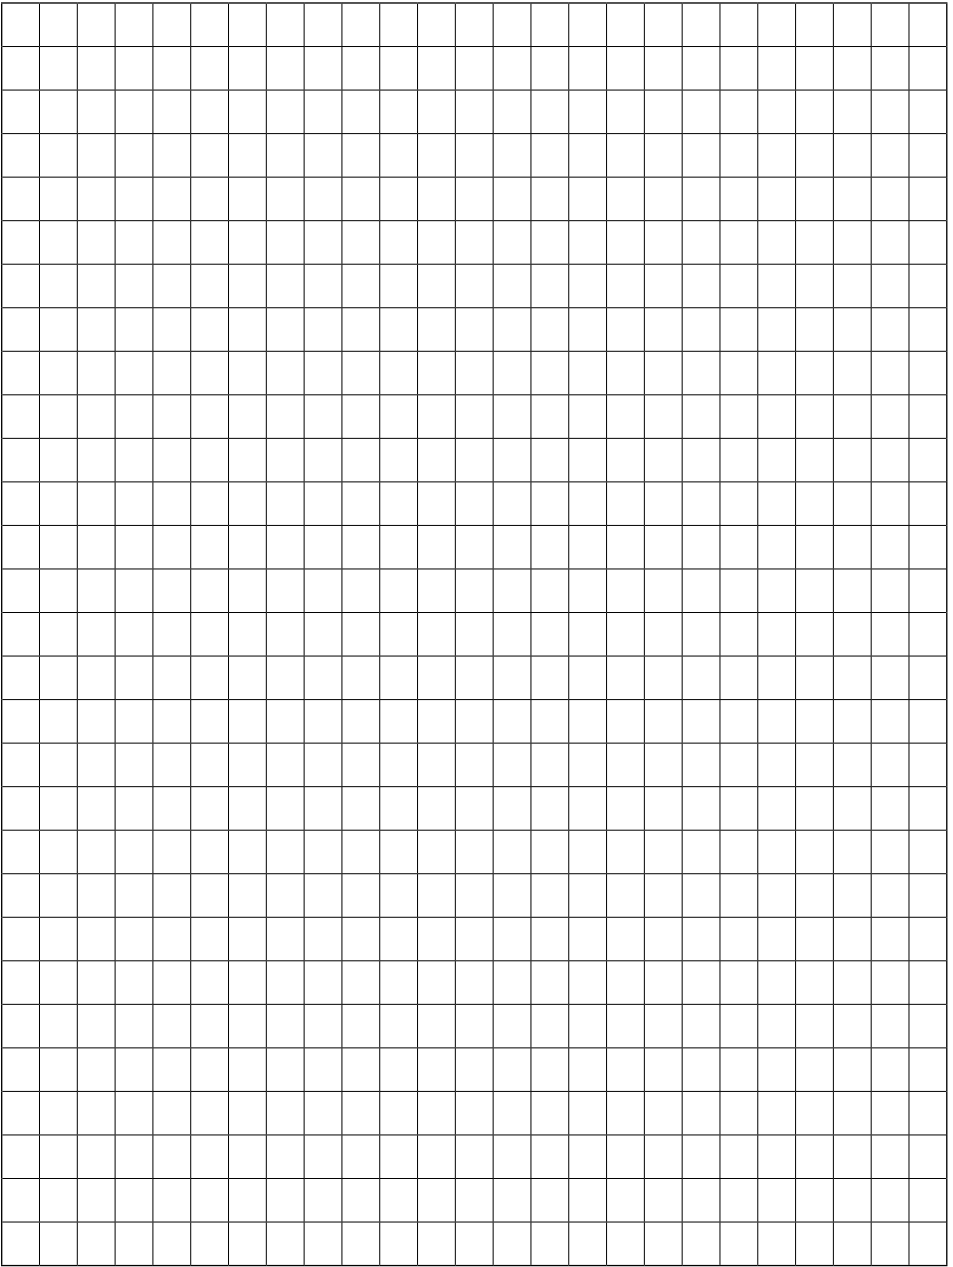

Due to our commitment to continuous product development we reserve the right to alter specifications without notice. Products are guaranteed against manufacturing defects for the first purchaser only and the guarantee is non-transferable. Our liability under any guarantee expressed or implied is strictly limited to replacement of defective goods or a refund at our discretion and no consequential losses will be entertained. Proof of purchase will be required.