


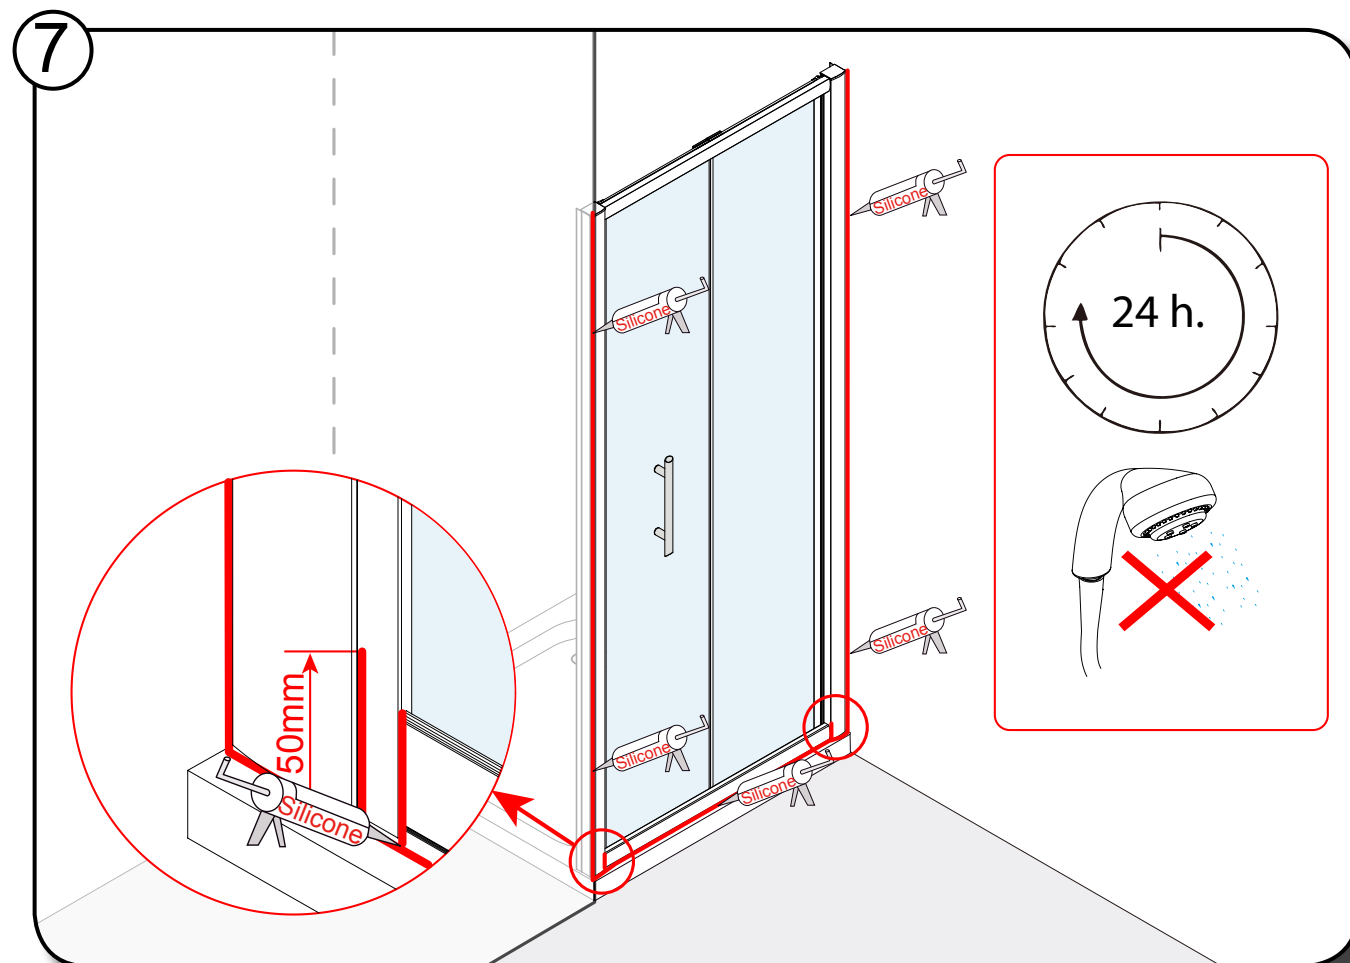

For further information please contact:
 Pour plus d'informations, contacter s'il vous plaît:
 Für weitere Informationen kontaktieren Sie bitte:
 Voor meer informatie, neem contact op met:

www.merlynshowering.com


IRL: 0567791555

UK: 08081011429

FR: 0800 916586

BIFOLD DOOR

Porte pliante Zweiteilige Tür Tweedelige deur

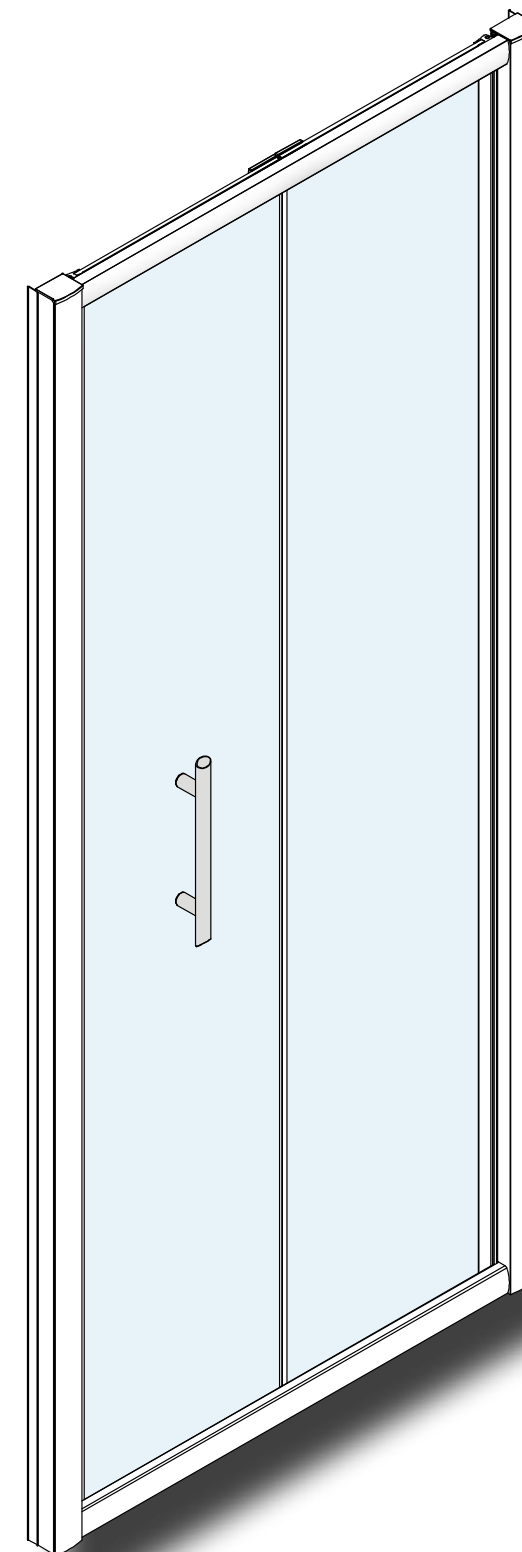

INSTALLATION GUIDE

Guide d'installation Installationsanleitung Installatiehandleiding

ENGLISH

If you install the product in a way that differs from this manual this will void all guarantees. Before installation check that the product meets all your requirements and is not damaged. By proceeding with installation, you accept the condition of the product. The wall plugs supplied with the installation kit are for use in solid walls. Hollow or ‘stud partition’ walls will require alternative fixings. Please consult your local hardware supplier for the correct type.

FRANCAIS


Si vous installez le produit d’une manière différente de celle présentée dans ce manuel toutes les garanties seront invalidées. Contrôlez avant le placement si le produit répond à toutes vos exigences et n’est pas endommagé. En procédant au placement, vous acceptez l’état dans lequel se trouve le produit. Les fixations murales fournies avec le kit d’installation sont prévues pour des murs en dur. En cas de mur creux, vous devrez consulter votre magasin de bricolage afin d’utiliser un modèle adéquat.

NEDERLANDS










Indien u het product plaatst op een manier die afwijkt van deze handleiding vervalt alle garantie. Controleer voor plaatsing of het product aan al uw eisen voldoet en niet beschadigd is. Indien u overgaat tot plaatsing, aanvaardt u de staat waarin het product zich bevind. De met de installatie kit meegeleverde pluggen zijn voor gebruik in massieve muren. Niet-massieve muren muren vereisen alternatieve bevestigingen. Raadpleeg uw lokale bouwmarkt voor het juiste type.



DEUTSCH

Wenn Sie das Produkt nicht genau nach den Angaben in dieser Montageanleitung einbauen, verfällt die Garantie. Überprüfen Sie vor dem Einbau des Produkts, ob sämtliche Voraussetzungen erfüllt sind und das Produkt nicht beschädigt ist. Sobald Sie mit der Montage beginnen, sehen Sie, in welchem Zustand sich das Produkt befindet. Die mit dem Installations-Kit mitgelieferten Dübel sind für den Einsatz in festen Wänden. Nicht-feste Wände erfordern alternative Befestigungen. Bitte fragen Sie Ihren lokalen Baumarkt für den richtigen Typ.


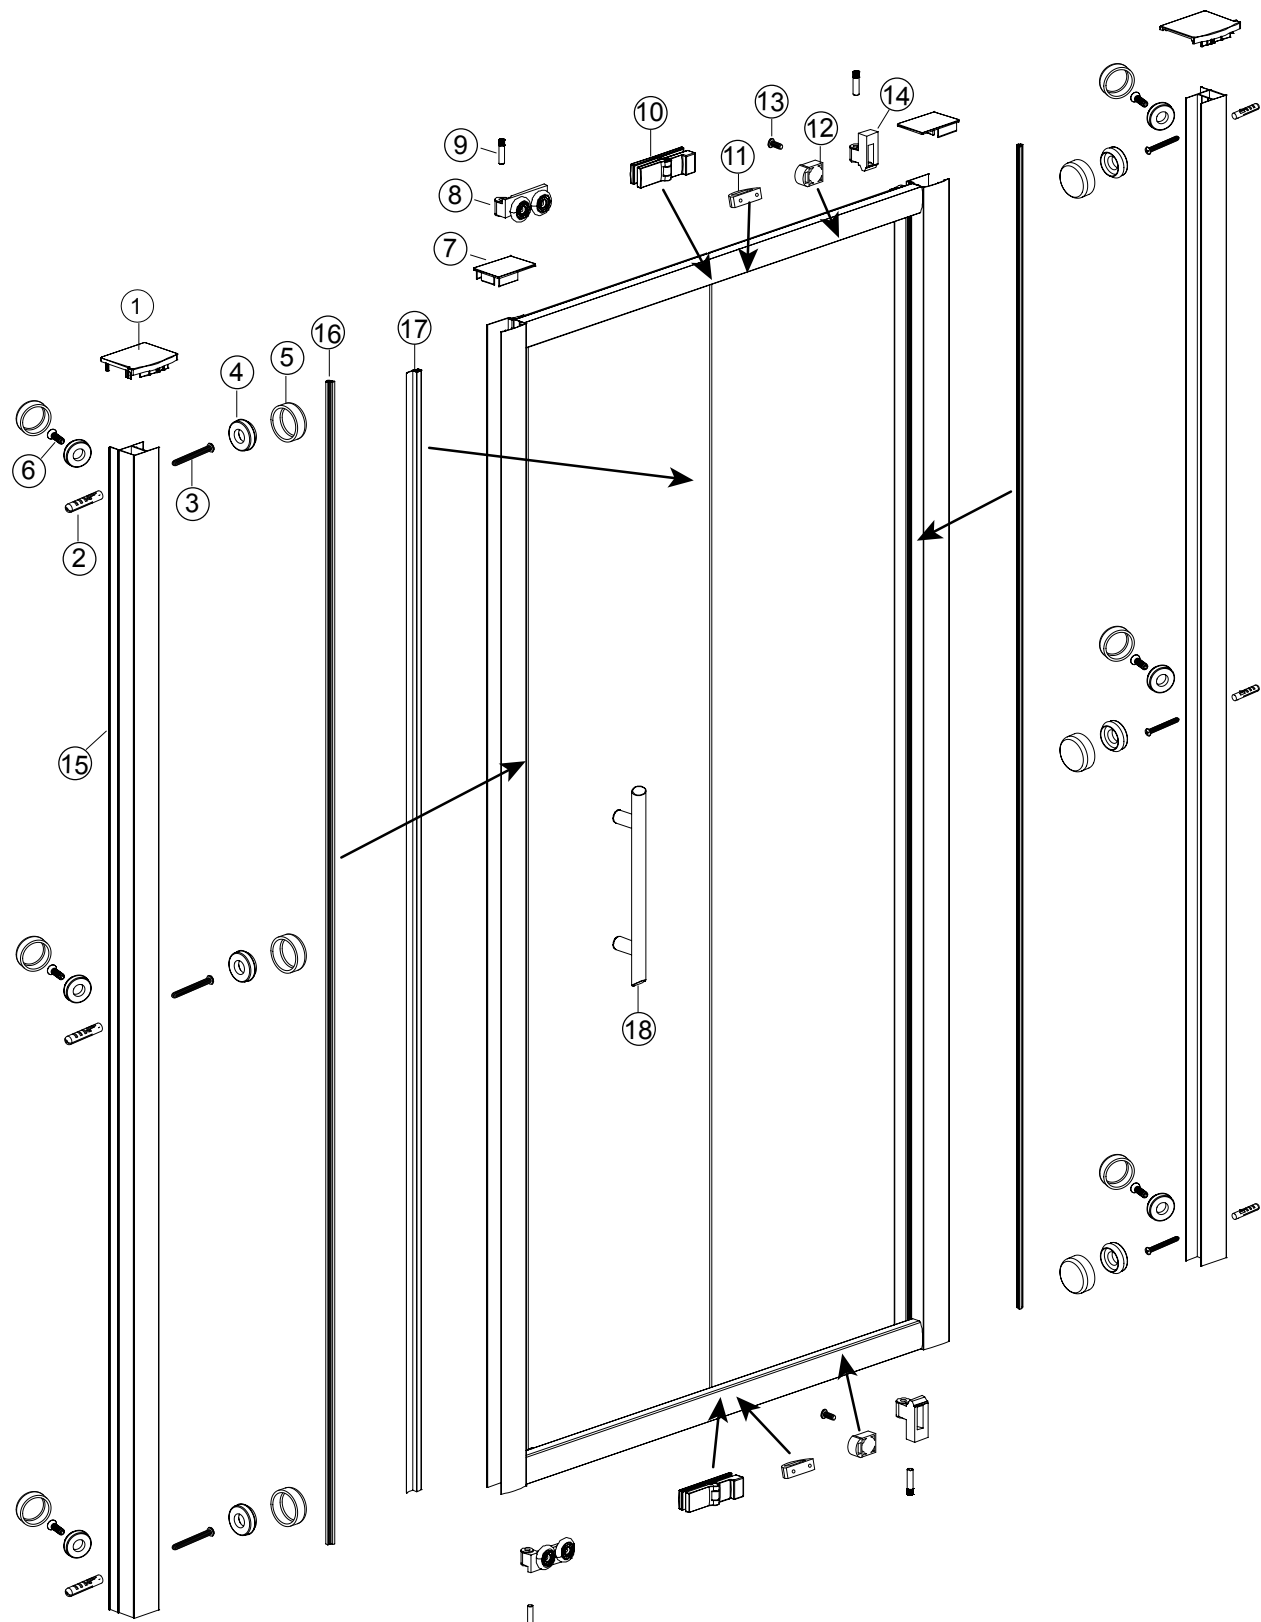


No.	QTY	Part No.	No.	QTY	Part No.	No.	QTY	Part No.
①	2	SP0S620SET	⑦	2	V2104	⑬	2	A03S0083
②	6	A03S0090	⑧	2	A03S0104	⑭	2	A03S0105
③	6	A03S0089	⑨	4	A03S0106	⑮	2	SP0S6S01
④	12	V2109	⑩	2	A03S0092	⑯	2	A03S0070
⑤	12	V2114	⑪	2	A03S0094	⑰	1	A03S0071
⑥	6	V4110	⑫	2	A03S0080	⑱	1	SP0S6HDLE

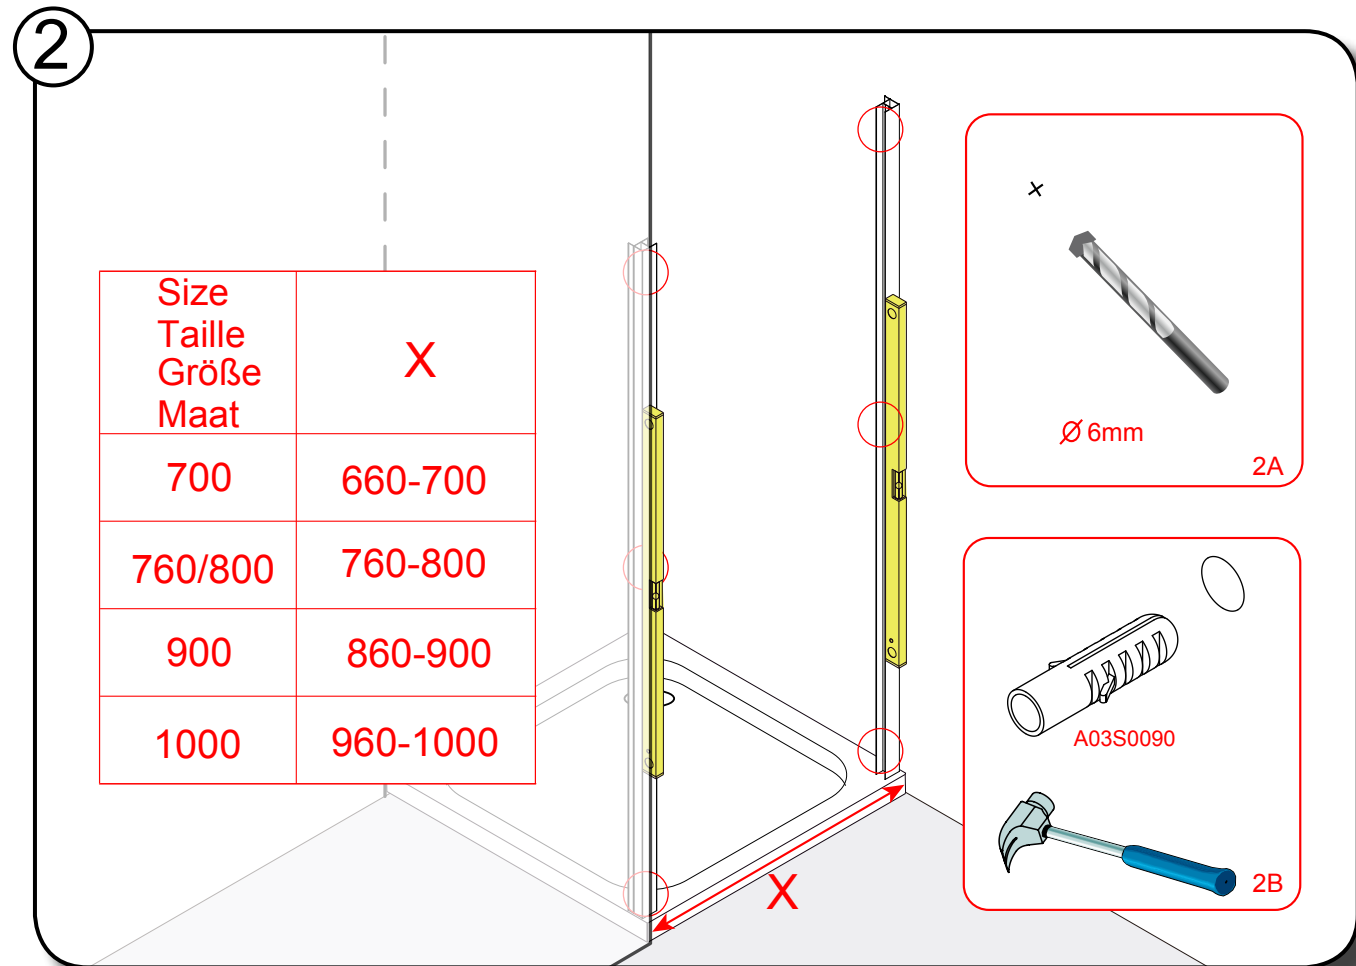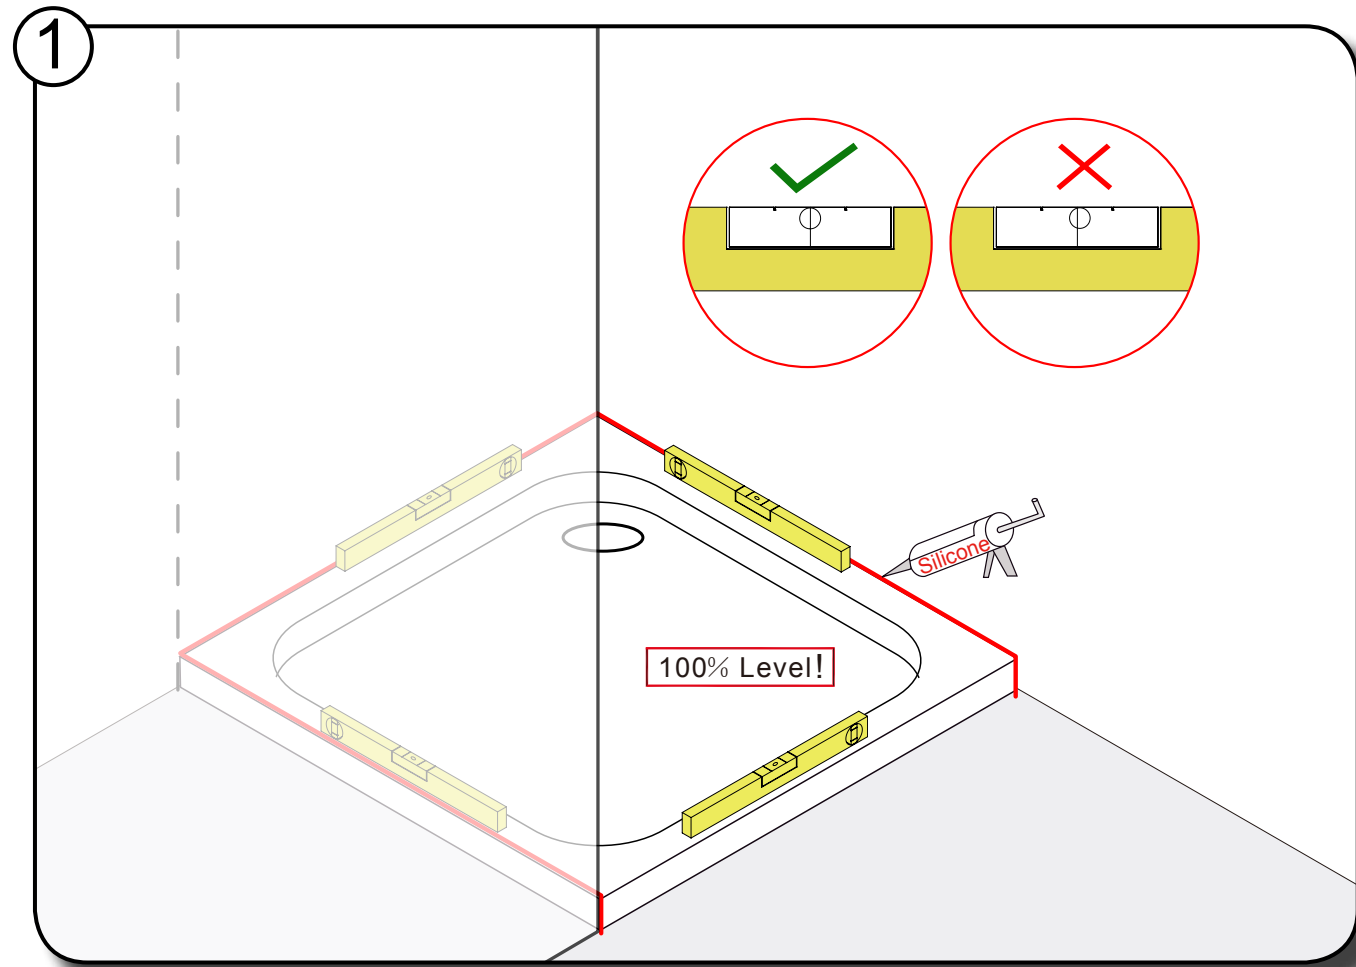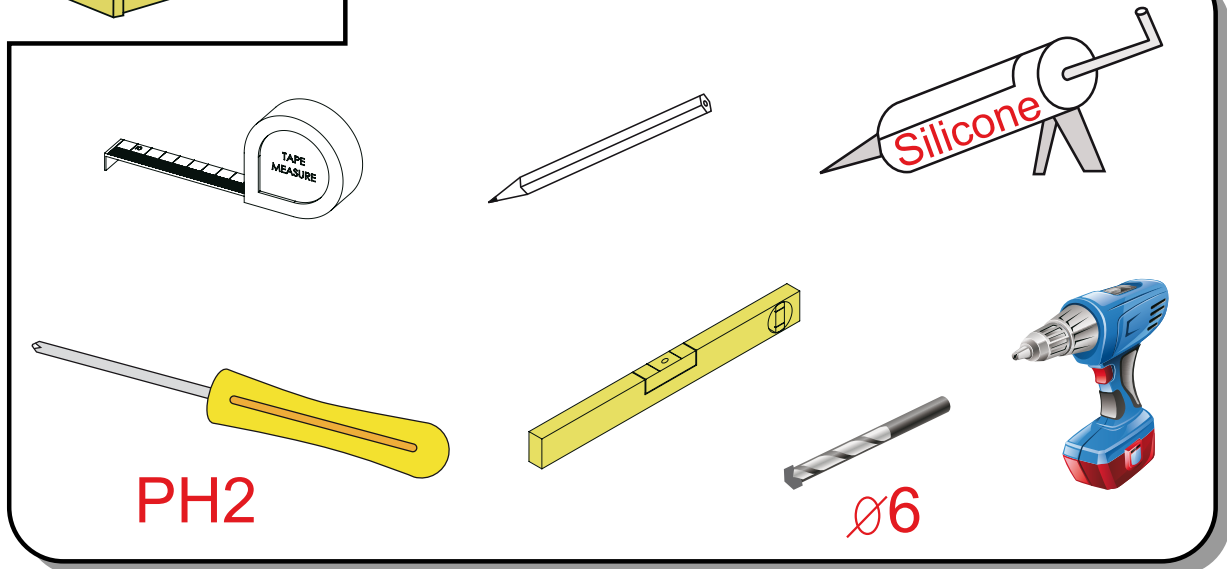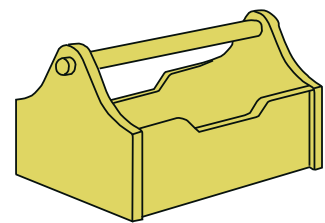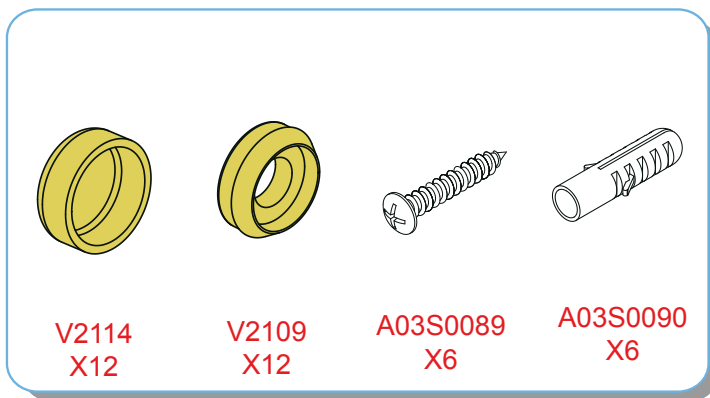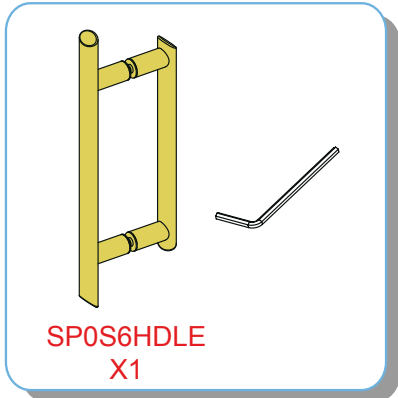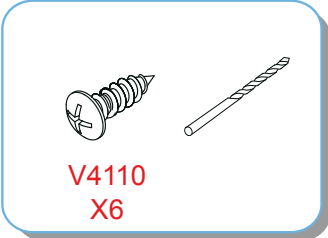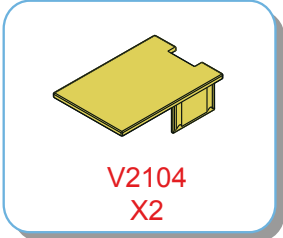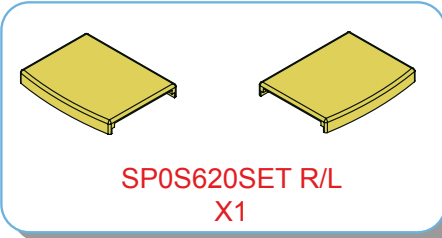

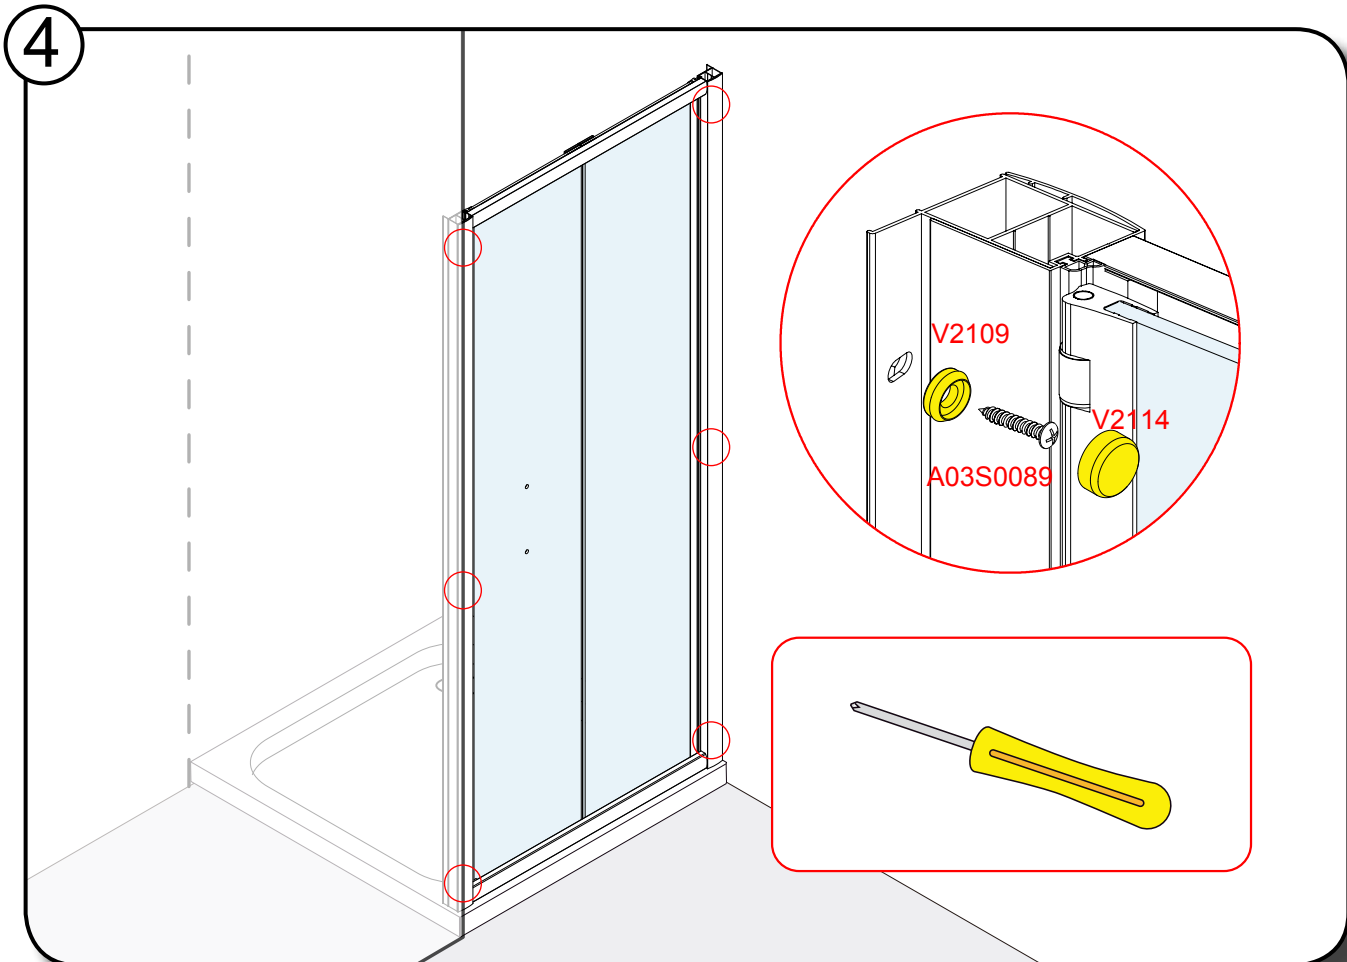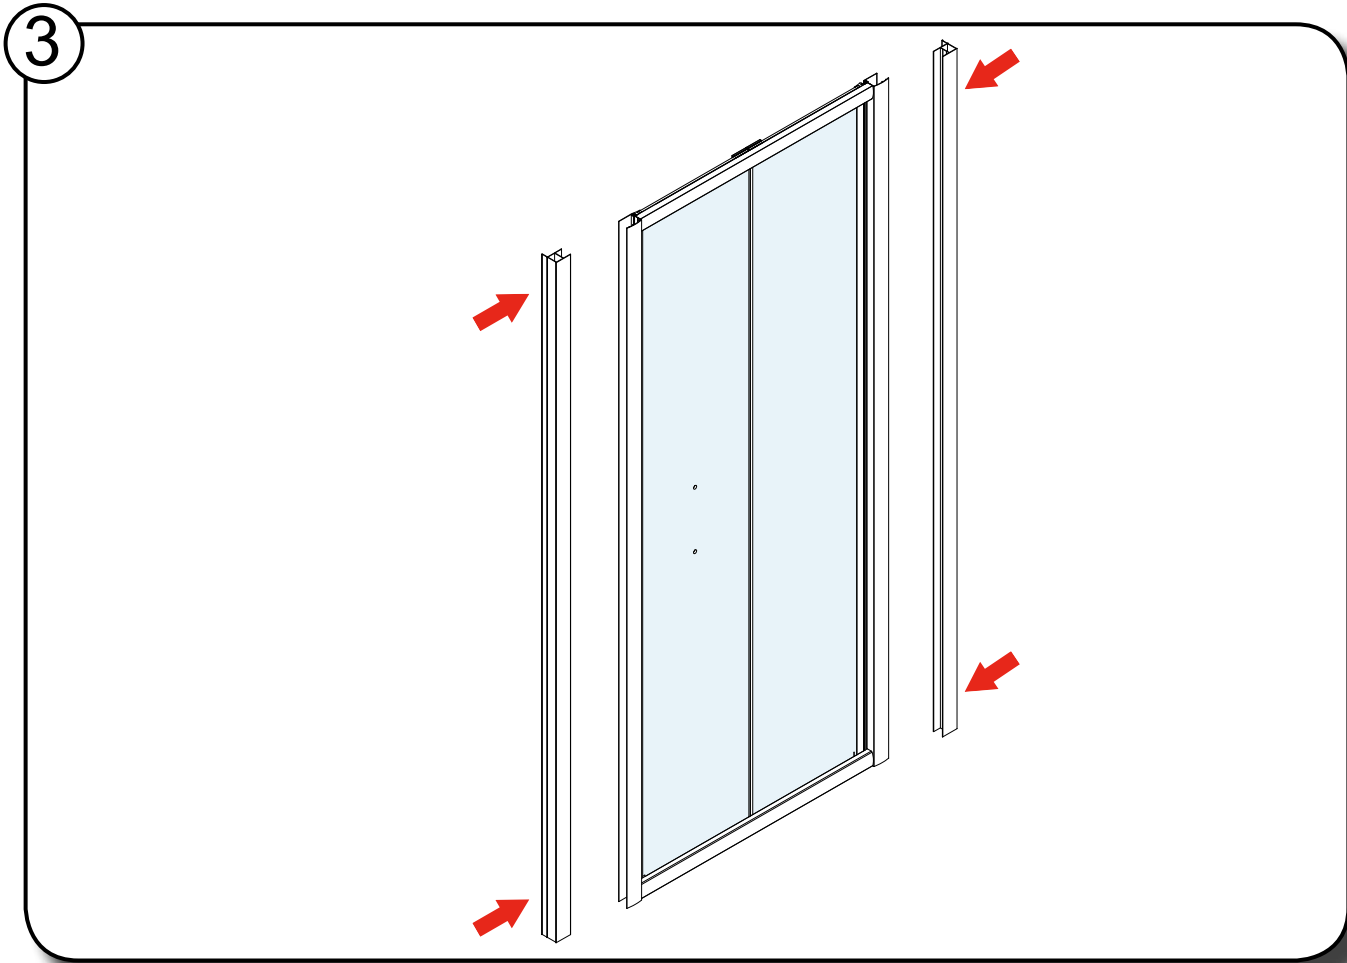

6.

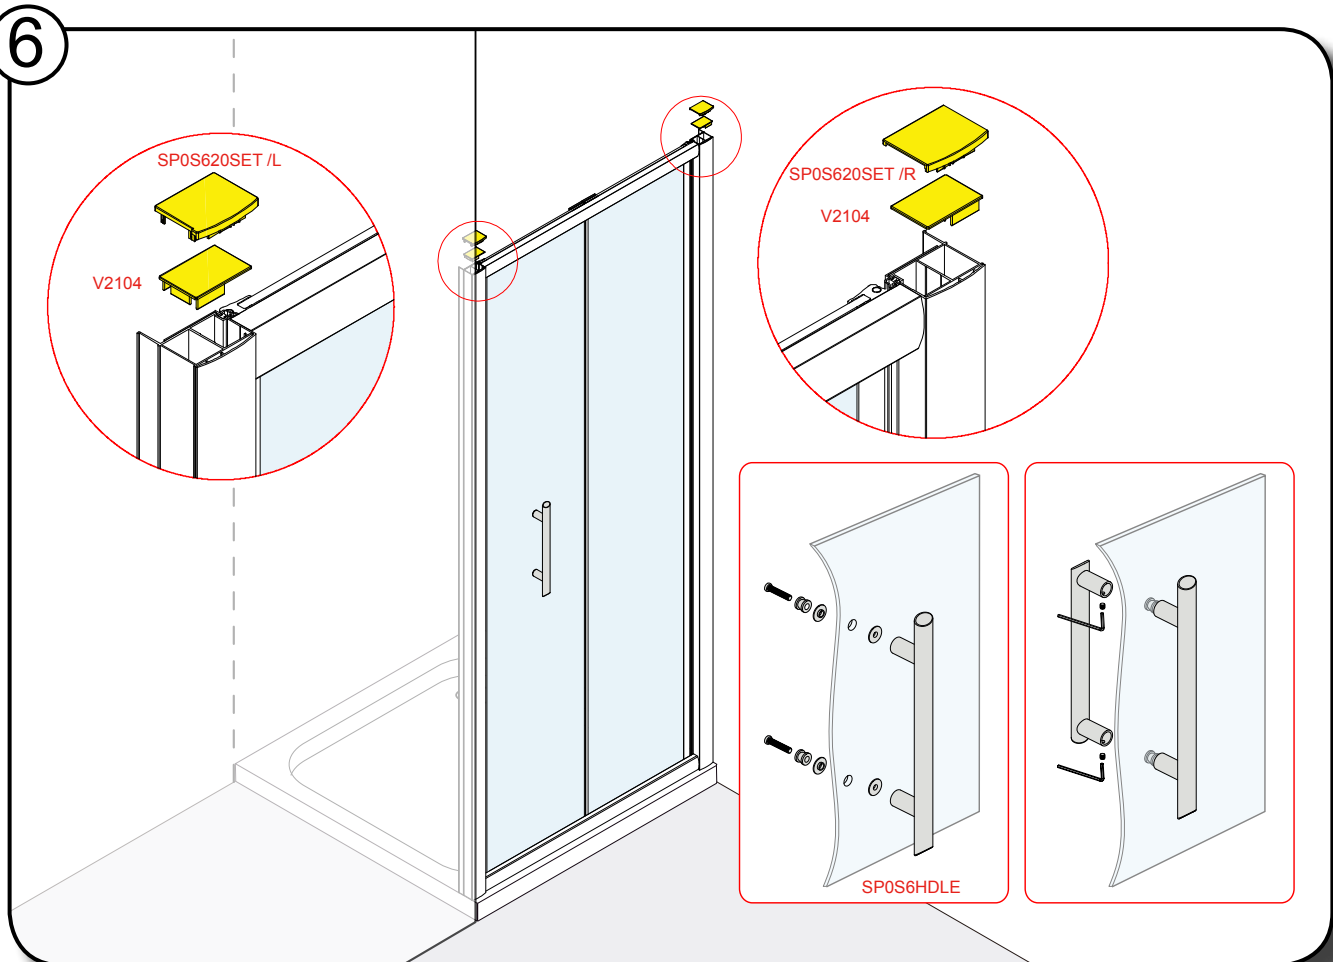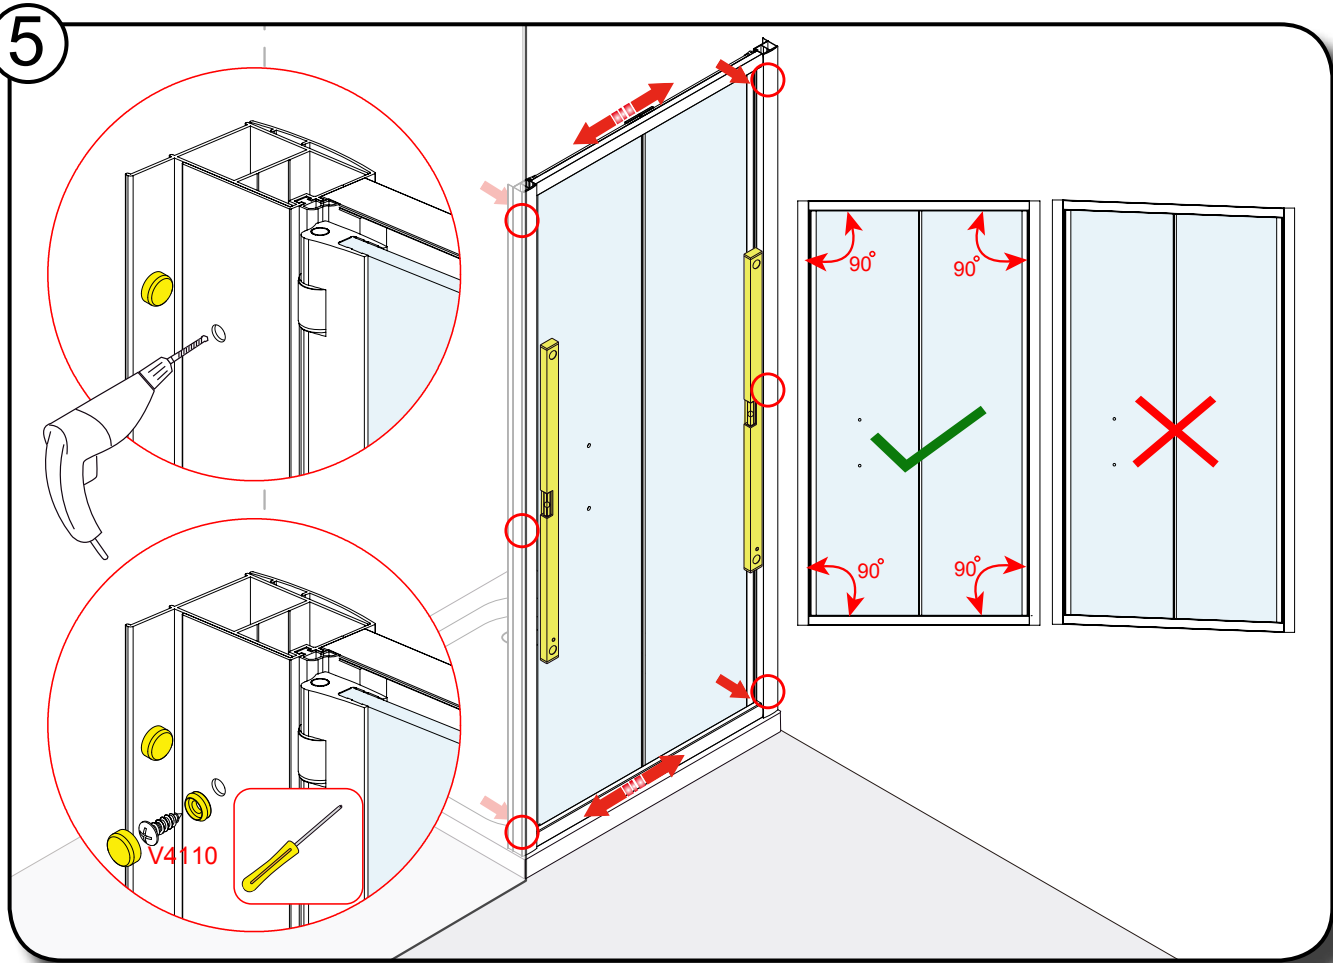

7.

SIDE PANEL



6
Series

IMPORTANT

Thank you for choosing Merlyn. Please familiarise yourself with the fitting instructions before commencing fitting.

1. Check that you have the tools required. ☐
2. Check that the installation site is compatible with size of door supplied ☐
3. Check all the enclosure components. ☐
4. Check that the installation kit is complete ☐


DO NOT attempt to install the product unless you can tick ALL 4 boxes as satisfactory.


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud-partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type.

It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING


Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting. No claims will be acceptable after product has been installed.

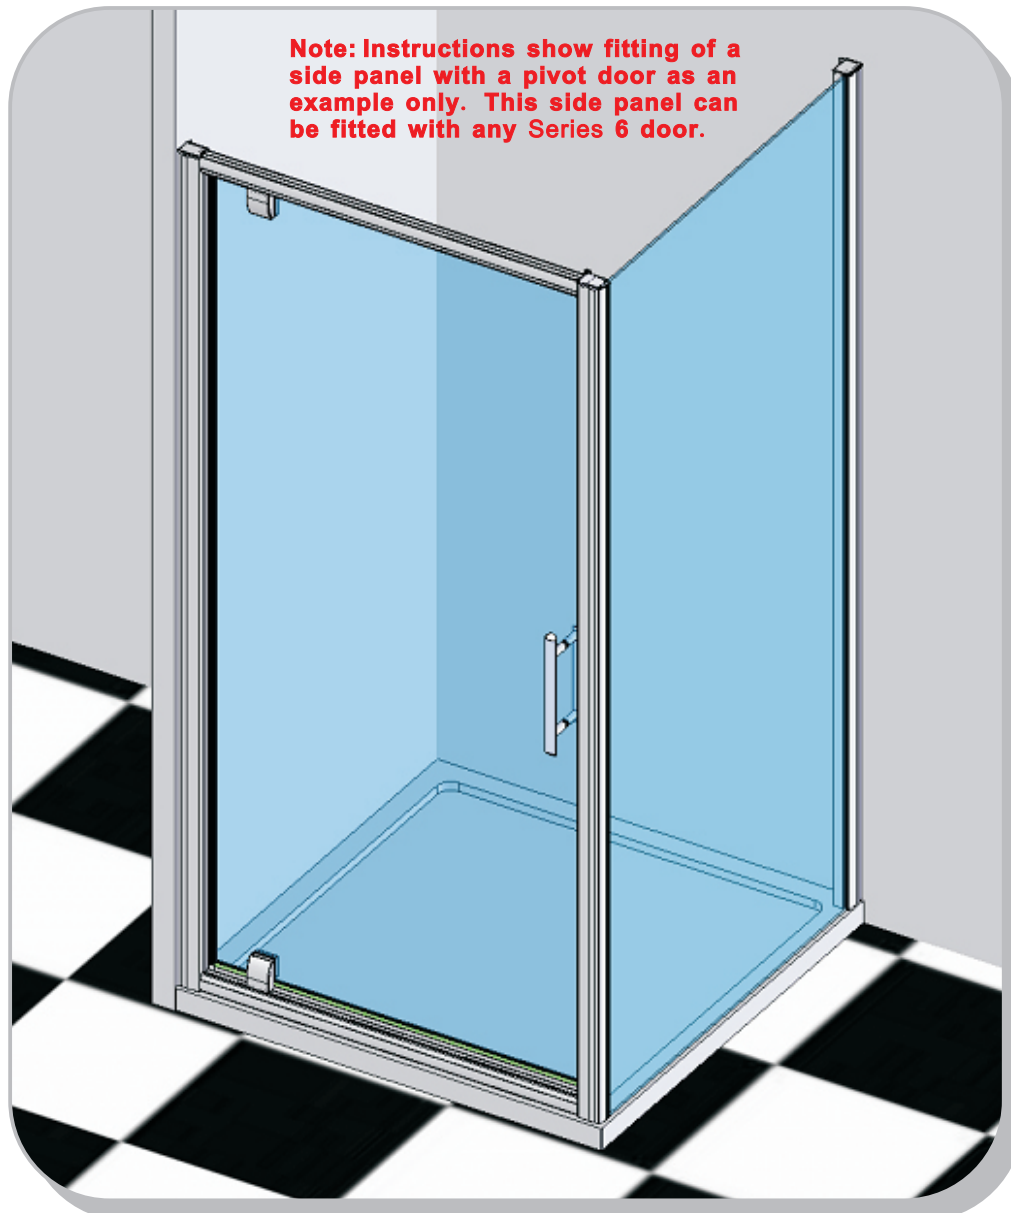

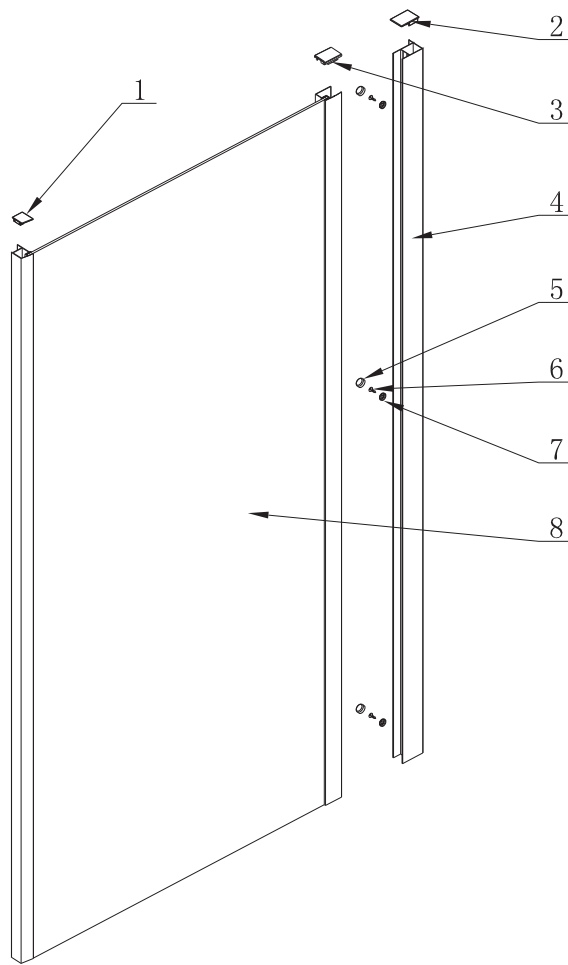


No.	Description	QTY	Part No.	No.	Description	QTY	Part No.
1	corner post cover cap	2	V2108L/R	5	Screw cover cap	3	V2109
2	Wall profile cap	1	V2104	6	Flat head ST4x12	3	V4110
3	side panel upright profile cap	2	V2103L/R	7	Screw cover cap clip	3	V2114
4	Extension profile (only for 760/800 side panel)	1	M6EXT	8	Fixed panel	1	A


Note: Further part details for fixing kit available on page 2

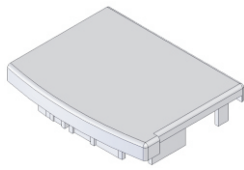


V2103R
×1

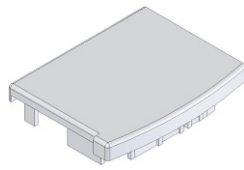

V2103L
×1

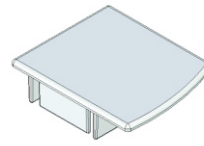

V2108L
×1

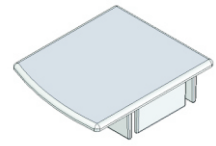

V2108R
×1



V2109
×3



V2114
×3



V4110
×3

Tools Required

- 6mm masonry drill bit
- Power drill
- Quality Silicone
- Pencil
- Tape Measure
- #2 Philips Head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation site

1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
2. The tiles or other wall finishing should be effectively sealed at the tray edges.
3. Tiles should extend at least to the corners of the tray and a minimum of 2.0 metres from the top of the tray.

PROCEDURE

TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

Note:

For installation of the pivot door, bifold door or Sliding door, please see the door instruction manual. Recommended that the pivot door is hinged from a supporting wall and not the side panel.

Step 1.



Step in wall profile (5mm for 760 size only / 20mm for all other sizes) from the front edge of the shower tray. Ensure wall profile plumb




Do not silicone behind wall profile to wall, see sealing section.

IMPORTANT: Use the extension profile M6EXT with an 800 tray only (supplied with 760/800 side panel). For other sizes use the standard wall profile supplied in the door box.

Step 2.

Mark the position for fixing the wall profile to wall.

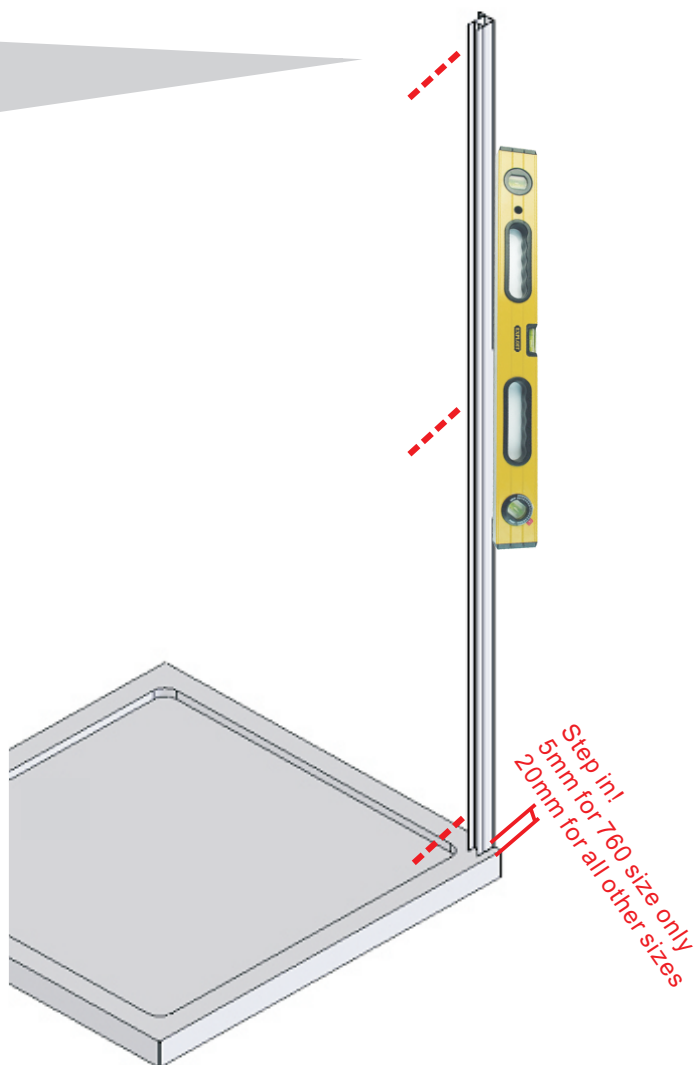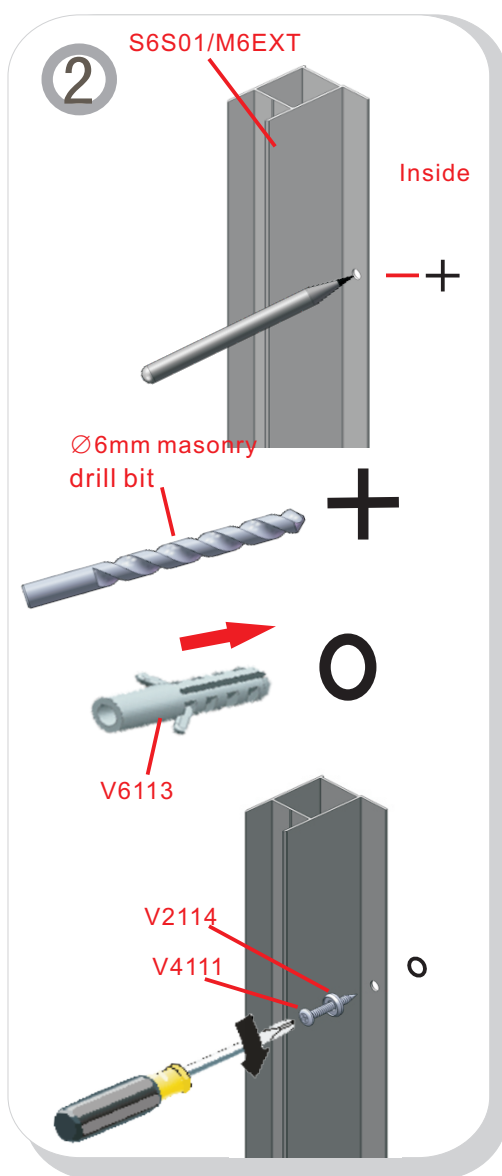

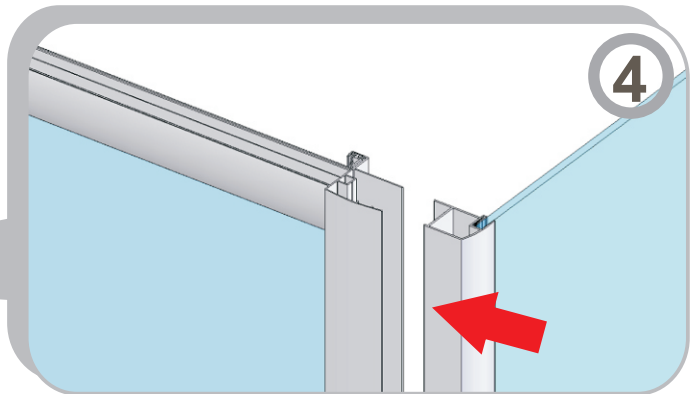
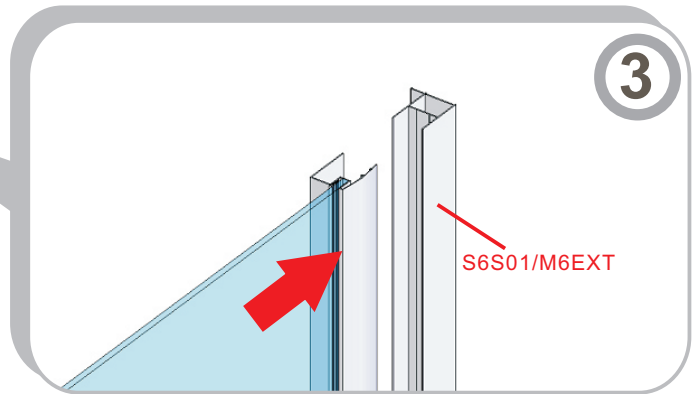
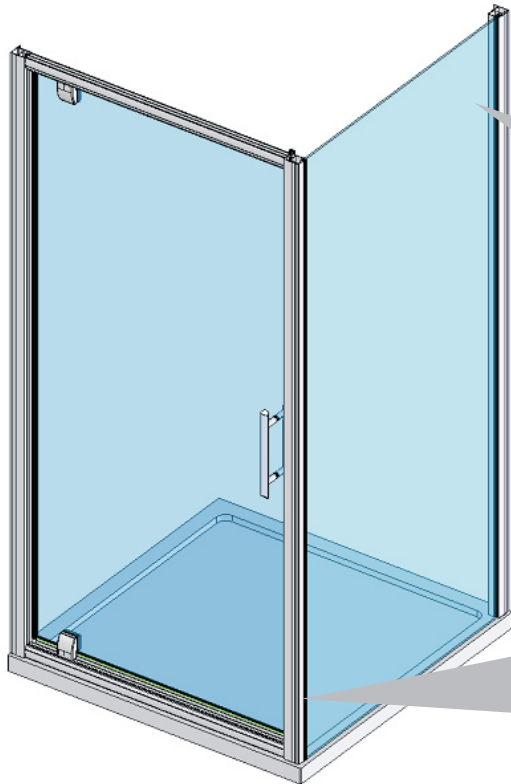




Step 3

Fit the side panel to other wall profile.

Step 4

Fit the side panel to the assembled frame.

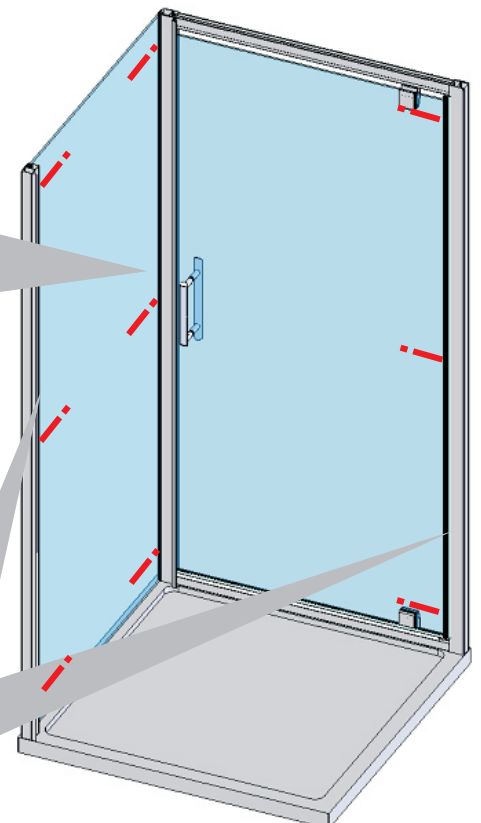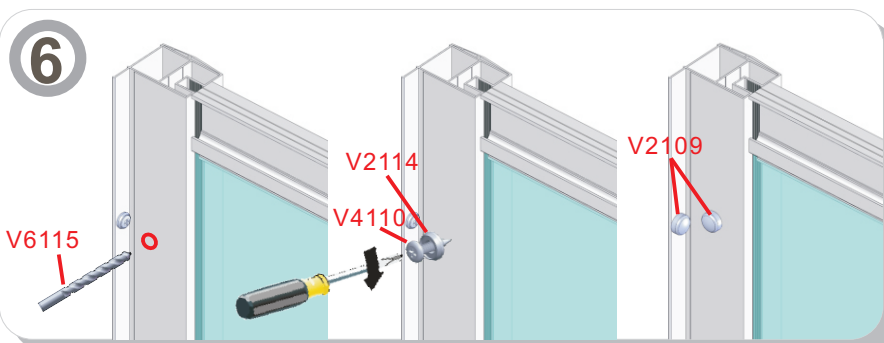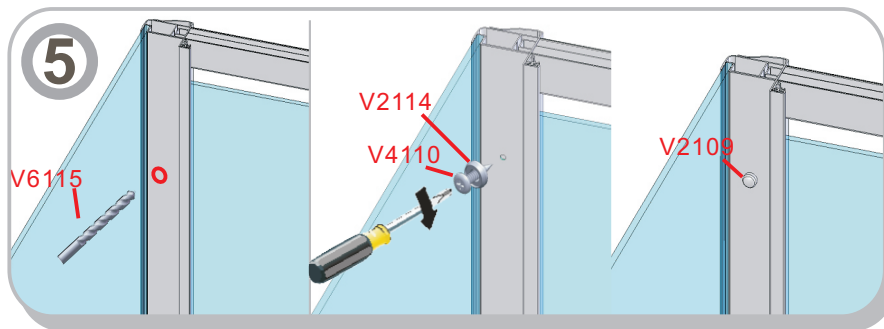

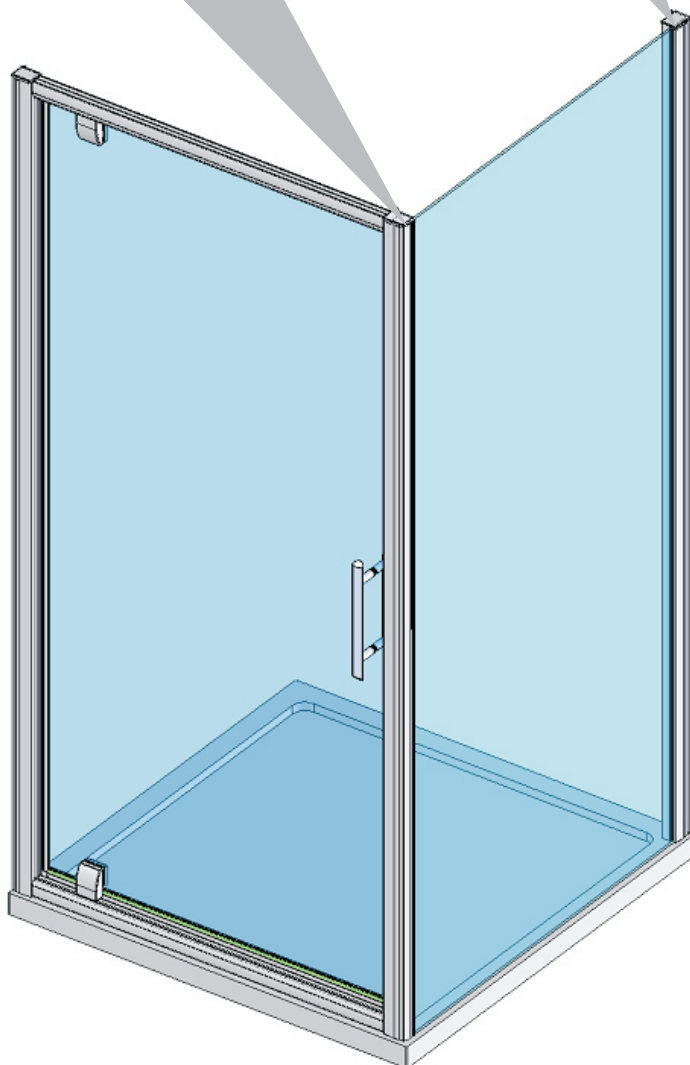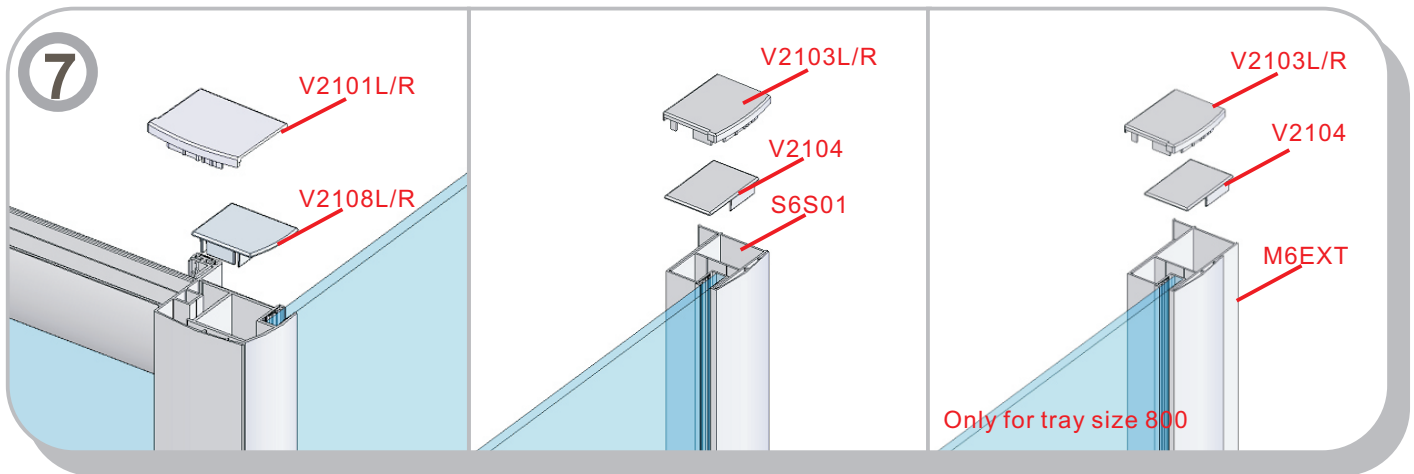

Step 7
Fit top profile cover cap.

Step 8.

Use a quality silicone sealant and applicator gun to seal the finished door.

SEALING INSIDE

Seal top to bottom on the **INSIDE** between the wall profile and the wall.


Note: Do not apply sealant on the inside of the tray.

SEALING OUTSIDE

Seal only along bottom on the **OUTSIDE** between glass/rail/profile and the tray and approx 50mm up between the wall profile and the wall. Seal joint between bottom profile and upright profile.



DO NOT use the enclosure for 24 hrs

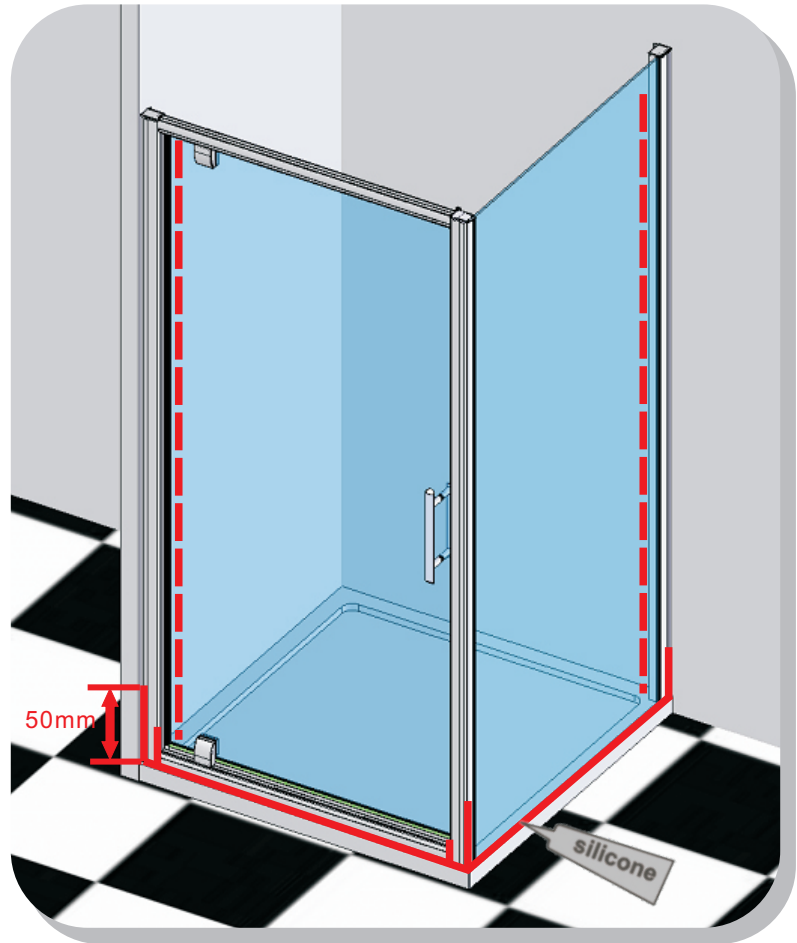

TROUBLE SHOOTING GUIDE

DOOR NOT ALIGNING

1. Is the tray 100% level? (see page 3)
2. Have the walls been checked at different levels to ensure consistency?
3. Are the fixed panel wall profiles stepped in correctly? (see step 1, page 3)
4. Do the finished tile measurements on the tray comply with the adjustment listed on the label and in the specifications book?
5. Is the door sealed correctly? (see step 8)