


SLIDING DOOR

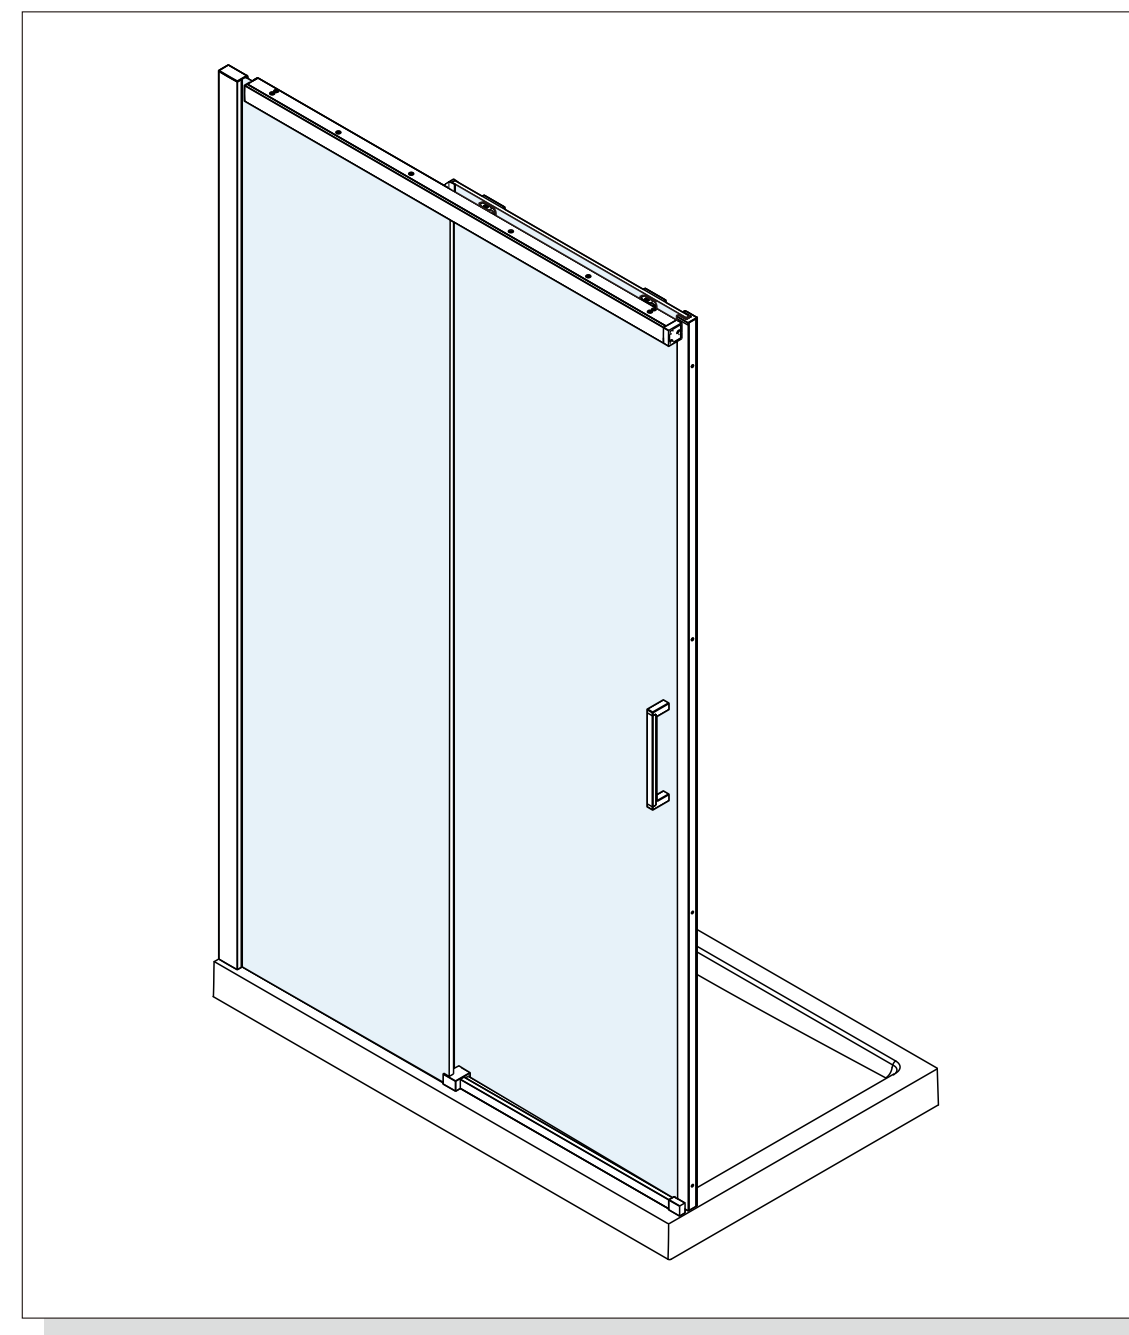

For further information please contact:
Pour plus d'informations, contacter s'il vous plaît:
Für weitere Informationen kontaktieren Sie bitte:
Voor meer informatie, neem contact op met:

www.merlynshowering.com

IRL:0567791555

UK:08081011429

FR:0800916586

INSTALLATION GUIDE

Guide d'installation installationsanleitung installatiehandleiding

ENGLISH

If you install the product in a way that differs from this manual this will void all guarantees. Before installation check that the product meets all your requirements and is not damaged. By proceeding with installation, you accept the condition of the product. the wall plugs supplied with the installation kit are for use in solid walls .Hollow or‘stud partition’ walls will require alternative fixings. Please consult your local hardware supplier for the correct type.

FRANCAIS


Si vous installez le produit d’une manière différente de celle présentée dans ce manuel toutes les garanties seront invalidées. Contrôlez avant le placement si le produit répond à toutes vos exigences et n’est pas endommagé. En procédant au placement, vous acceptez l’état dans lequel se trouve le produit. Les fixations murales fournies avec le kit d’installation sont prévues pour des murs en dur.En cas de mur creux, vous devrez consulter votre magasin de bricolage afin d’utiliser un modèle adéquat.

NEDERLANDS

























Indien u het product plaatst op een manier die afwijkt van deze handleiding vervalt alle garantie. Controleer voor plaatsing of het product aan al uw eisen voldoet en niet beschadigd is. Indien u overgaat tot plaatsing, aanvaardt u de staat waarin het product zich bevind. De met de installatie kit meegeleverde pluggen zijn voor gebruik in massieve muren. Niet-massieve muren muren vereisen alternatieve bevestigingen.Raadpleeg uw lokale bouwmarkt voor het juiste type.

DEUTSCH

Wenn Sie das Produkt nicht genau nach den Angaben in dieser Montageanleitung einbauen, verfällt die Garantie. Überprüfen Sie vor dem Einbau des Produkts, ob sämtliche Voraussetzungen erfüllt sind und das Produkt nicht beschädigt ist. Sobald Sie mit der Montage beginnen,sehen Sie, in welchem Zustand sich das Produkt befindet. Die mit dem installations-kit mitgelieferten Dübel sind für den Einsatz in festen Wänden. Nicht-feste Wände erfordern alternative Befestigungen,Bitte fragen Sie Ihren lokalen Baumarkt für den richtigen Typ.

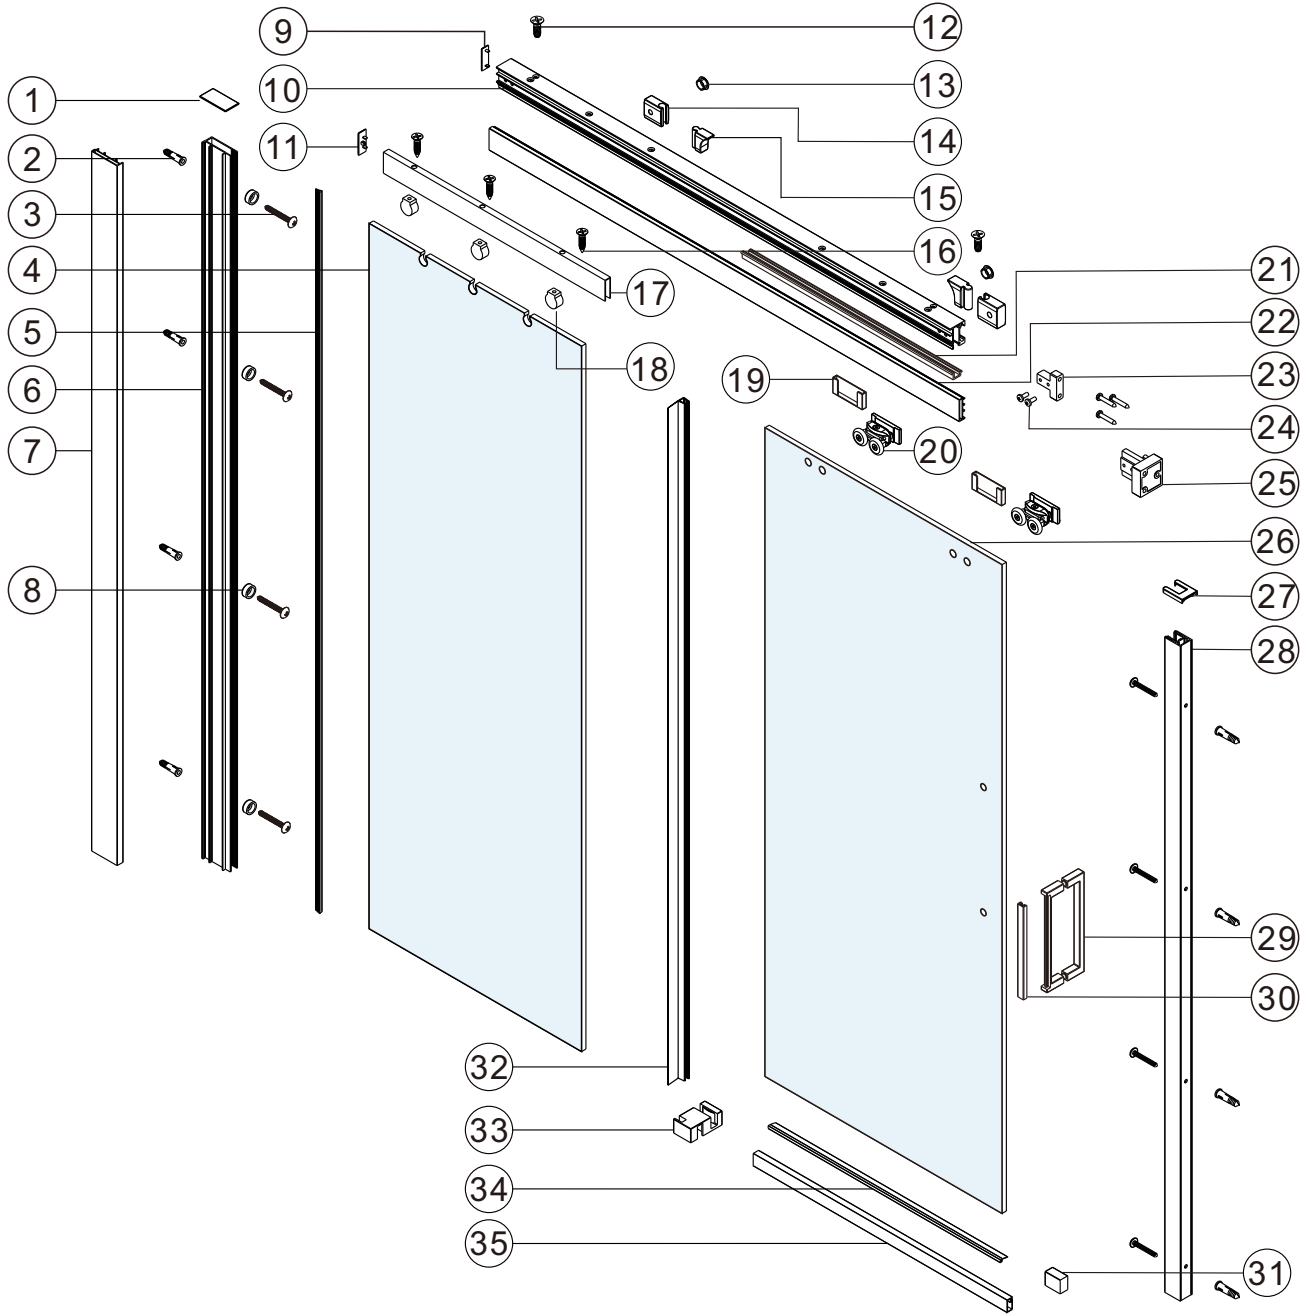



No.	Qty	Part No.	No.	Qty	Part No.	No.	Qty	Part No.
①	1	A09S0030/A09S0031 A09S0032/A09S0033	⑭	2	A01S0138	⑳	1	A09S0026/A09S0027 A09S0028/A09S0029
②	11	8SSJ066	⑮	2	A01S0139	㉑	1	A01S0114
③	11	8S410044	⑯	3	A09S0051	㉒	1	A09S0008
④	1	A	⑰	1	A09S0016/A09S0017	㉓	1	A09S0022/A09S0023 A09S0024/A09S0025
⑤	1	A09S0054	⑱	5	A09S0009	㉔	1	A09S0011
⑥	1	A09S0003	㉒	2	A09S0010	㉕	1	A09S0015
⑦	1	B	㉓	2	A09S0053	㉖	1	A09S0013/A09S0014
⑧	4	8S110037	㉔	1	A09S0006/A09S0007	㉗	1	A09S0018
⑨	1	A09S0038/A09S0039 A09S0040/A09S0041	㉕	1	C	㉘	1	A09S0004/A09S0005
⑩	1	A09S0001/A09S0002	㉖	1	A09S0012			
⑪	1	A09S0034/A09S0035 A09S0036/A09S0037	㉗	2	A09S0050			
⑫	2	A09S0055	㉘	1	A09S0042/A09S0043 A09S0044/A09S0045			
⑬	2	A01S0140	㉙	1	D			

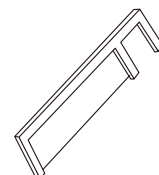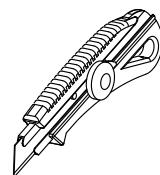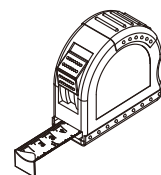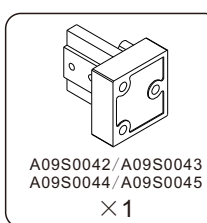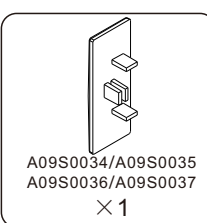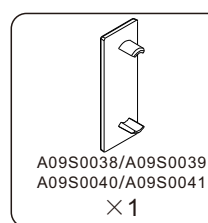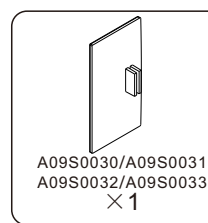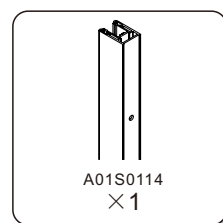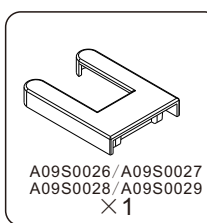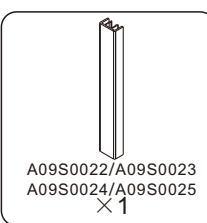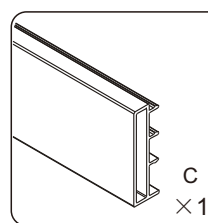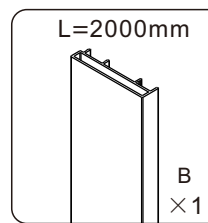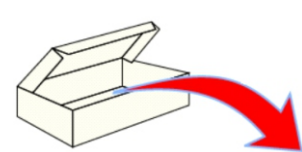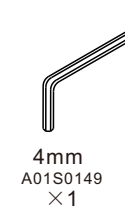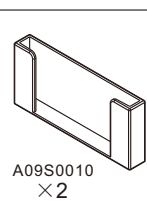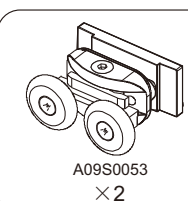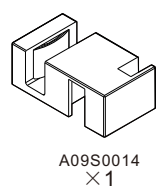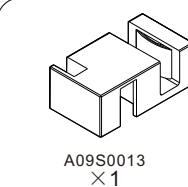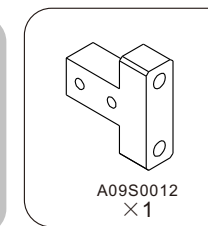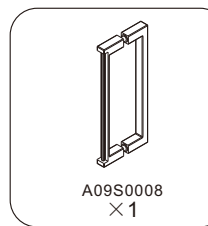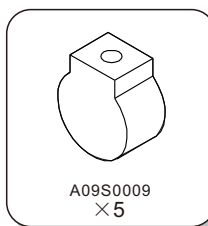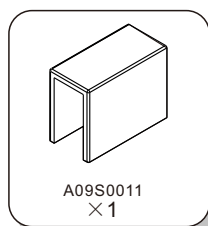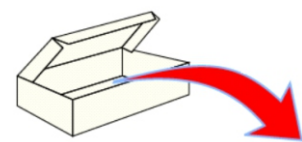


PH2

6mm

1

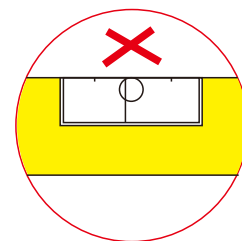
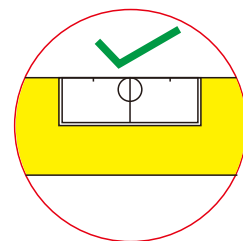


100%Level!!



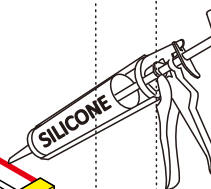


2

Size Taille Größe Maat	X
1000	950-990
1100	1050-1090
1200	1150-1190
1300	1250-1290
1400	1350-1390
1500	1450-1490
1600	1550-1590
1700	1650-1690

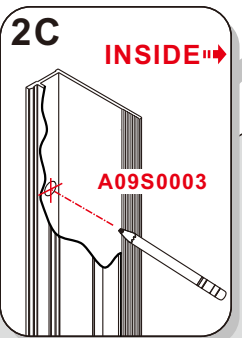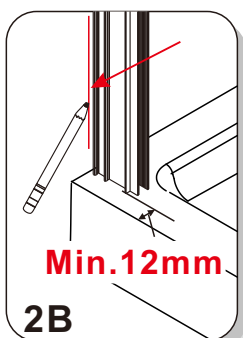


2A

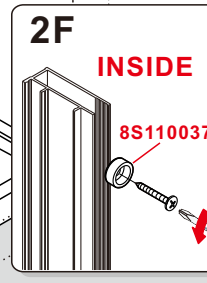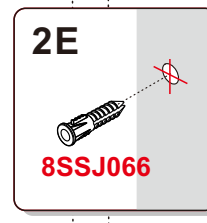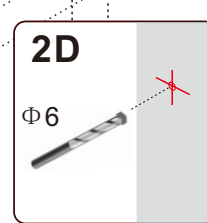


3

3A




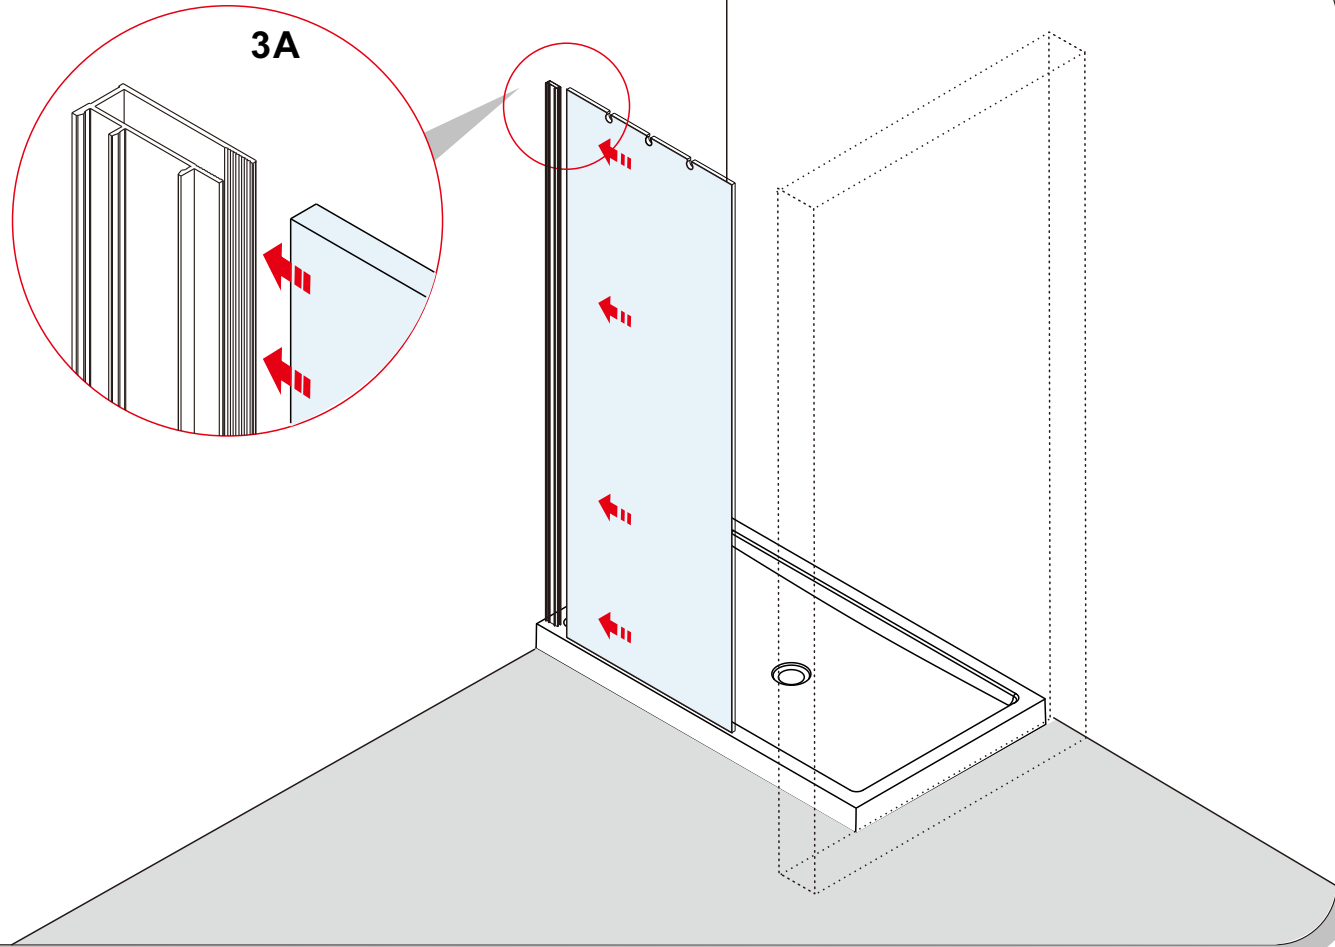


4

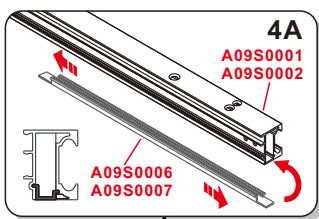

Size Taille Größe Maat	X
1000	950-975
1100	1050-1075
1200	1150-1175
1300	1250-1275
1400	1350-1375
1500	1450-1475
1600	1550-1575
1700	1650-1675


Size Taille Größe Maat	X
1000	975-990
1100	1075-1090
1200	1175-1190
1300	1275-1290
1400	1375-1390
1500	1475-1490
1600	1575-1590
1700	1675-1690

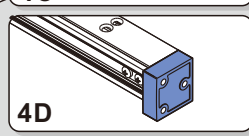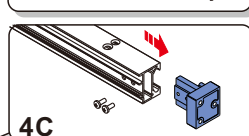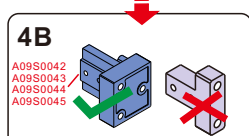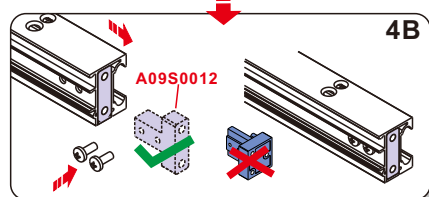


5.

5

5A

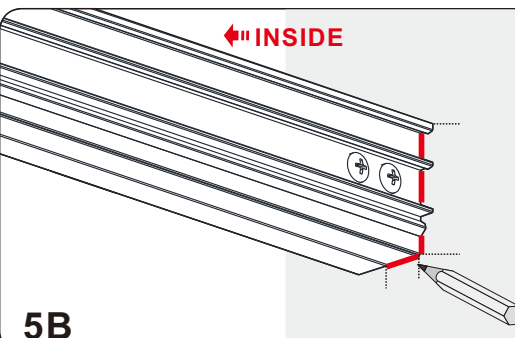


5B

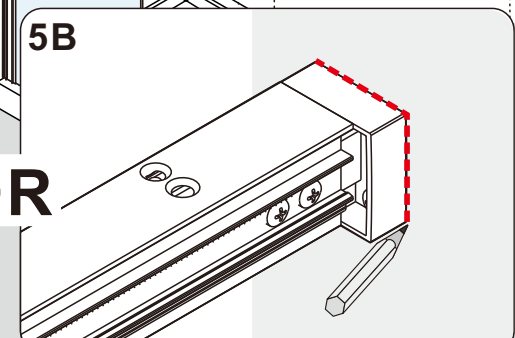


OR

6

6A

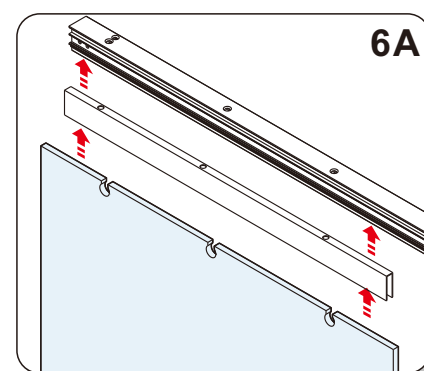


6B

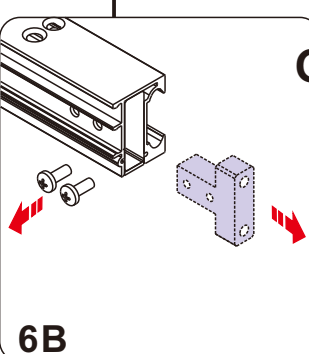


OR

6B

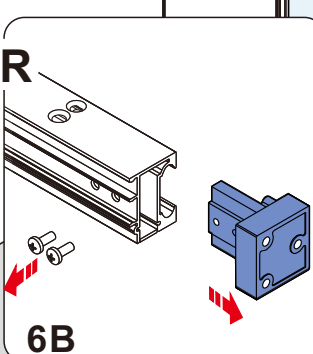


6C

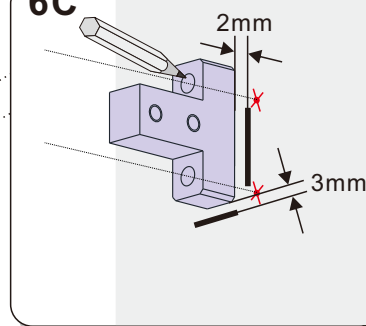





OR

6C


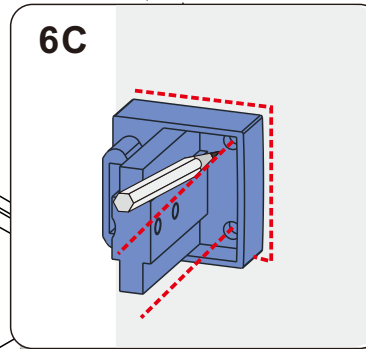


6.



7

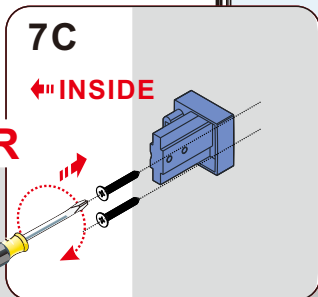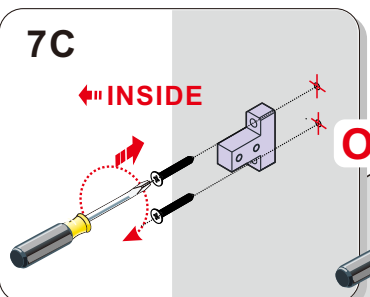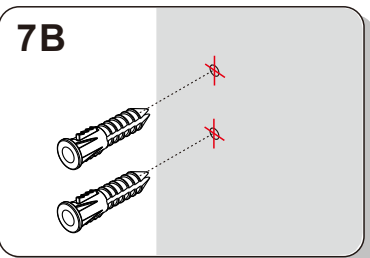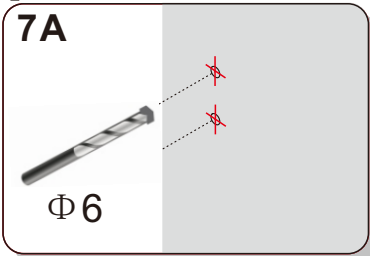




OR

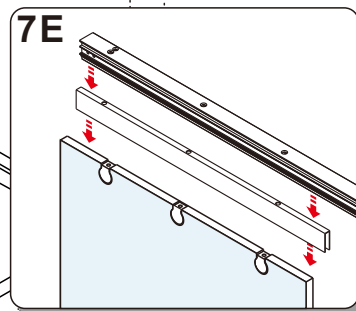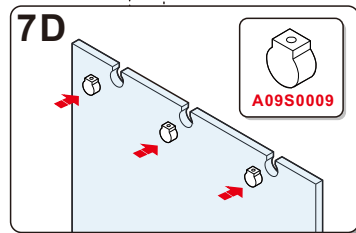




8

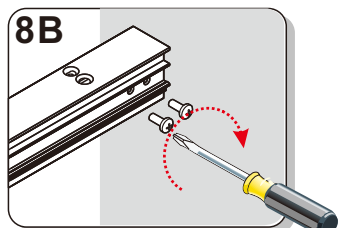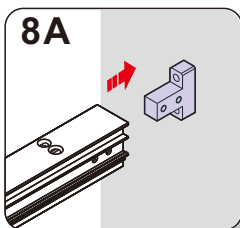




OR


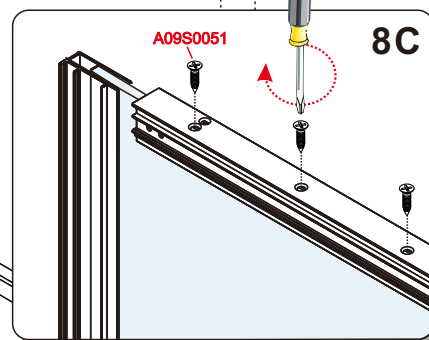
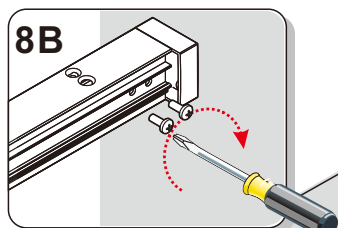
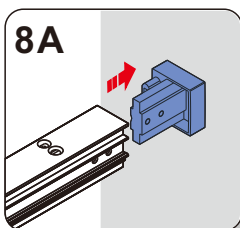


9

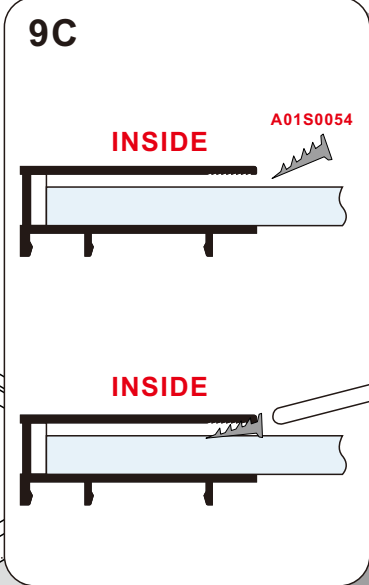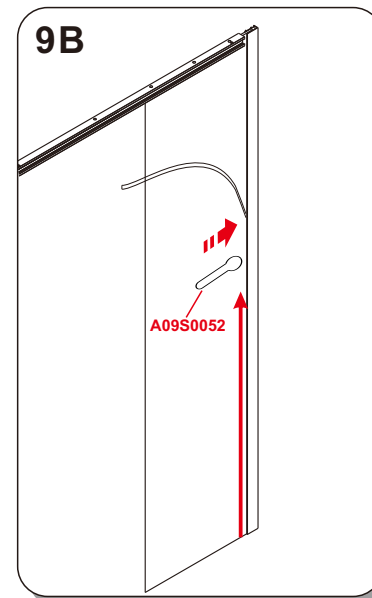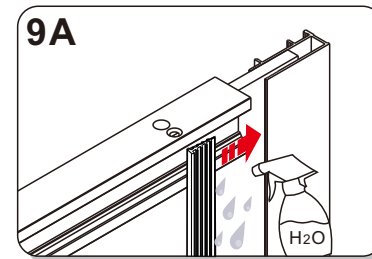


10

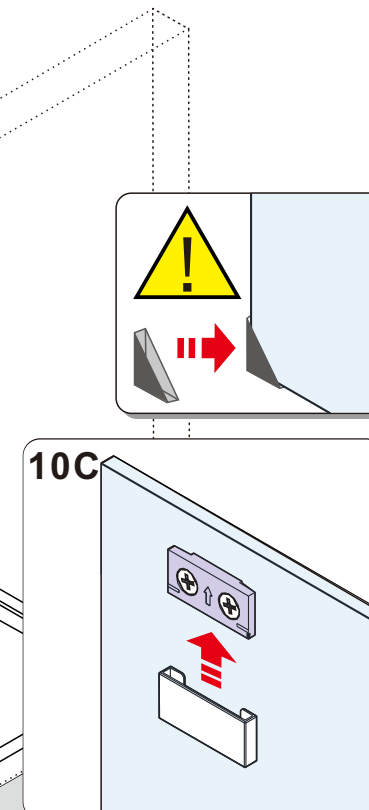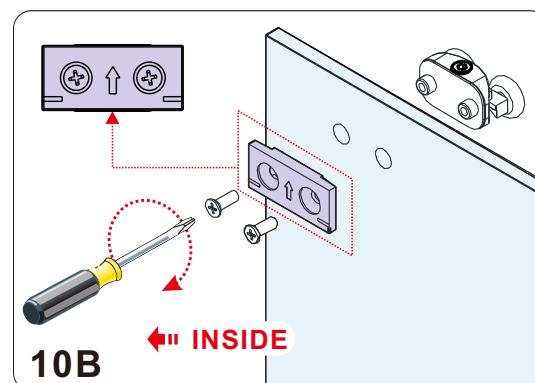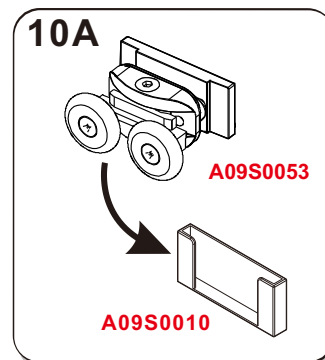


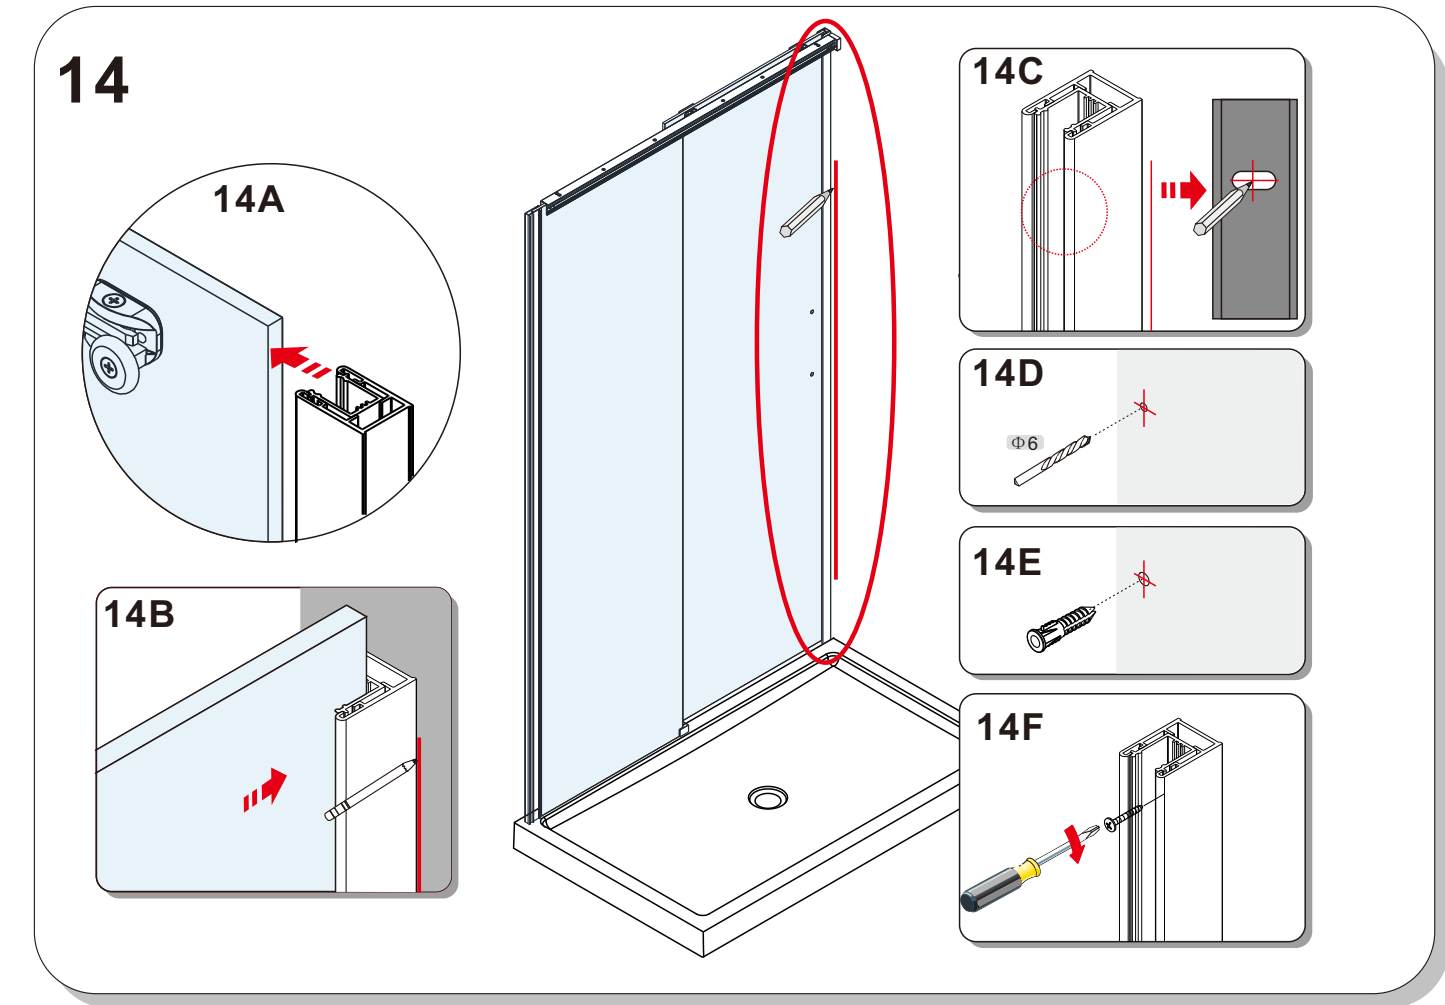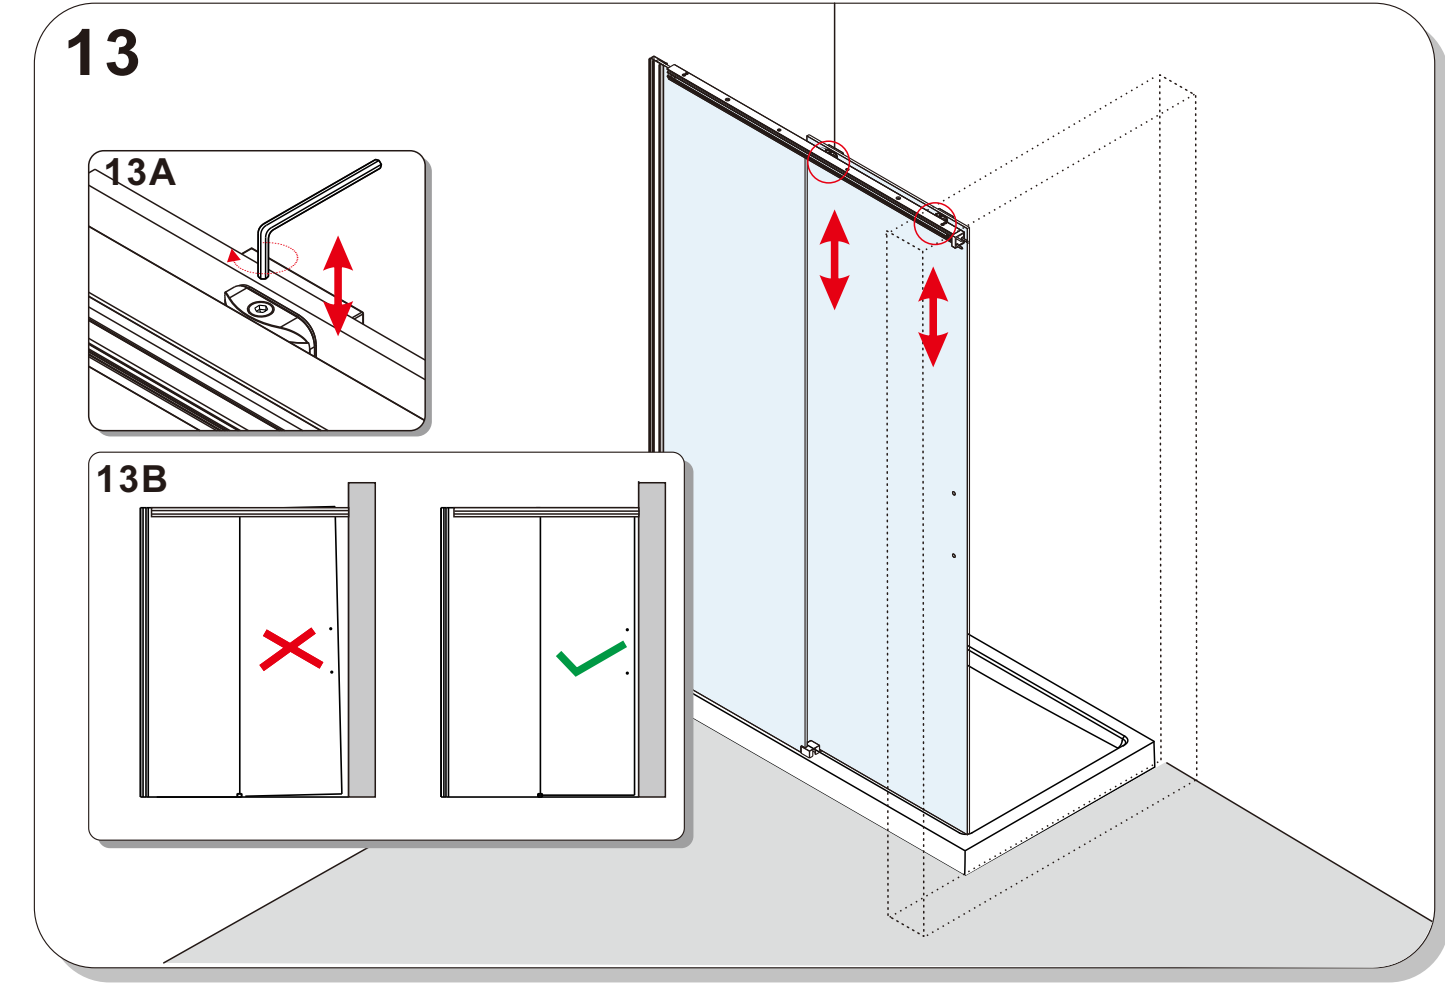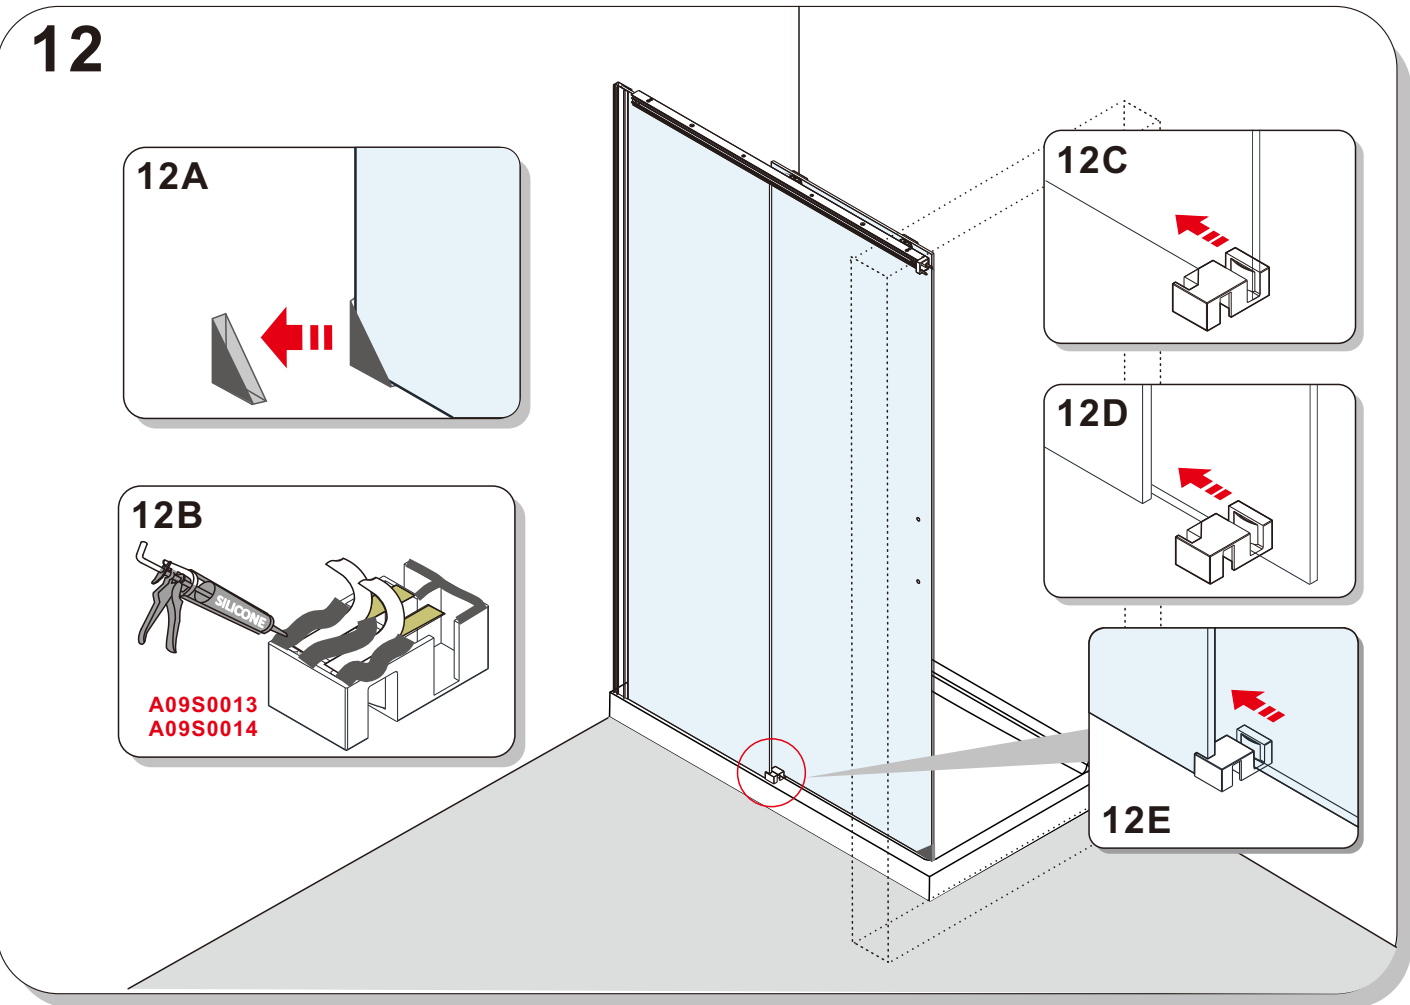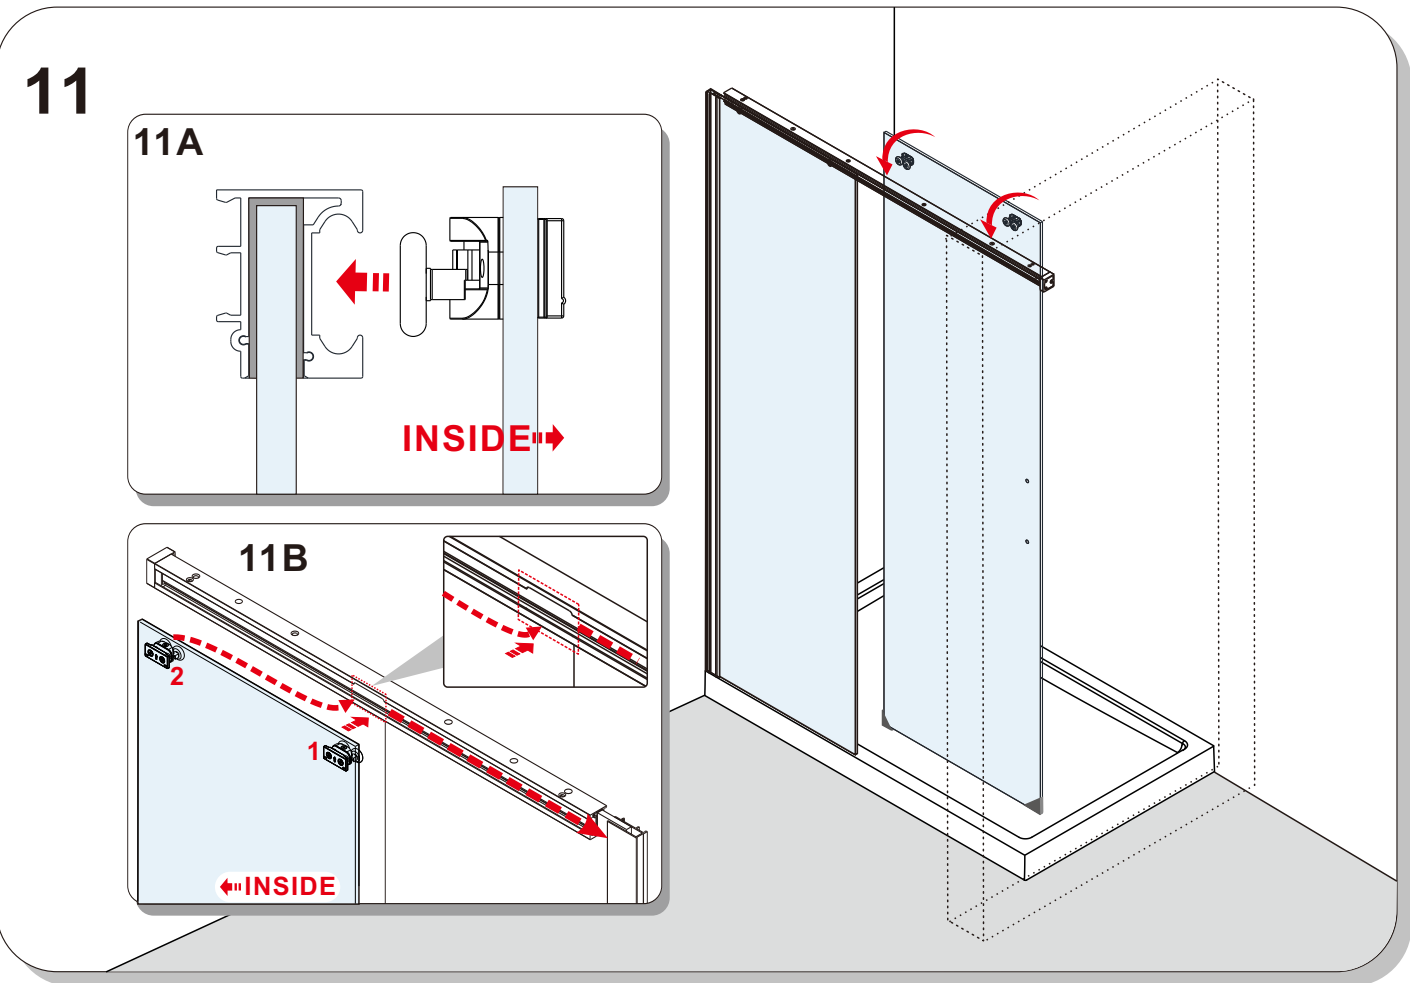


15

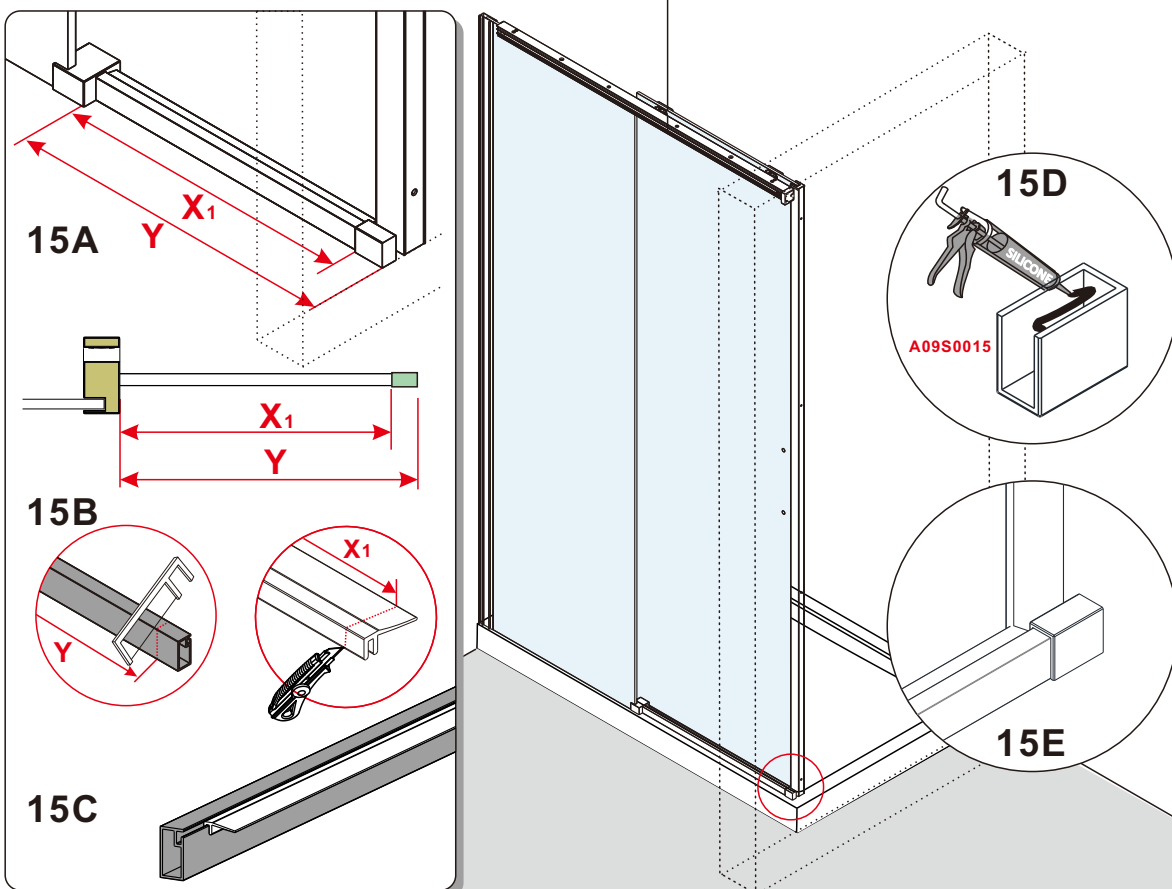


16

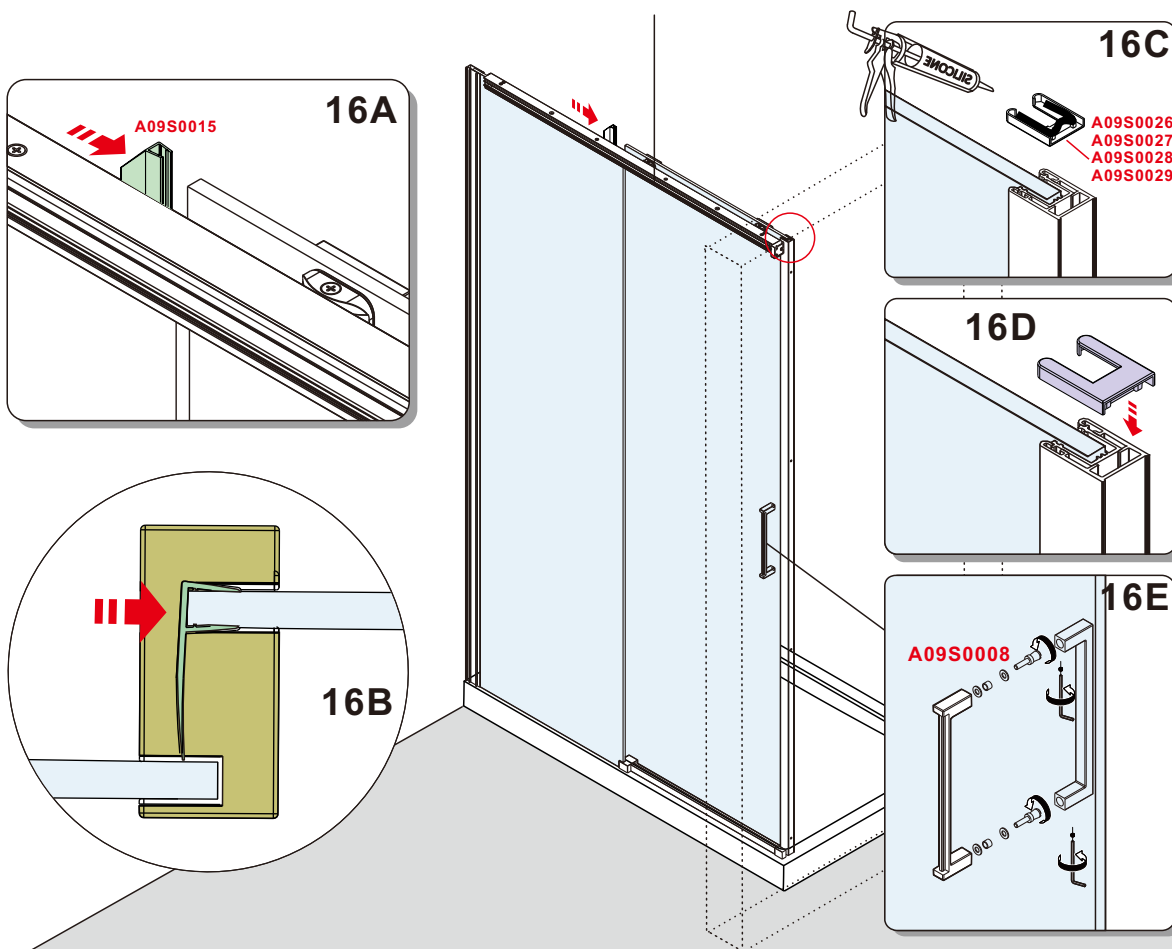

17

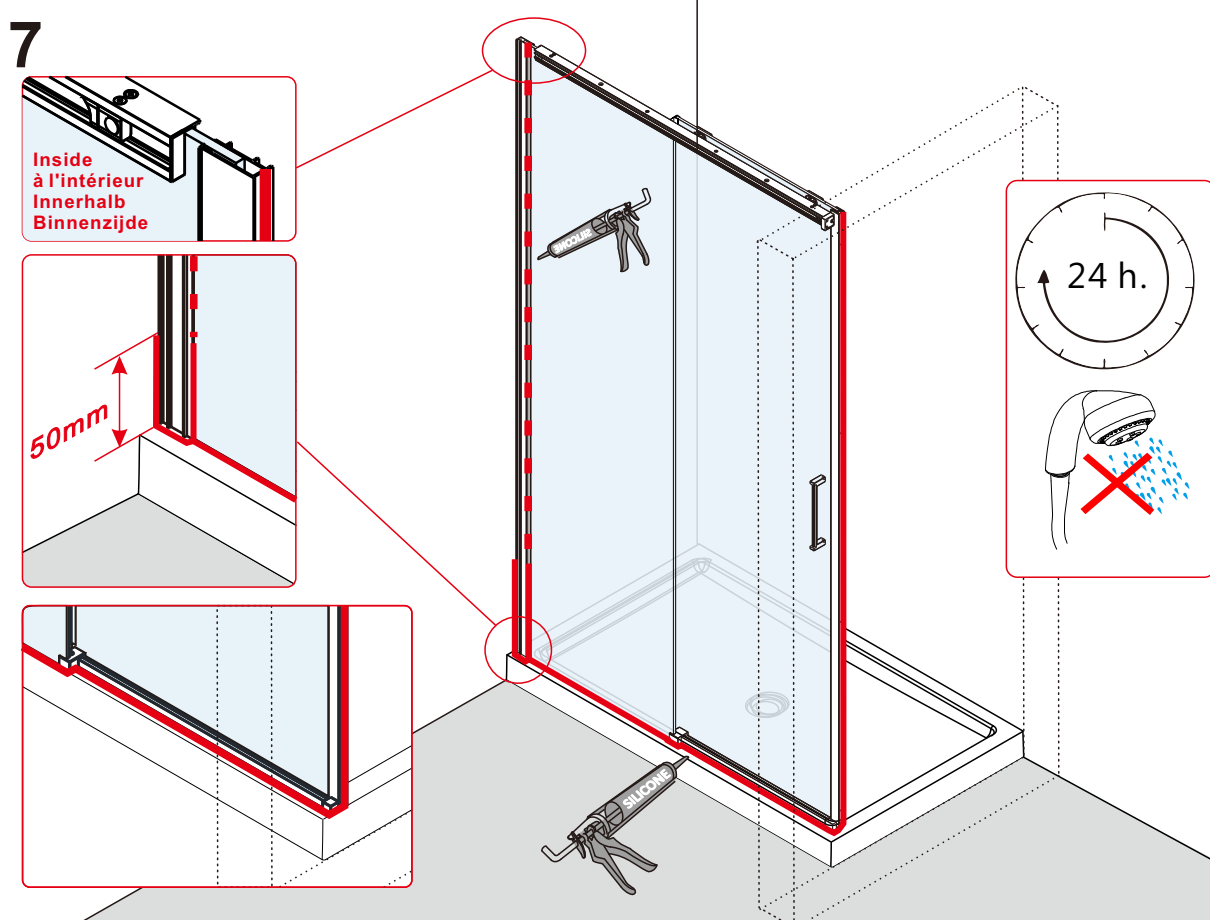

18

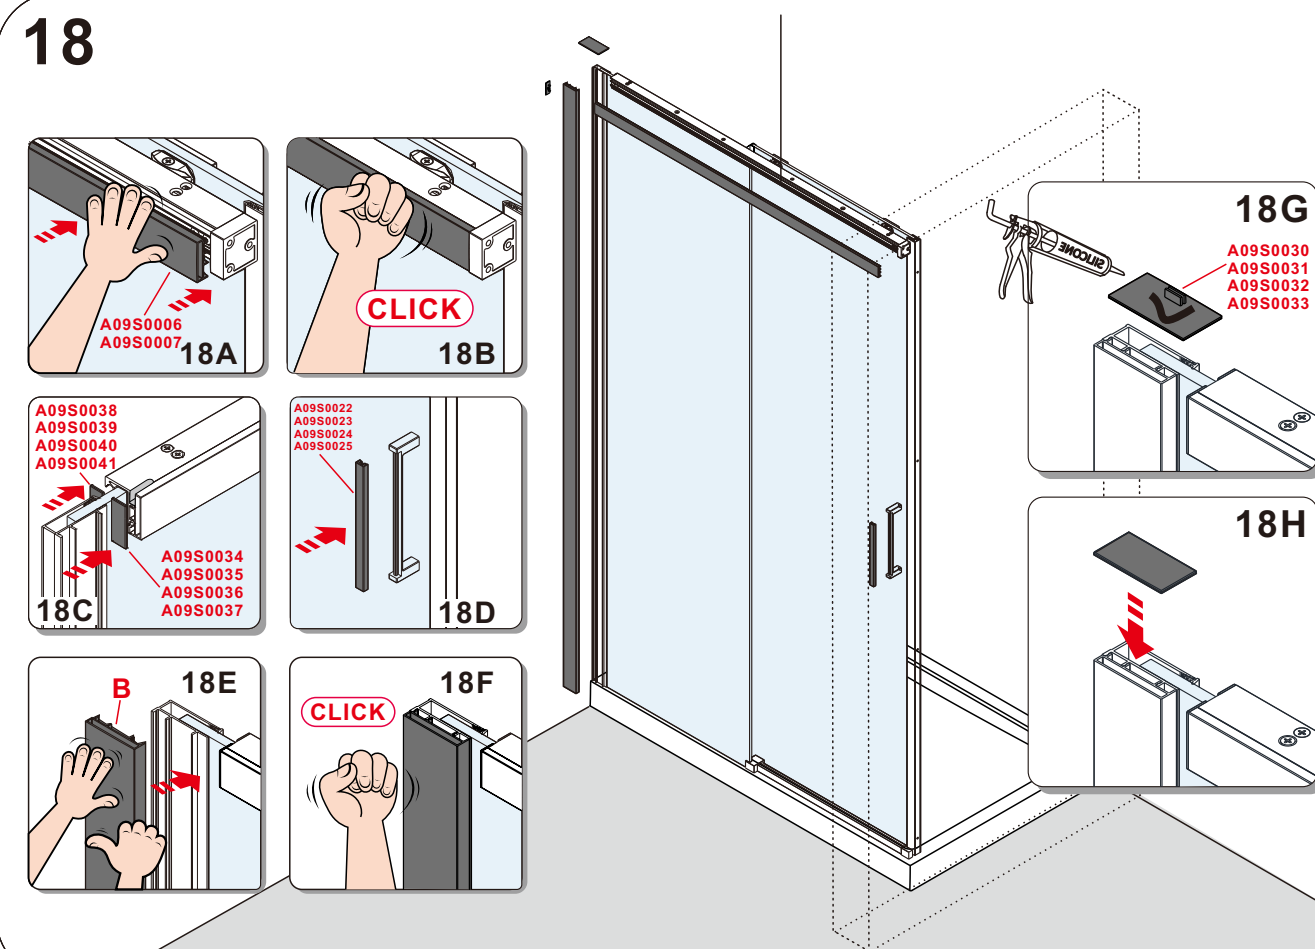

INSTALLATION GUIDE

Side Panel

MERLYN™
M

8
Series

IMPORTANT

Thank you for choosing Merlyn. Please familiarise yourself with the fitting instructions before commencing fitting.

- 1 Check that you have the tools required ☐
- 2 Check that the installation site is compatible ☐
with size of door supplied
- 3 Check all the enclosure components ☐
- 4 Check that the installation kit is complete ☐

DO NOT attempt to install the product unless you can tick **ALL 4** boxes as satisfactory.


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud - partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type.

It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.


USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting. No claims will be accepted after product has been installed.

Note: Instructions show fitting of a side panel with a sliding door as an example only. This side panel can be fitted with any Series 8 door.

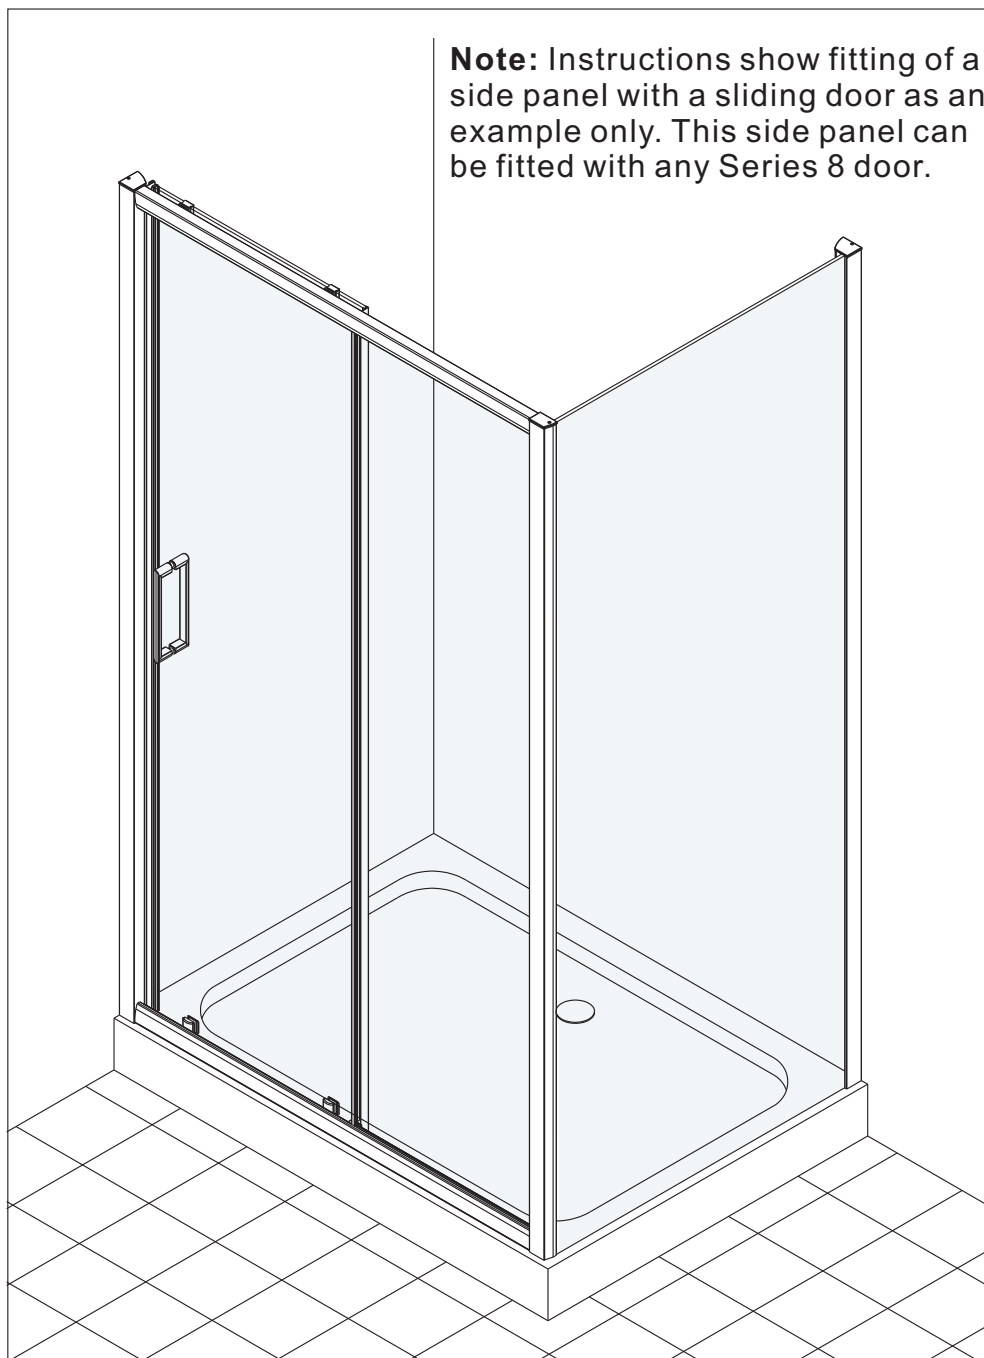

COMPONENTS AND BOX CONTENTS



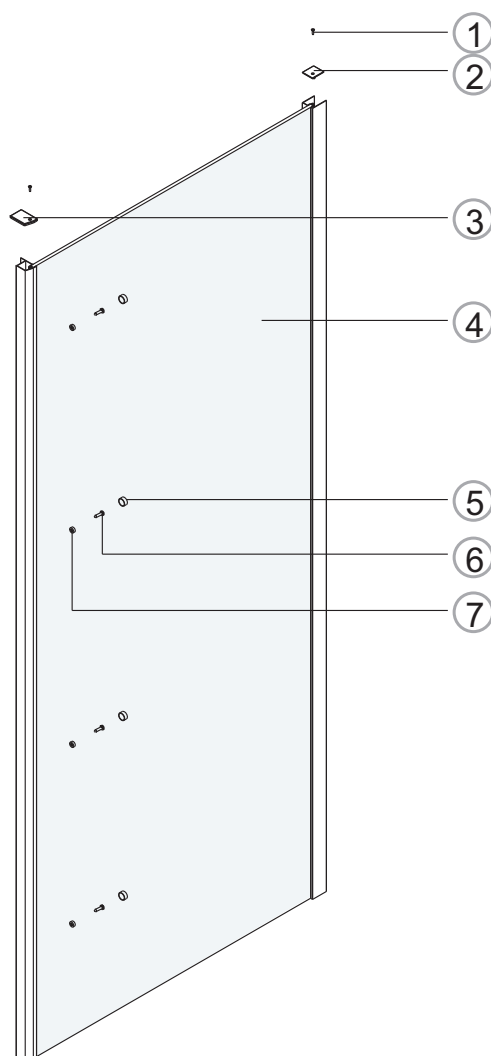


No	Description	Qty	Part No
1	Cover caps screw (2.7x12)	2	8S410045
2	Upright profile cover cap	1	8SSJ035L/R
3	Corner profile cover cap	1	8SSJ039L/R
4	Fixed panel	1	A
5	Cover screw	4	8S110037
6	Corner profile screw (4x12)	4	8S410022
7	Screw cover cap clip	4	8S1100371

Note: Further part details for fixing kit available on Page 2

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Fixing Kit components *parts shown are not to scale*

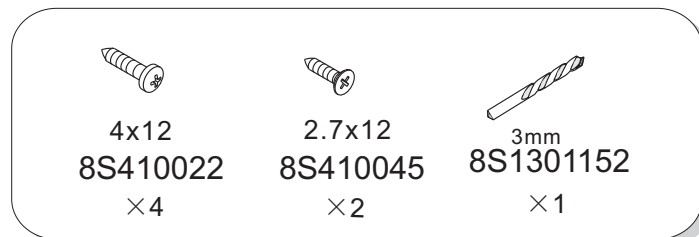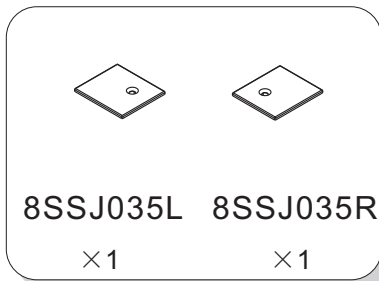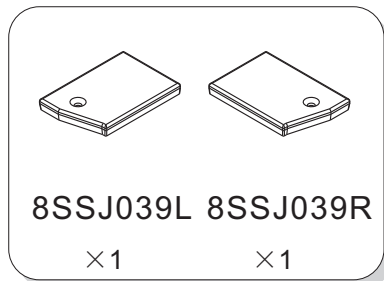

Tools required


- 6mm masonry drill bit
- Power drill
- Quality silicone
- Pencil
- Spirit level and tape measure
- #2 and #1 Philips head screw driver
- Spirit level with horizontal and vertical level indicators
- 10mm wrench

IMPORTANT - Installation Site

- 1.Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
- 2.The tiling or other wall finishing should be effectively sealed at the tray edges.
- 3.Tiles should extend at least to the corners of the tray and a minimum of 2 metres from the top of the tray.

INSTALL FIXED PANEL WALL PROFILE

TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

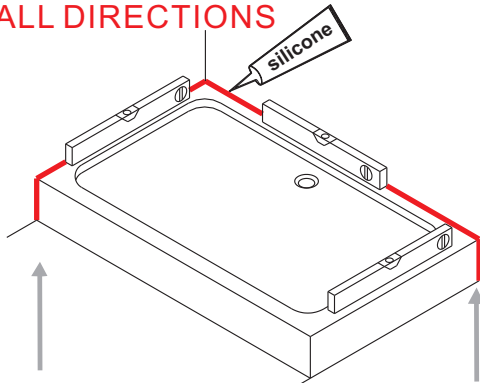

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

Note:

As for installation of sliding door, please see the instruction manual.

Step 1


Place the wall profile **8SAL0001** 10mm from the edge of the tray. Ensure the wall profiles are plumb.

Step 2

Mark the position for fixing the wall profile to the wall.


Step 3

Fix the wall profile to the wall with screws **8S410044**.

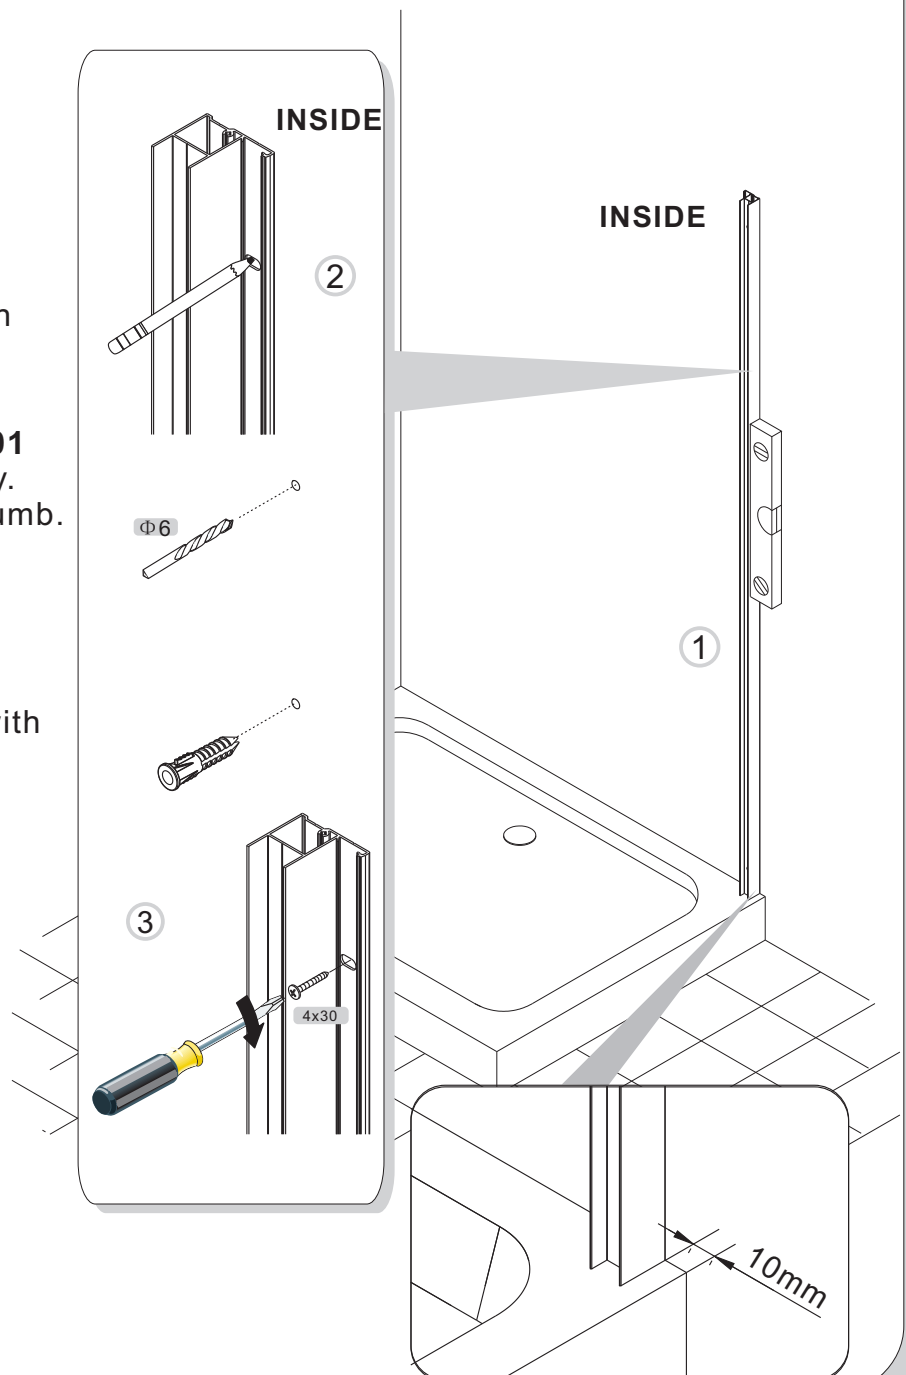

FIXED FRAMEWORK**Step 4**

Insert the side panel into the wall profile and also into the frame of the sliding door. Adjust so it is positioned correctly on the tray.

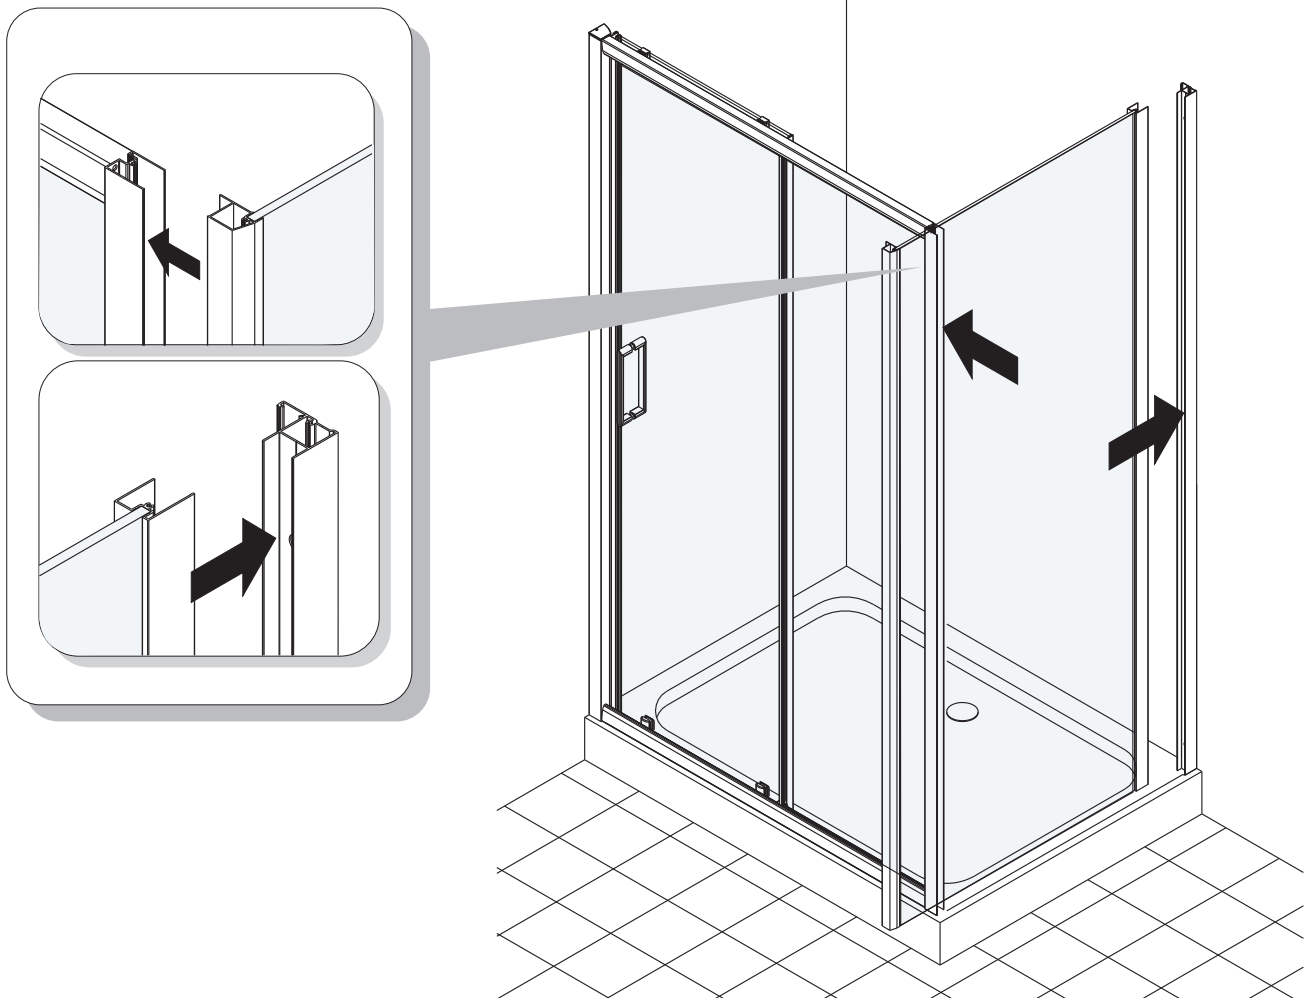

INSTALL SIDE PANEL




Step 5

Drill 4 equally spaced holes with 3mm drill bit **8S1301152** through the magnetic profile and corner profile. Fix the frame with screws **8S410022**, cover screw and screw cover cap clip **8S110037/8S1100371**.




Step 6

Drill 5 equally spaced holes with 3mm drill bit **8S1301152** through the nylon clip **8SSJ037**, wall profile and frame. Ensure minimum of 9mm front edge of frame (see picture below). Fix the frame with screws **8S410047**.



5

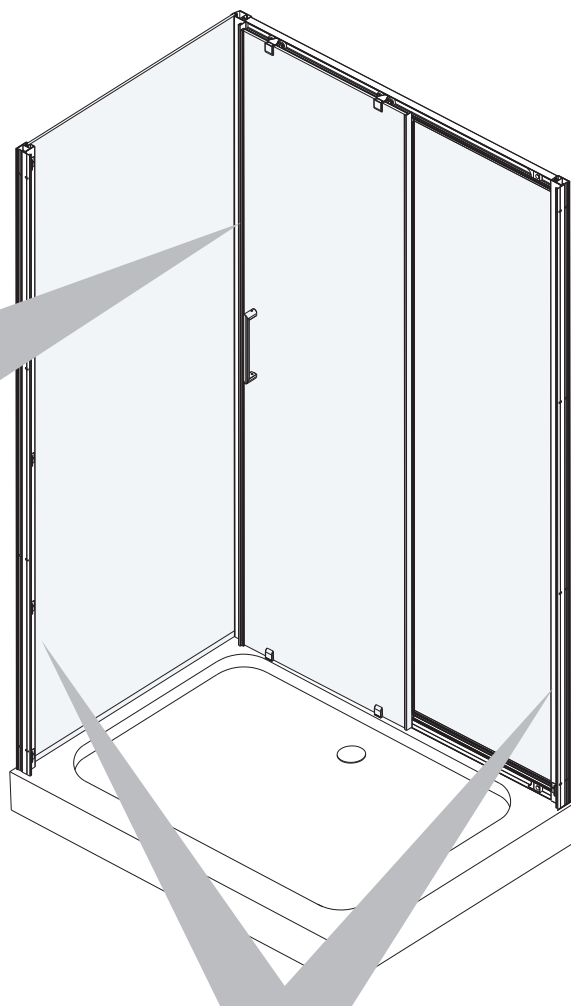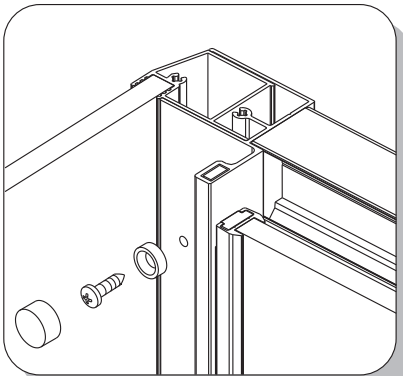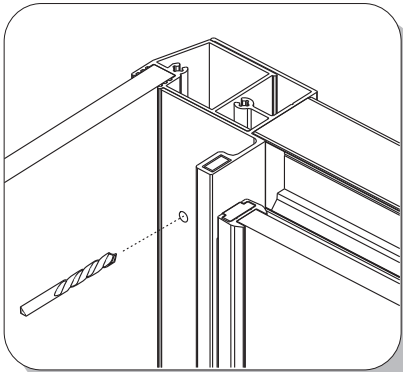

6

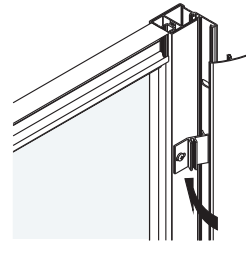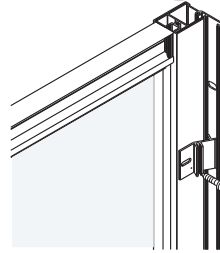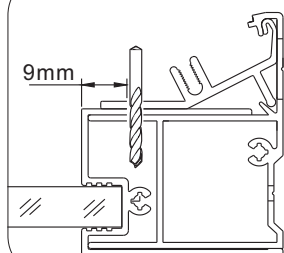

FINISHING AND SEALING

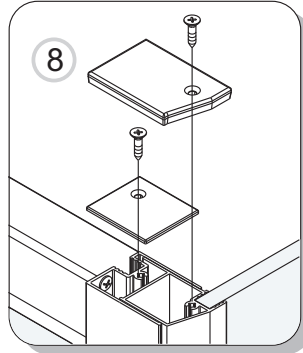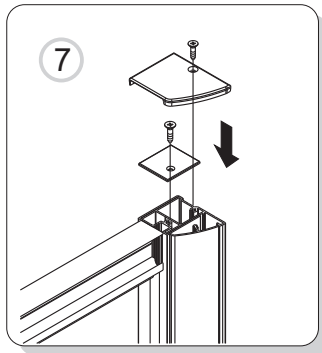

Step 7

Fix the upright cover caps **8SSJ035L/R** and wall profile cover caps **8SSJ036L/R** with screw **8S410045**.

Step 8

Fix the upright cover caps **8SSJ035L/R** and corner profile cover caps **8SSJ039L/R** with screw **8S410045**.

Step 9

Use a quality silicone sealant to seal the finished door.

Sealing Inside

Seal top to bottom on the **INSIDE** between the wall profile and the wall.


Note: Do not apply sealant on inside on tray.

Sealing Outside

Seal only along bottom rail on the **OUTSIDE** between profile and the tray and approx 50mm up between the wall profiles and the wall. Seal also where bottom profile and upright profile join and also where wall profiles and frame profile overlap 50mm up.



DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING

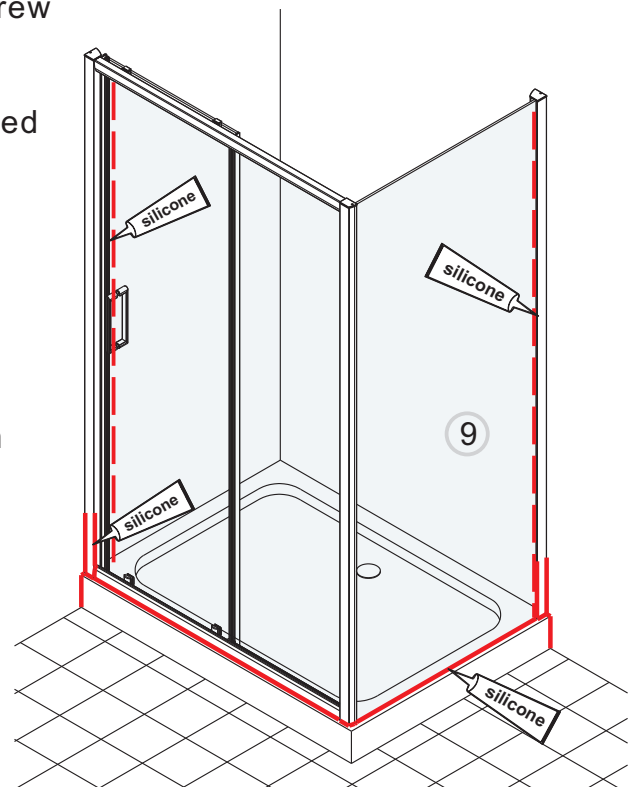

SERIES 8 SIDE PANEL

WE ARE SURE YOU WILL BE PLEASED WITH YOUR NEW MERLYN SHOWER DOOR.

Where a shower door has been installed contrary to these instructions, Merlyn cannot accept responsibility for any loss or damage, however caused, and any on-site service may incur a charge.

www.merlynbathrooms.com

FAILURE TO FOLLOW THE INSTRUCTIONS CORRECTLY MAY INVALIDATE YOUR GUARANTEE

Trouble Shooting Guide

Side Panel



- ① Is the tray level? (See page 3 of the site installation instructions).
- ② Have the walls been checked at different levels to ensure consistency?
- ③ Are the wall profiles stepped in 20 mm from the edge of the tray for the door panel and 10mm for the side panel? (See step 1)
- ④ Are the wall profiles plumb (vertically aligned and checked with a spirit level)?
(See step 1)
- ⑤ Is the unit correctly sealed with silicone? (See step 9)
- ⑥ Do the finished measurements on the tray comply with the adjustments listed in the product specifications book?