

Installation Guide

Single curved Bath screen

Important

Please familiarise yourself with the fitting instructions before commencing fitting.

- 1 Check that you have the tools required ☐
- 2 Check that the installation site is compatible ☐
with size of screen supplied
- 3 Check all the bath screen components ☐
- 4 Check that the installation kit is complete ☐

DO NOT attempt to install the product unless you can tick **ALL 4** boxed as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or "stud - partition" walls will require alternative fixings. Please consult a hardware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect fitting area before fitting. No claims will be accepted after product had been installed.



COMPONENTS AND BOX CONTENTS

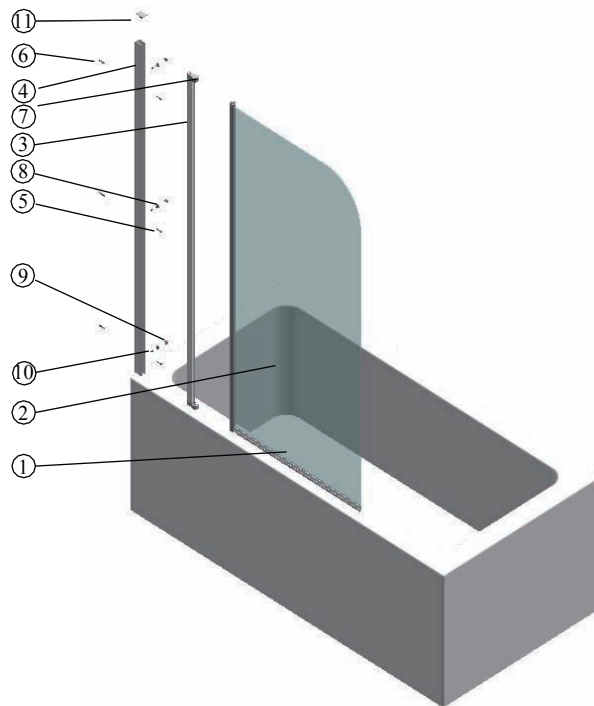


| No. | Description | Qty | Part No. | No. | Description | Qty | Part No. |
|-----|--------------------|-----|----------|-----|----------------------|-----|------------|
| 1 | Clear Seal | 1 | MOBY003 | 7 | Bracket | 2 | BSYS021L/R |
| 2 | Moving Glass Panel | 1 | A | 8 | Screw (4x16mm) | 3 | 2SY50 |
| 3 | Hinge post | 1 | S030C | 9 | Screw Cover Cap | 3 | 2SS008 |
| 4 | Wall Profile | 1 | LR8387C | 10 | Screw Cover Cap Clip | 3 | 2SS009 |
| 5 | Screw(3.9 x 30mm) | 3 | 2SY51 | 11 | Wall profile cover | 2 | MOBY002L/R |
| 6 | Wall Plug | 3 | 2SP12 | | | | |

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Fixing Kit components

pats shown are not to scale

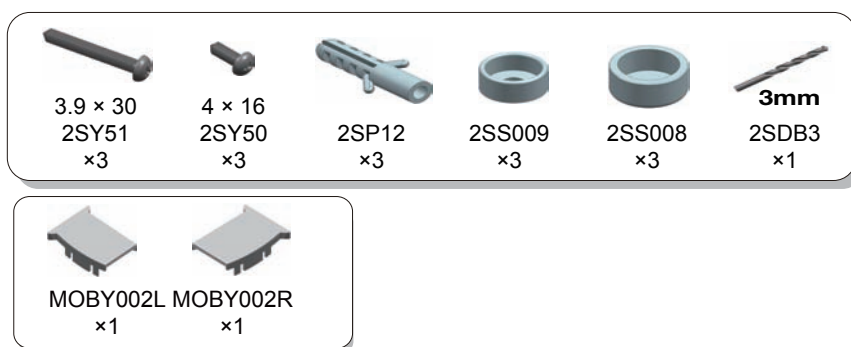

Tools required


- 6mm Masonry drill bit
- Power drill
- Quality silicone
- Pencil
- **Tape measure**
- #2 Philips head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation Site


1. Ensure your bath is level before fitting. This screen is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.
2. The tiling or other wall finishing should be effectively sealed at the bath edges.

INSTALLATION

1. The screen is set up for Left hand use. If you need to reverse it, unscrew one of the brackets **BSYS021** and remove the moving panel **A**.
2. Turn the hinge post **S030C** upside down, reinsert the moving panel (do not turn panel upside down). Reattach the bracket. Fig 2. The screen can then be fitted on the Right hand Side of the Bath. Ensure the brackets **BSYS021** are facing in the correct direction. Fig 3.

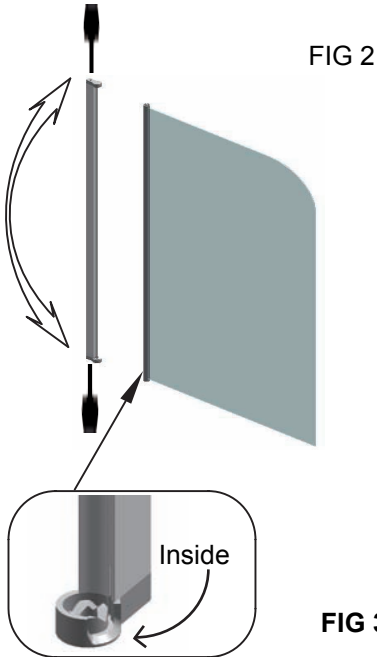


3. Position the wall profile **LR8387C** so the seal on the moving panel sits on the inside edge of the bath. Fig 4.

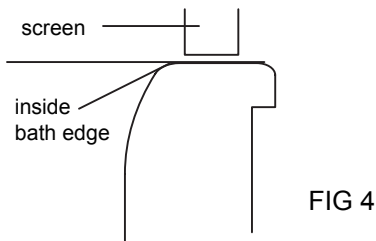

4. Plumb the wall profiles **LR8387C** using the vertical element of the spirit level. Mark 3 holes, drill with 6mm masonry bit and fit wall plugs **2SP12**. Using the 3 Screw **2SY51**, fix wall profiles to wall. Fig 5.

NOTE: Only silicone the wall profile after fixing to the wall (see sealing section).
Do not silicone on the back of the wall profile before fixing to the wall.

5. Insert the screen into the wall profile. Ensure the bottom seal on the moving panel **A** is parallel to the top surface of the bath.
6. Drill 3 holes through the wall profile and fixed panel using a 3mm steel drill bit. Using the Screws **2SY50**, and screw cover caps **2SS008** and screw cover caps clips **2SS009**, fix the hinge upright to the wall profile in 3 places. Fig 5.

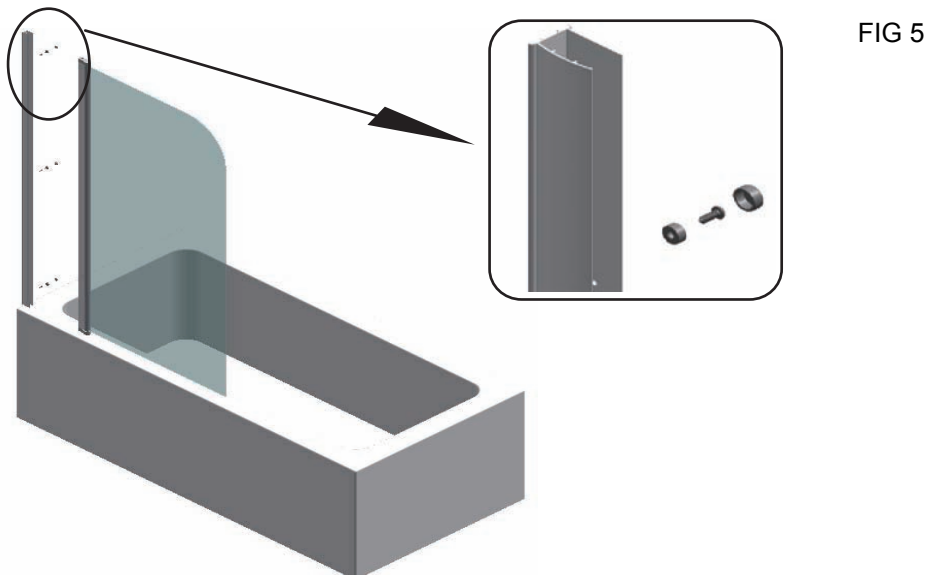

7. Ensure the deflector on the seal is positioned on the inside. Make a cut on one of the bottom corners of the seal to ensure a correct fit against the hinge bracket – see circled area in. Fig 7

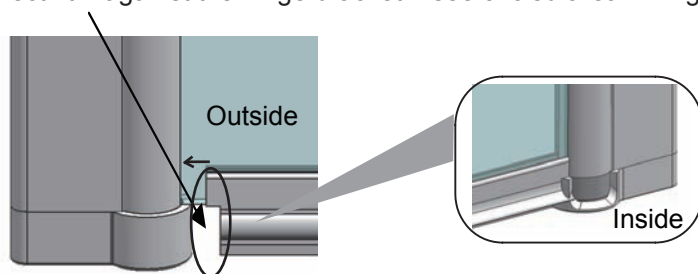


FIG 7

8. Fix the wall profile cover **MOBY002L/R**. FIG 8

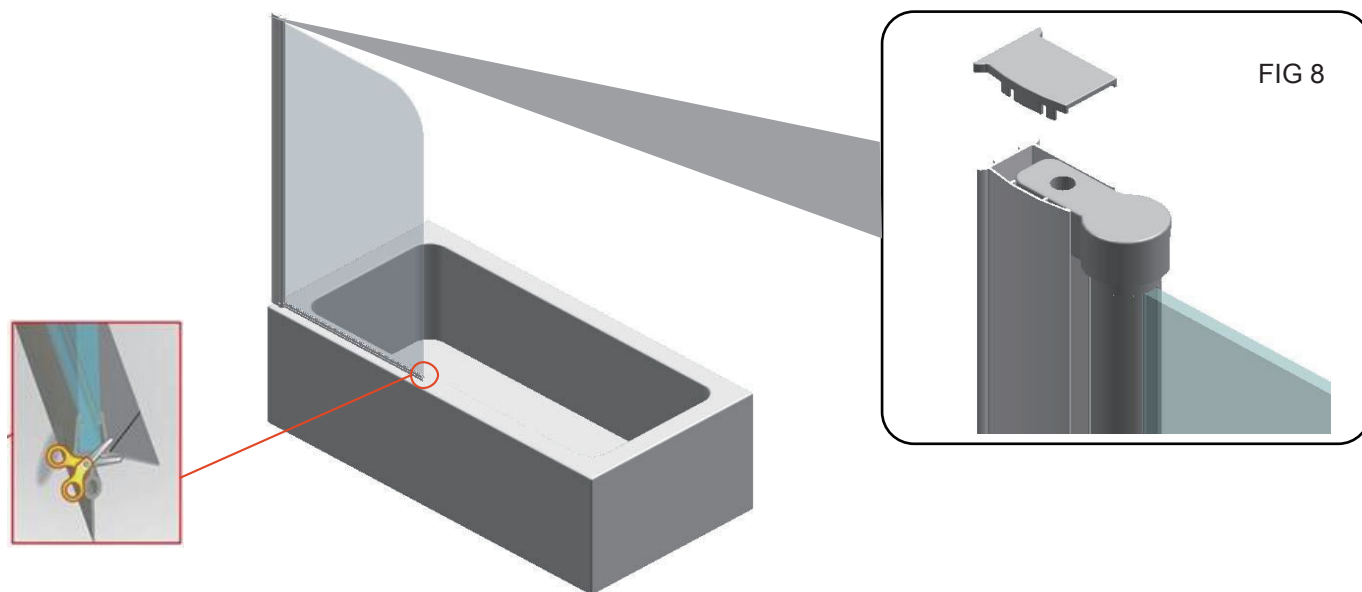


FIG 8


Sealing. Fig 6

Inside(dashed line):

When installation is complete seal the joint between the wall profile and the wall, top to bottom on the inside only. DO NOT SEAL where the wall profile sits on the Bath.

Outside (full line)

From outside the screen, SEAL where the wall profile and hinge bracket sit on the bath. Seal 50mm up where the wall profile meets the wall and where the hinge upright and the wall profile over lap.

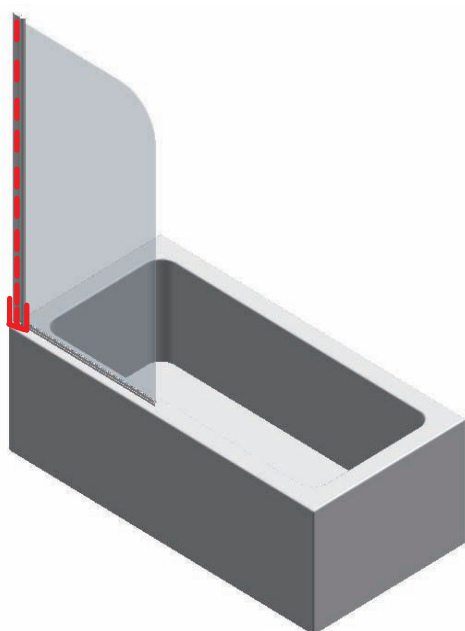

Installation Guide

Easy-Fit Profile

IMPORTANT

Please read the complete instructions
before commencing fitting.


Do Not attempt to install the product unless you can tick all 4 boxes satisfactorily

- | | | | |
|---|--------------------------|--|--------------------------|
| ▪ Check that you have the tools required | <input type="checkbox"/> | ▪ Check all the enclosure components are present | <input type="checkbox"/> |
| ▪ Check the installation site is compatible with the sizes of door supplied | <input type="checkbox"/> | ▪ Check the installation kit is complete | <input type="checkbox"/> |


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles

ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS.
WEAR PROTECTIVE EYEWEAR AND CLOTHING.
DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID
CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR
IMPACTS DURING THE INSTALLATION

WARNING: Secure only variants of MERLYN bath screens models MB1, MB2 & MB3 only to the Easy-Fit profile.

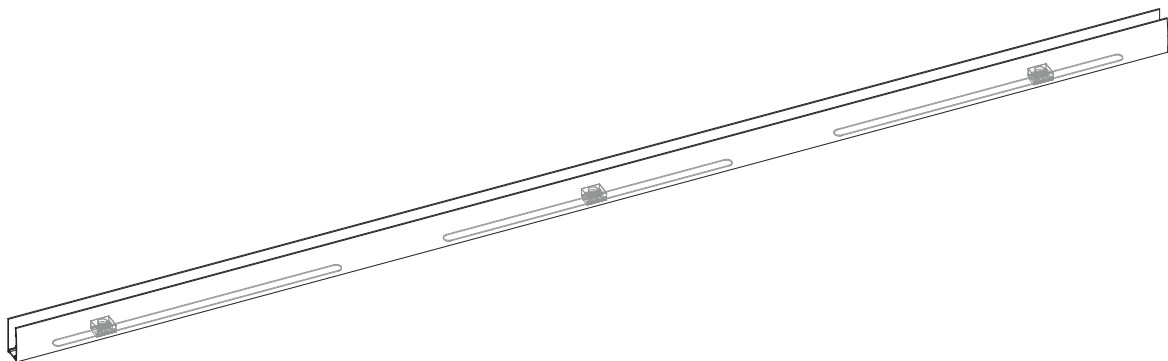

COMPONENTS AND BOX CONTENTS

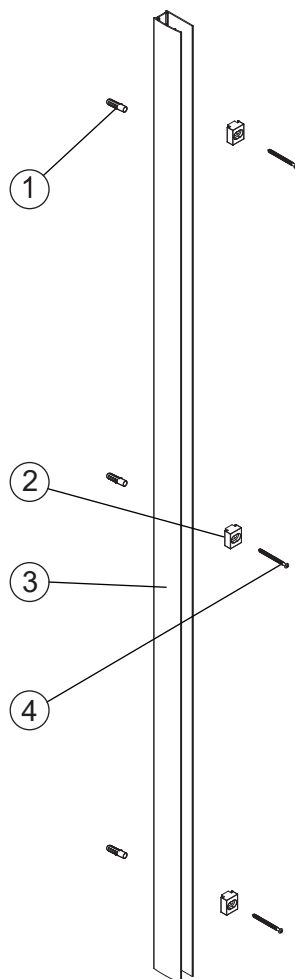

| No. | Description | Qty | Part No. |
|-----|---------------|-----|----------|
| 1 | Wall plug | 3 | 2SP12 |
| 2 | Screw block | 3 | FLEXBLK |
| 3 | Wall profile | 1 | FLEXPFL |
| 4 | Screw(4×50mm) | 3 | 2SY50 |

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Tools required

- Neutral cure anti bacterial silicone
- Pencil
- Tape measure
- #2 Philips head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation Site

1. Ensure your bath is level before fitting. The screen that assembles to this profile is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.
2. The tiling or other wall finishing should be effectively sealed at the bath edges.

INSTALLATION

1. Replace current wall plugs if required with MERLYN wall plugs supplied with Easy-Fit profile to ensure bath screen will be secure. (FIG 1)

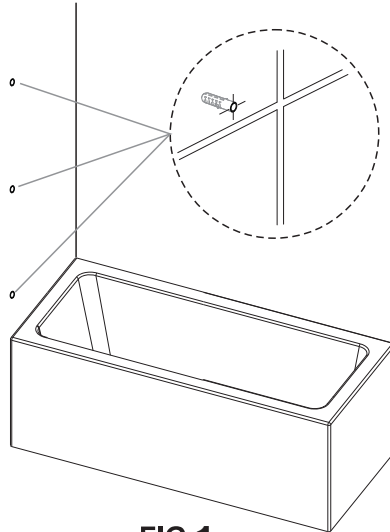


FIG 1

2. Ensure profile is plumb to the wall (FIG 2) and positioned to ensure the bathscreen will be on the inside edge of the bath. (FIG 3)

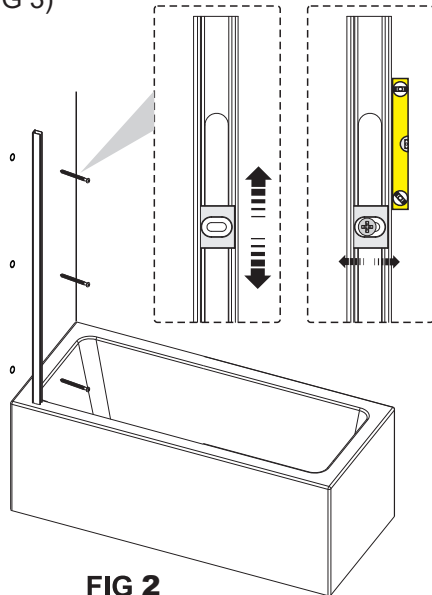


FIG 2

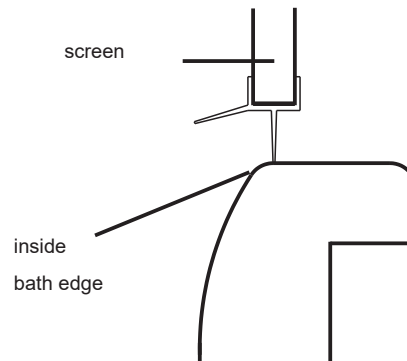


FIG 3

3. Secure only variants of MERLYN bath screens models MB1, MB2 & MB3 only to the Easy-Fit profile. (FIG 4)

4. Refer to bath screen installation instructions to complete the install of the bath screen to the Easy-Fit profile. (FIG 5)

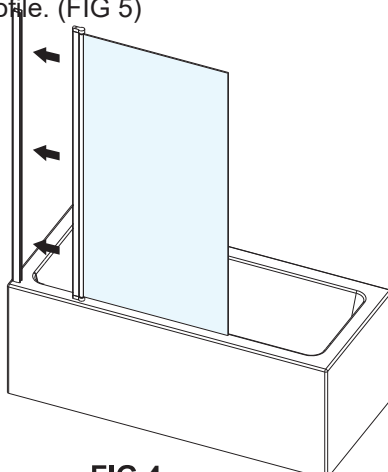


FIG 4



FIG 5