

CLASSIQUE

Burlington®


Curved Hinge Bath Screen with Plating / Frosting LH

PRODUCT CODES:

CQBSCHC850LH

CQBSCHG850LH

CQBSCHL850LH

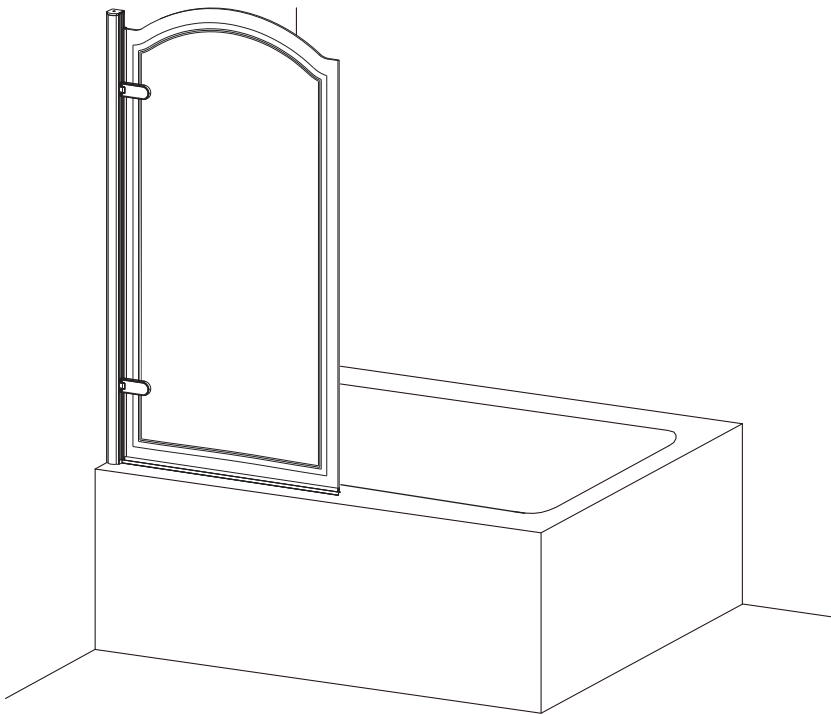

CQ1909PRFNx



CQ1850PRFNx

Optional profile finial (not supplied with bath screen)

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.

ORIENTATION

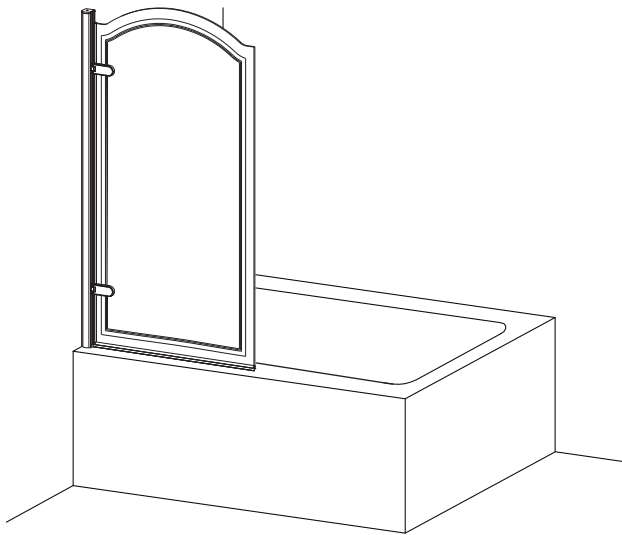

LH

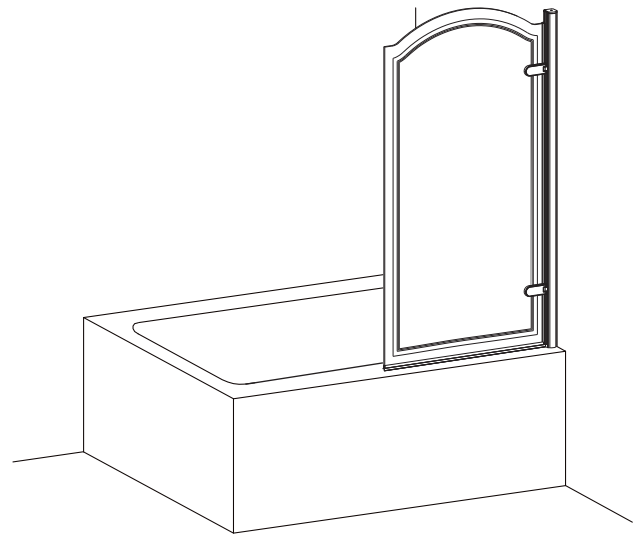

RH

The bath screen has left and right hand versions, and they are irreversible.

Tools Required (not supplied):

Spirit Level




Torque Screw Driver



Pencil



Snips



Drill



6mm Drill Bit



Silicone



Measuring Tape














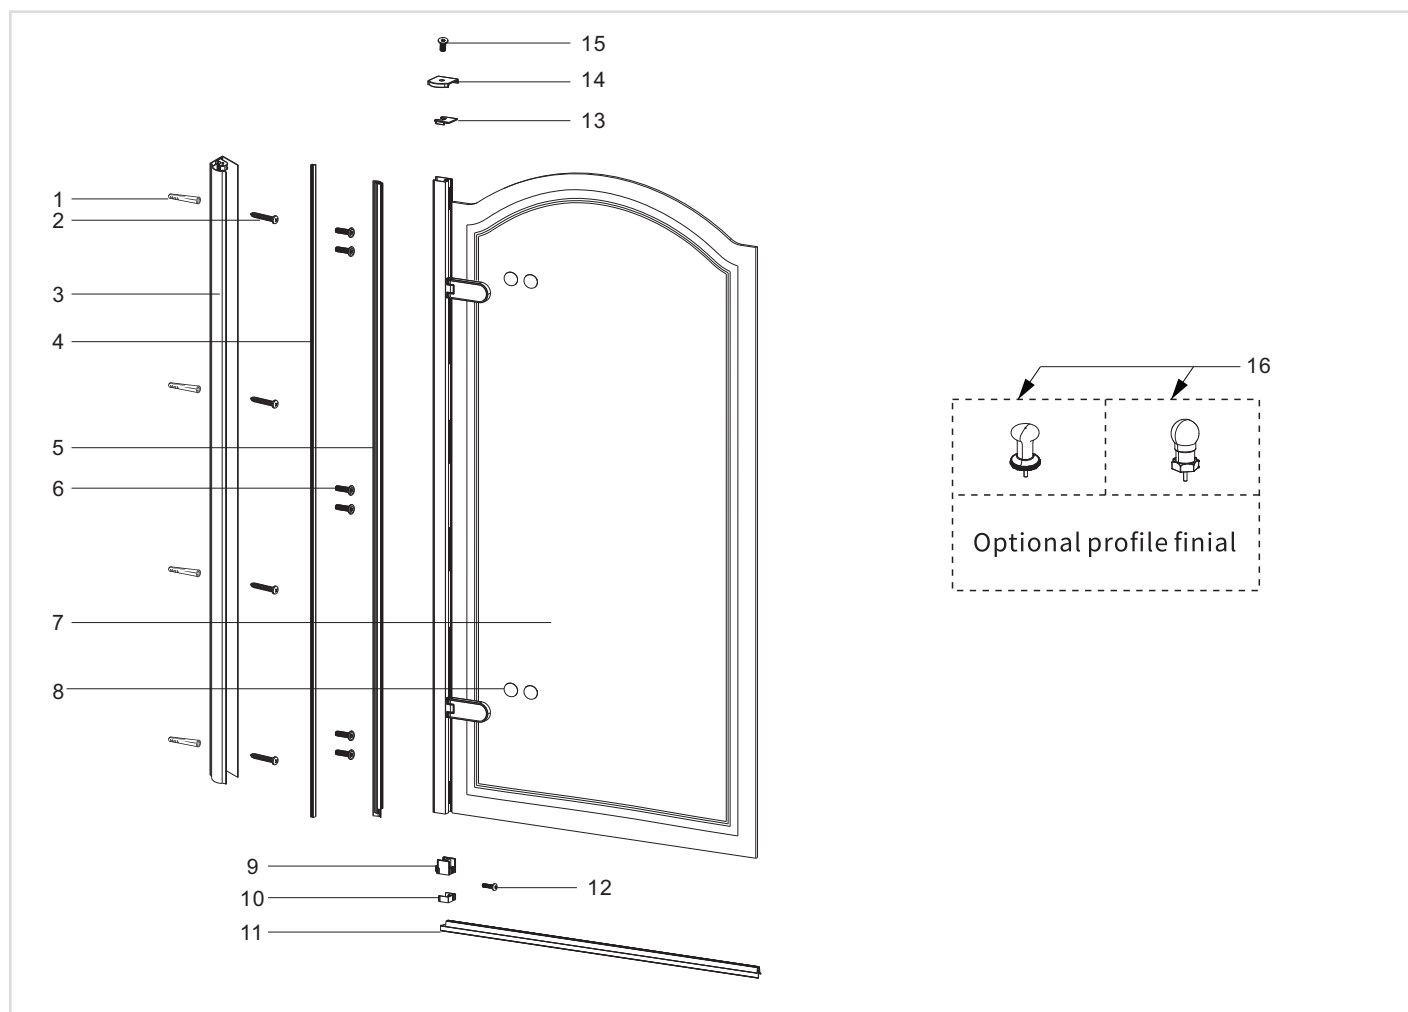








Knife



COMPONENTS



Burlington®



1	Wall Plug		x4
2	ST4x50mm Screw		x4
3	Wall Profile		x1
4	Profile Cover		x1
5	Vertical Door Seal		x1
6	M5*30 Screw		x6
7	Moving Door		x1
8	Hinge Cap		x4
9	Gasket		x1
10	Cover Cap		x1
11	Bottom Seal		x1
12	M4*10mm Screw		x1
13	Adjustment Profile Cap		x1
14	Wall Profile Cap		x1
15	M5*14 Screw		x1
16	Optional Profile Finial		x1
17	Allen Key	  	





INSTALLATION

1

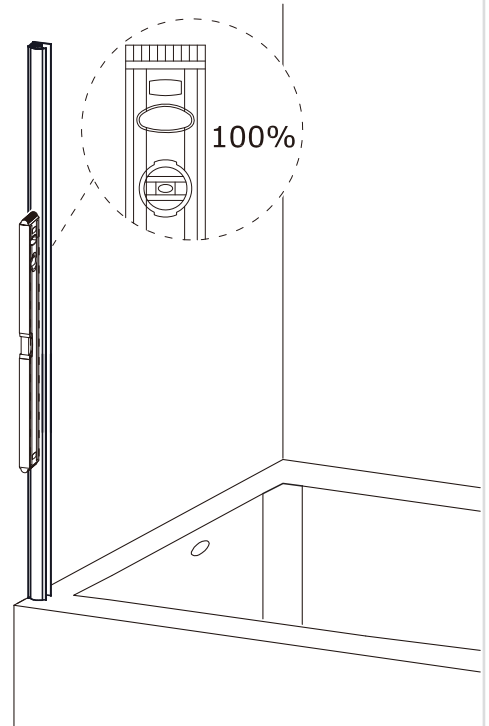
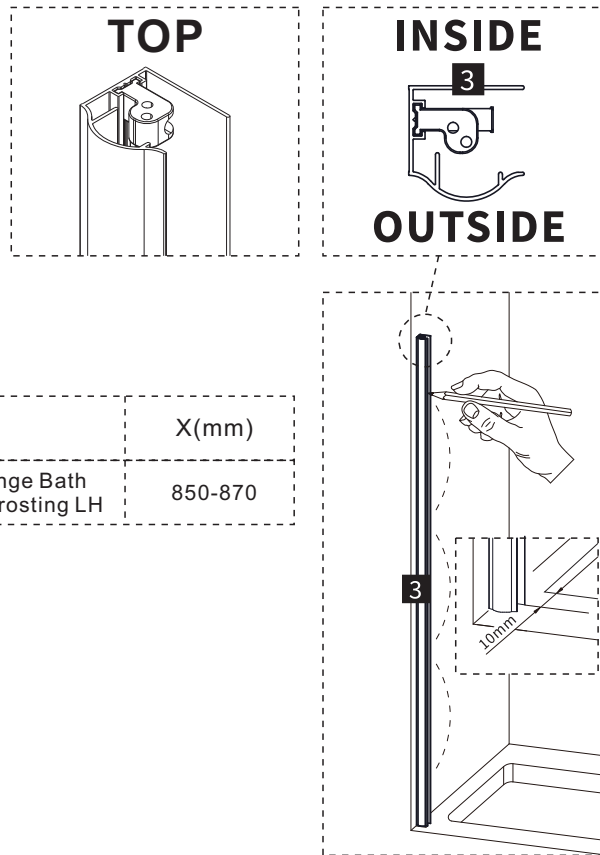


Product	X(mm)
Classique Curved Hinge Bath Screen with Plating / Frosting LH	850-870

2

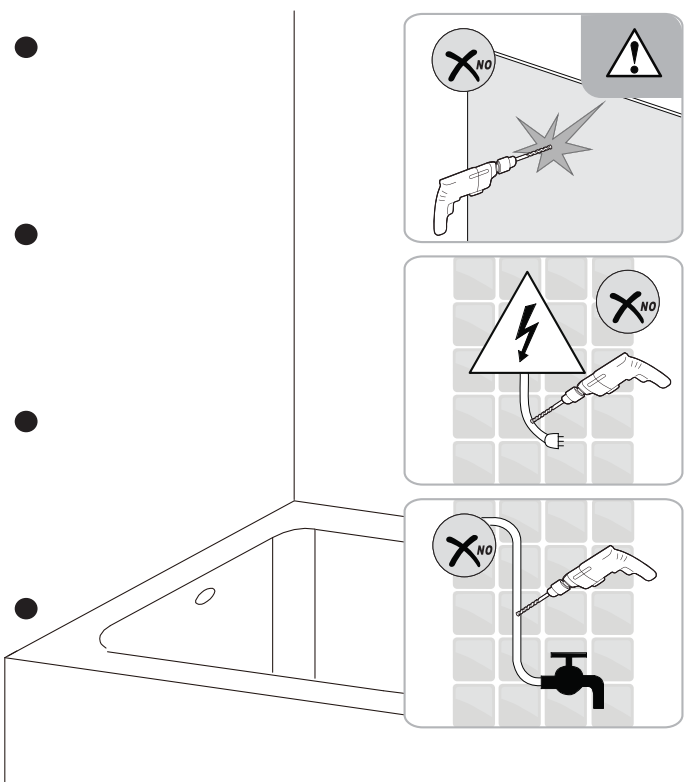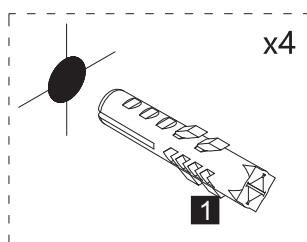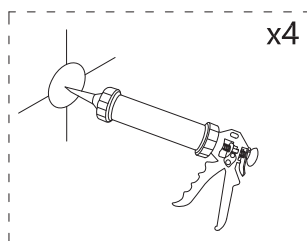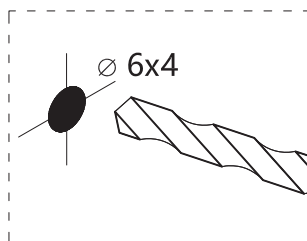


INSTALLATION

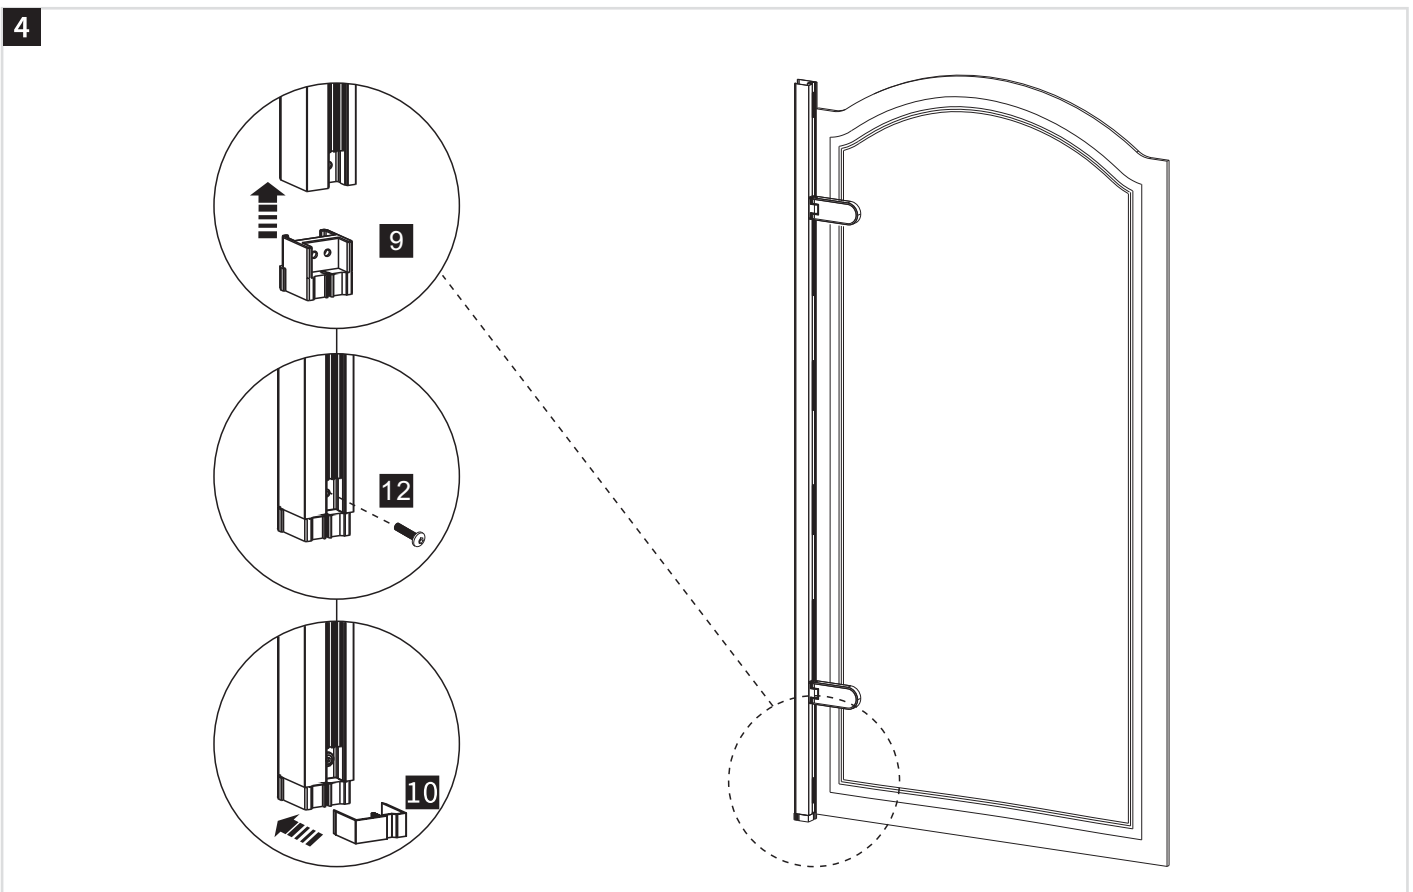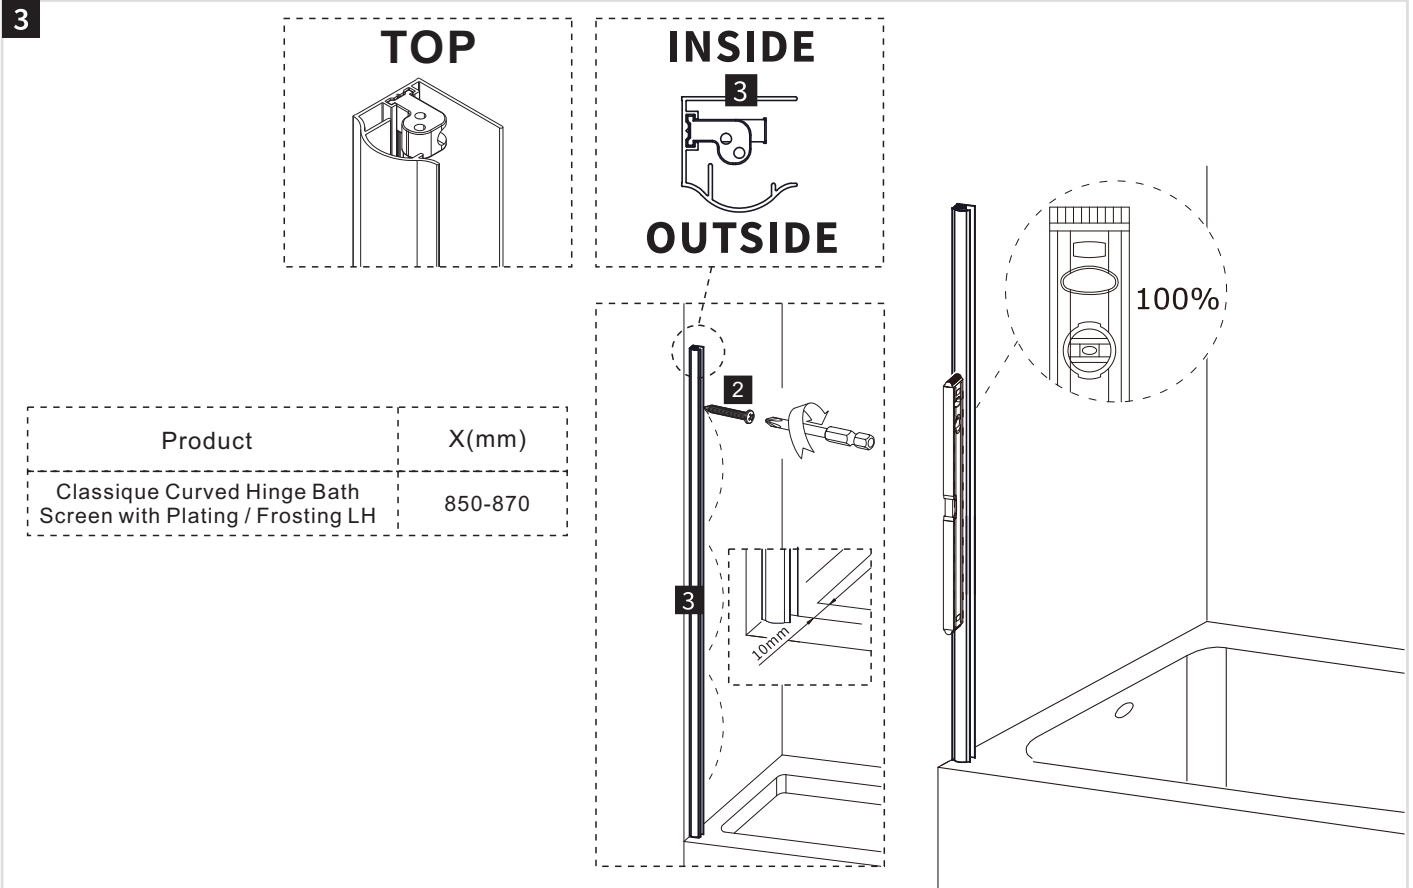



INSTALLATION


Burlington®

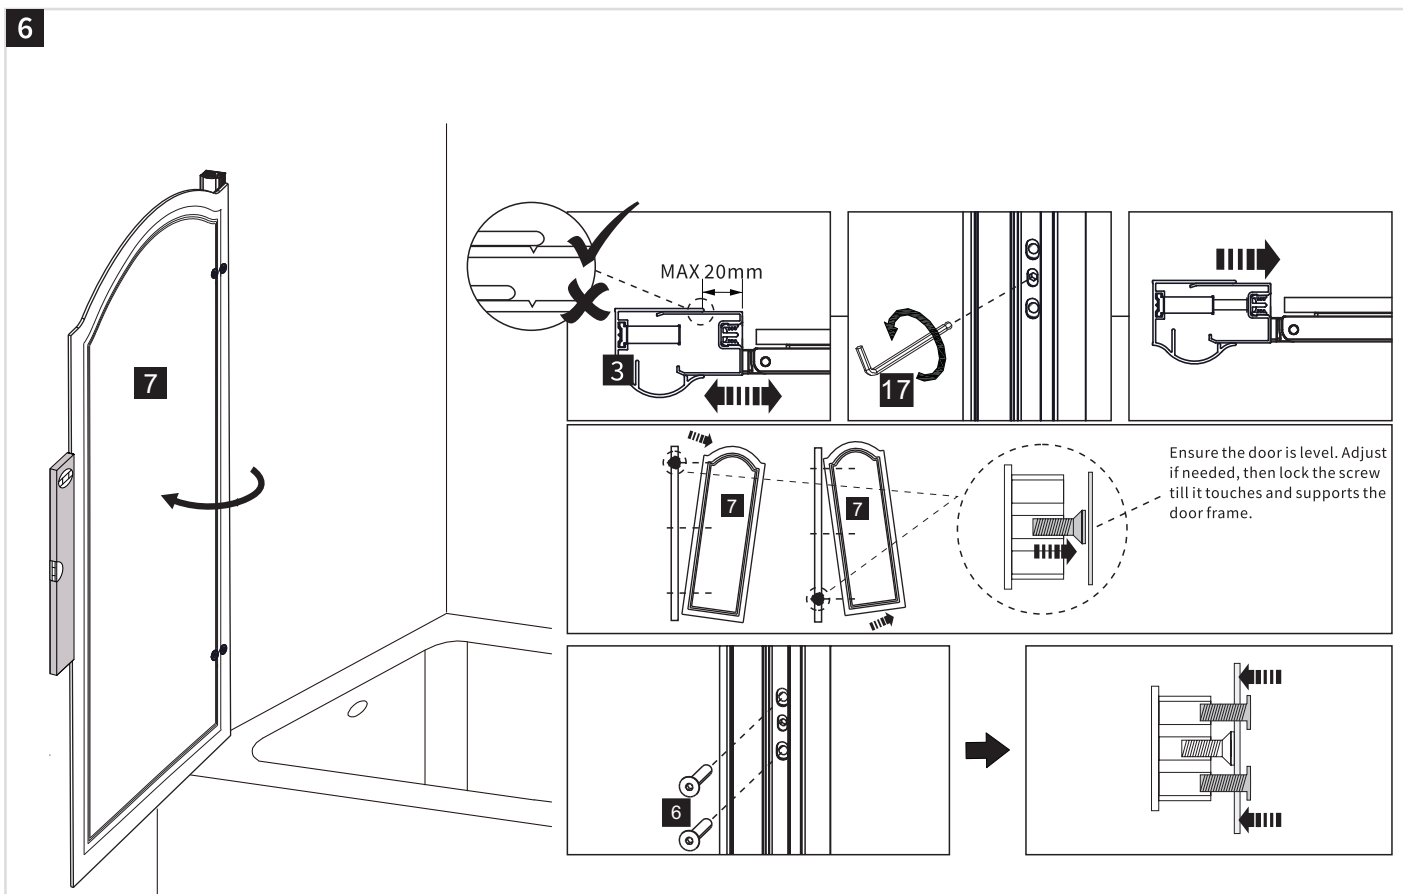

INSTALLATION

Burlington®

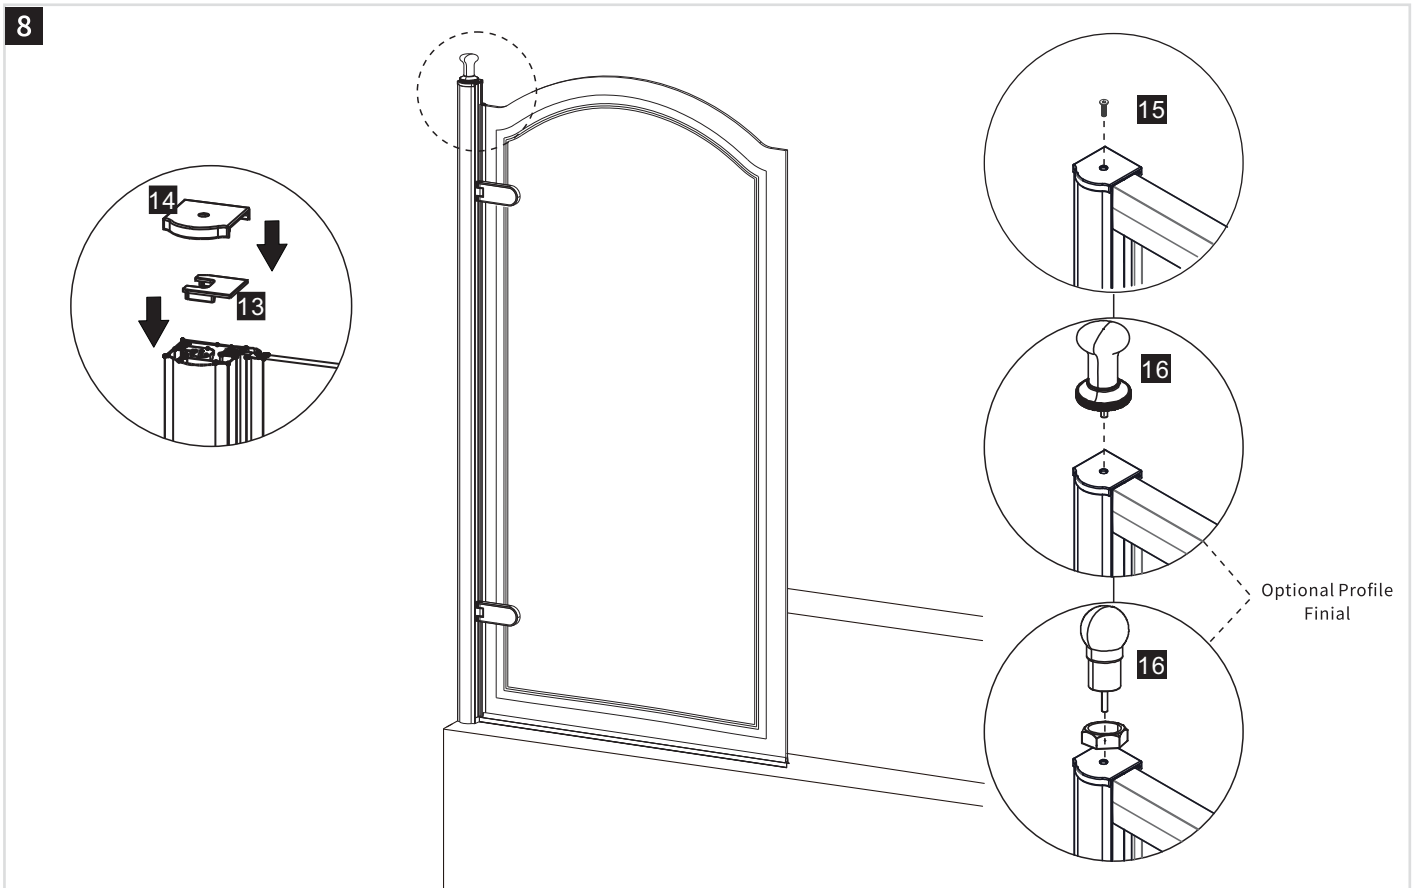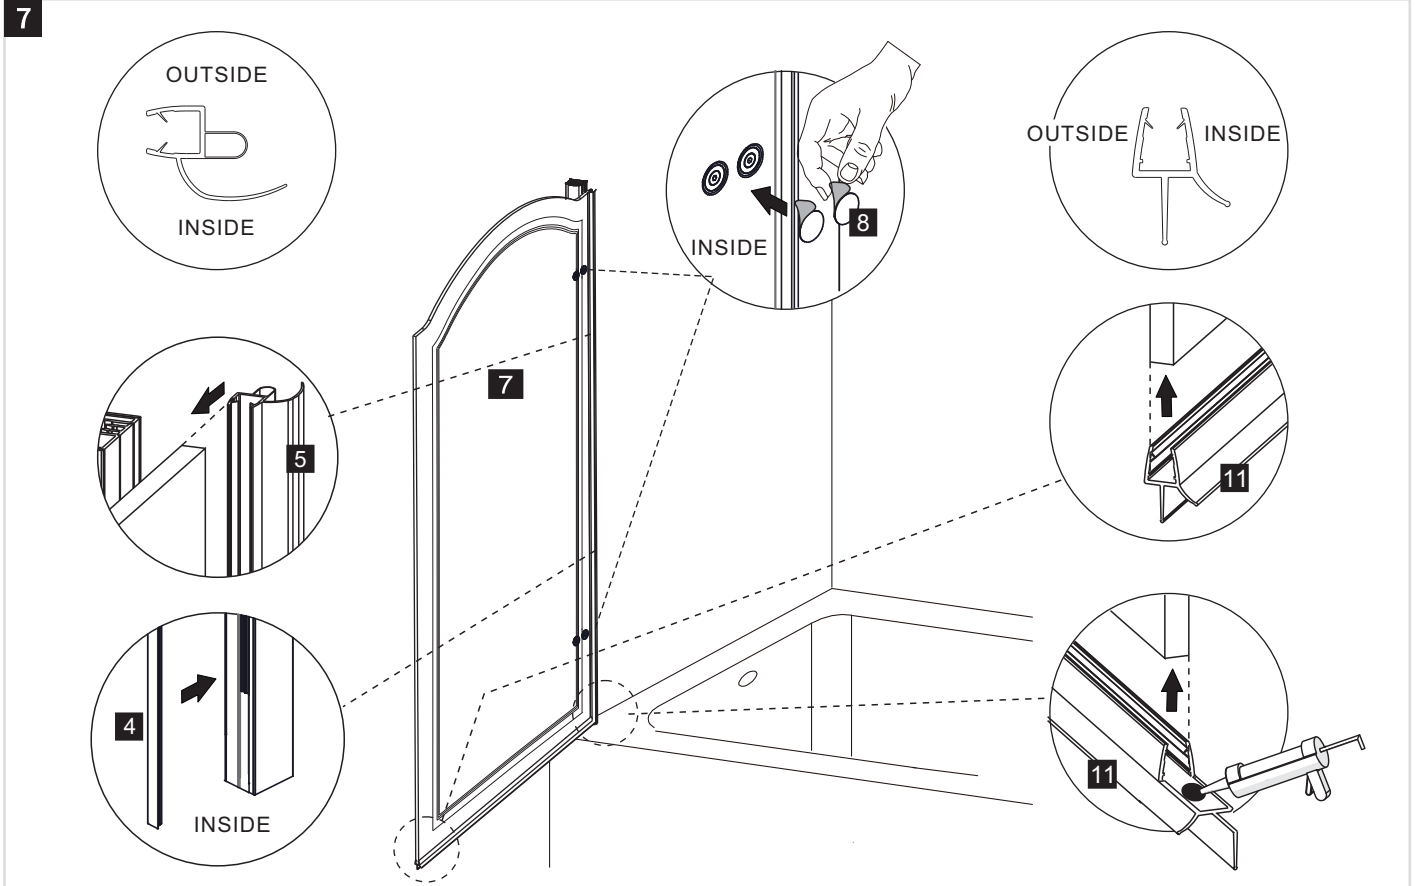

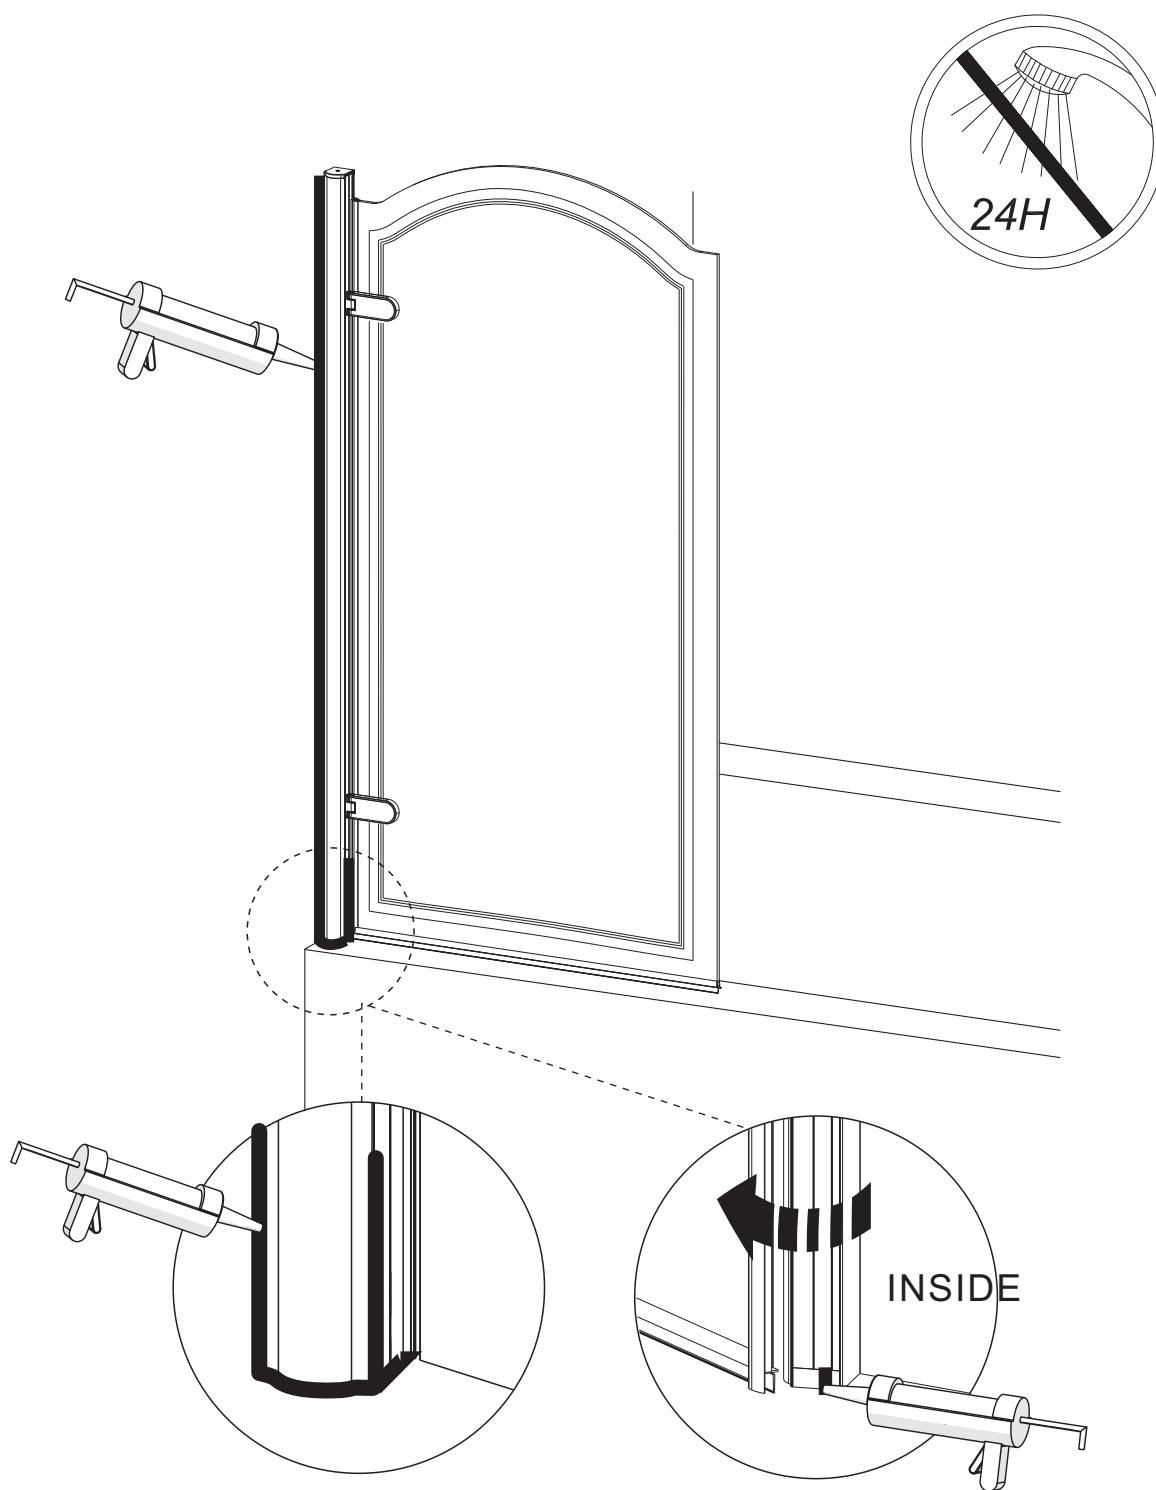

Open the door and apply sealant to the groove of the bottom cover as shown in the diagram.

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk

CLASSIQUE

Burlington®


Curved Hinge Bath Screen with Plating / Frosting RH

PRODUCT CODES:

CQBSCHC850RH

CQBSCHG850RH

CQBSCHL850RH

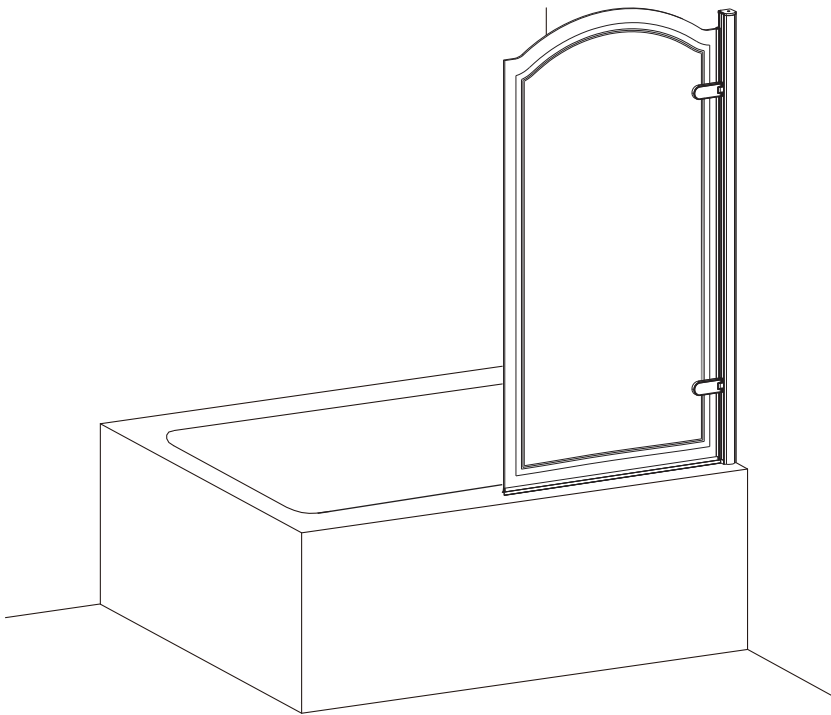

CQ1909PRFNx



CQ1850PRFNx

Optional profile finial (not supplied with bath screen)

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.

ORIENTATION

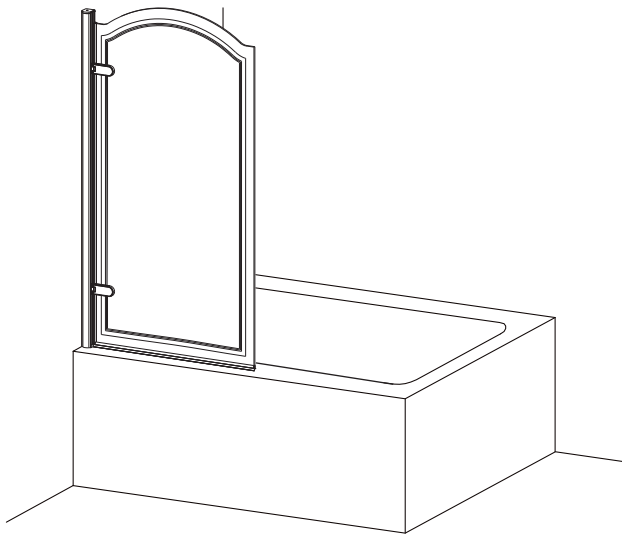

LH

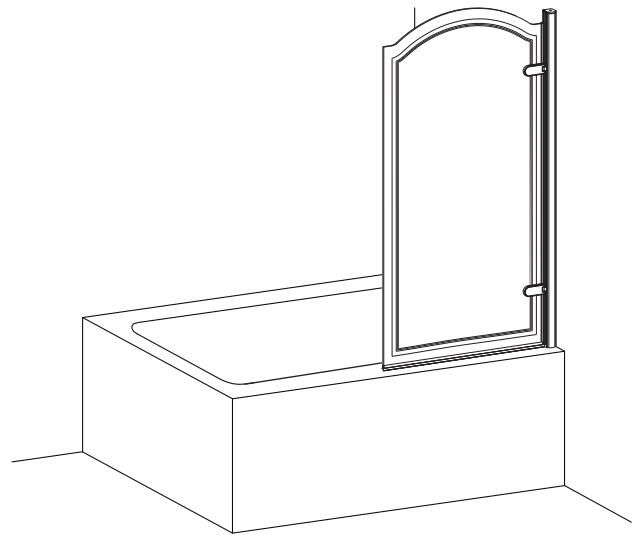

RH

The bath screen has left and right hand versions, and they are irreversible.

Tools Required (not supplied):

Spirit Level




Torque Screw Driver



Pencil



Snips



Drill



6mm Drill Bit



Silicone



Measuring Tape




Knife



COMPONENTS


Burlington®

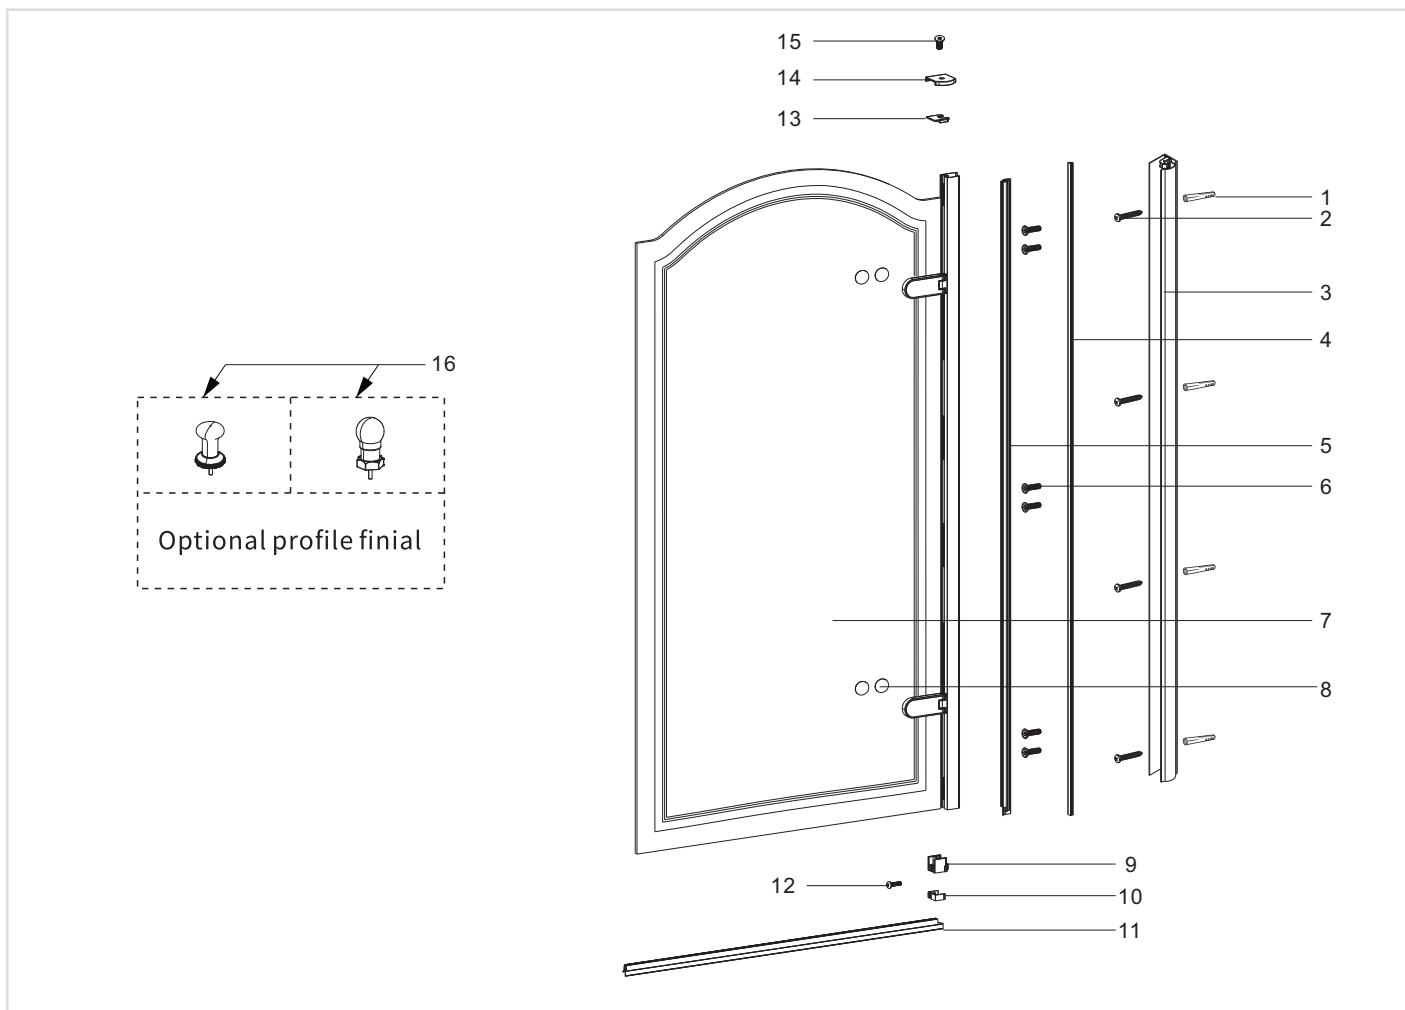


1	Wall Plug		x4
2	ST4x50mm Screw		x4
3	Wall Profile		x1
4	Profile Cover		x1
5	Vertical Door Seal		x1
6	M5*30 Screw		x6
7	Moving Door		x1
8	Hinge Cap		x4
9	Gasket		x1
10	Cover Cap		x1
11	Bottom Seal		x1
12	M4*10mm Screw		x1
13	Adjustment Profile Cap		x1
14	Wall Profile Cap		x1
15	M5*14 Screw		x1
16	Optional Profile Finial		x1
17	Allen Key	4mm 3mm 2.5mm	

INSTALLATION

1

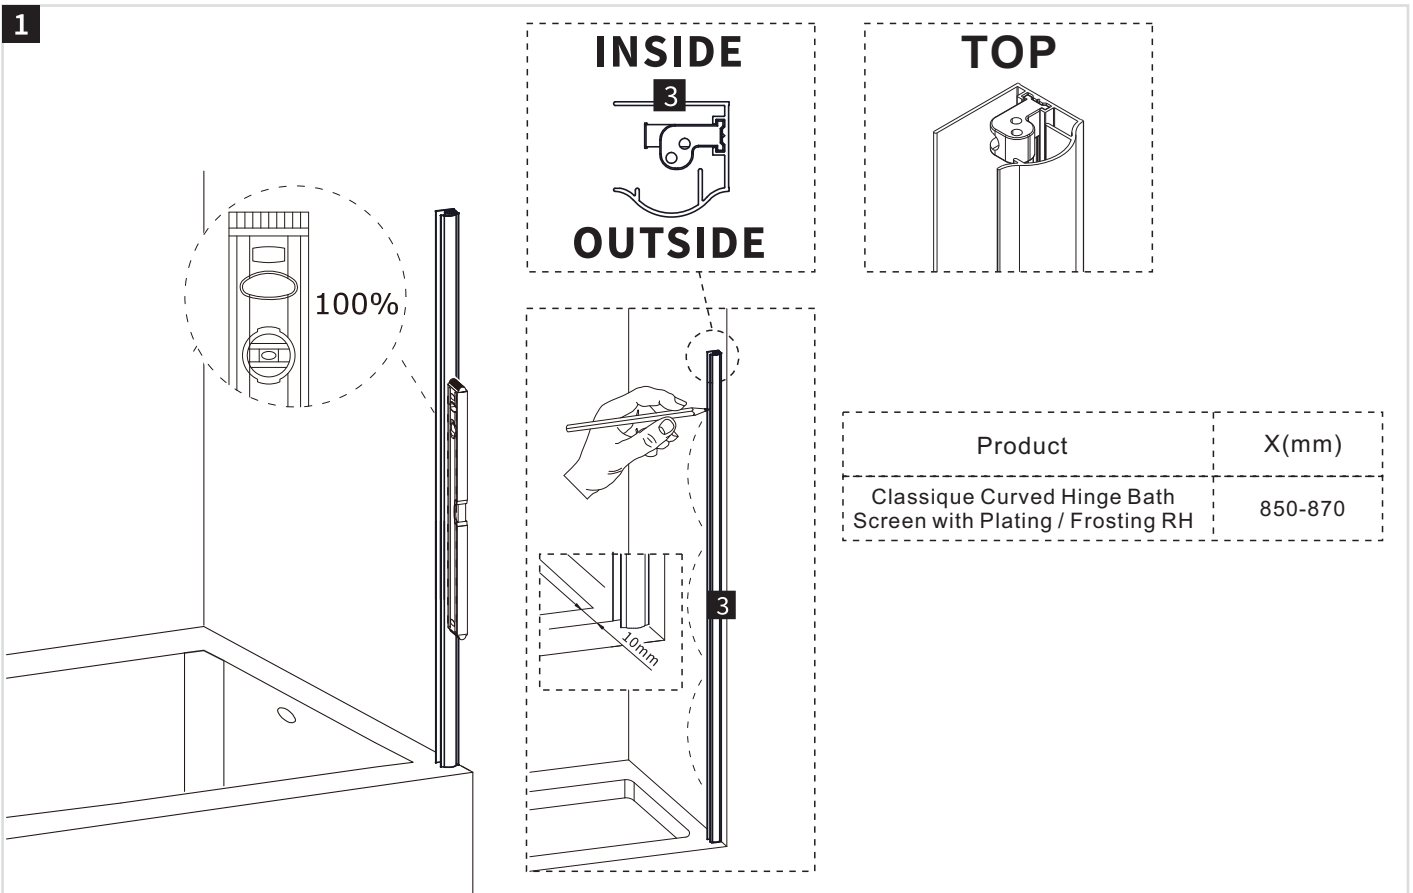


2

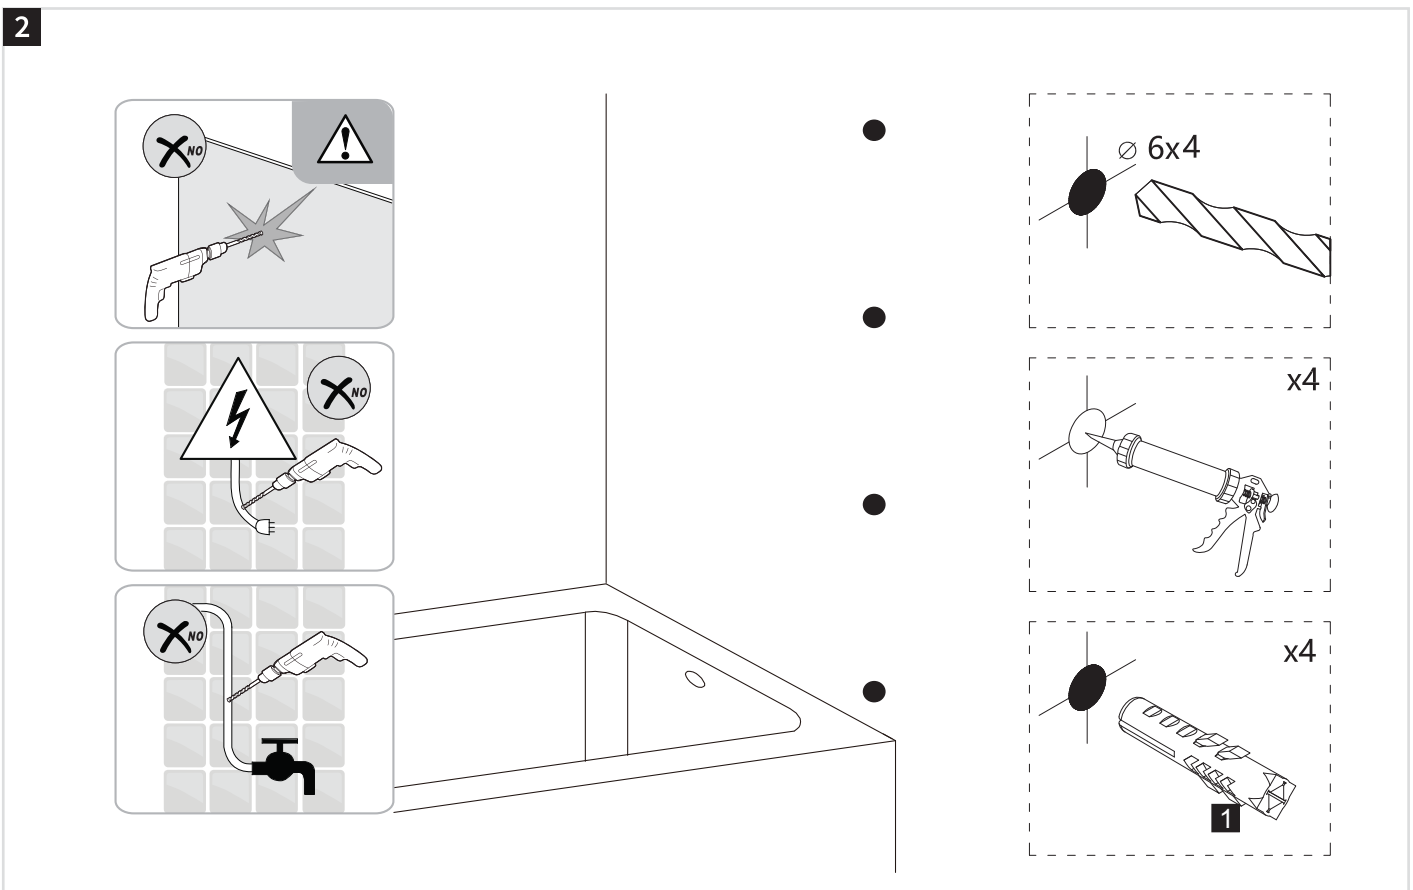


INSTALLATION

3

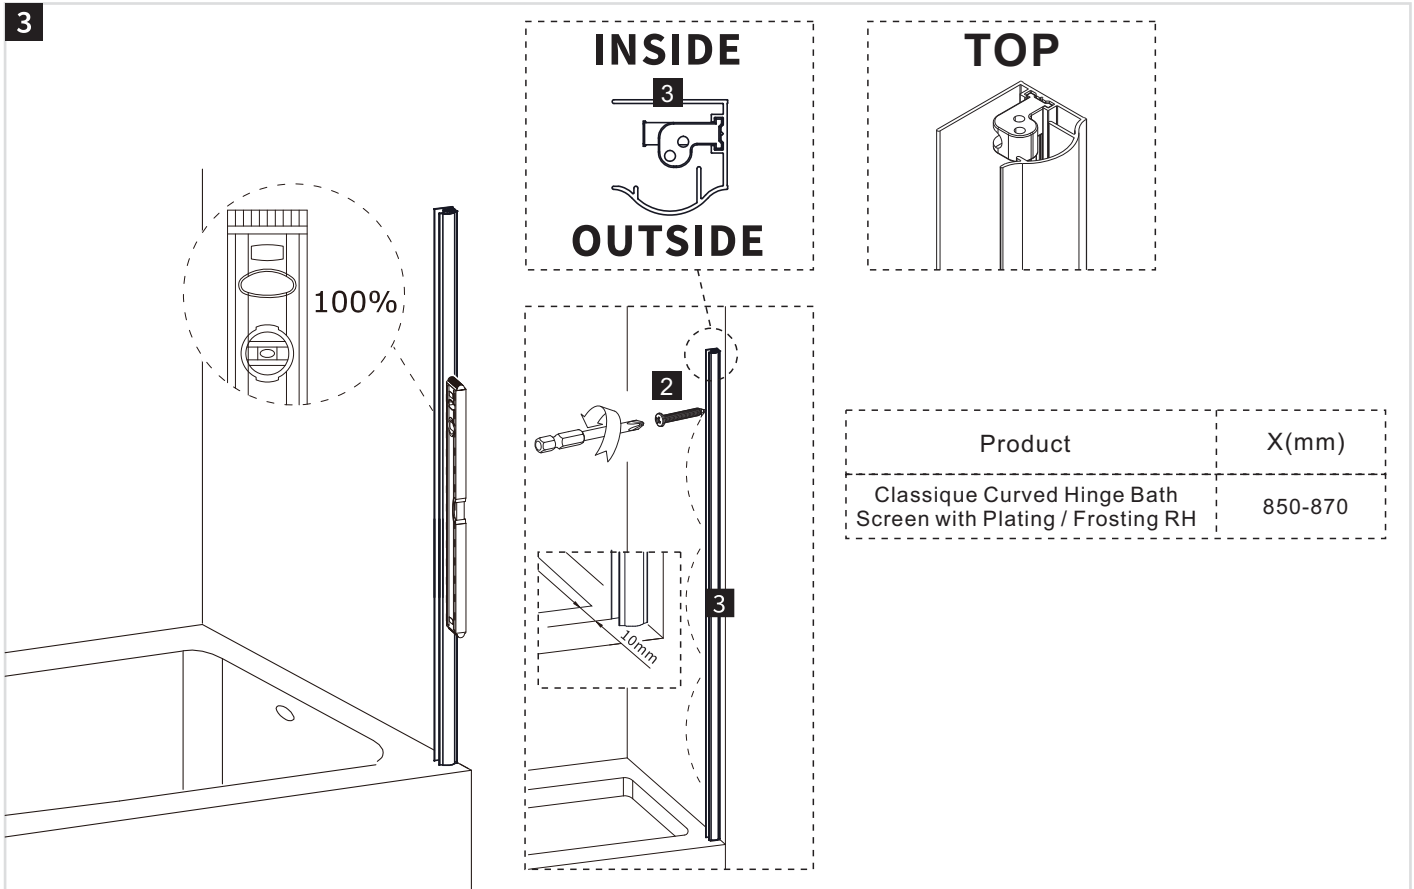


4

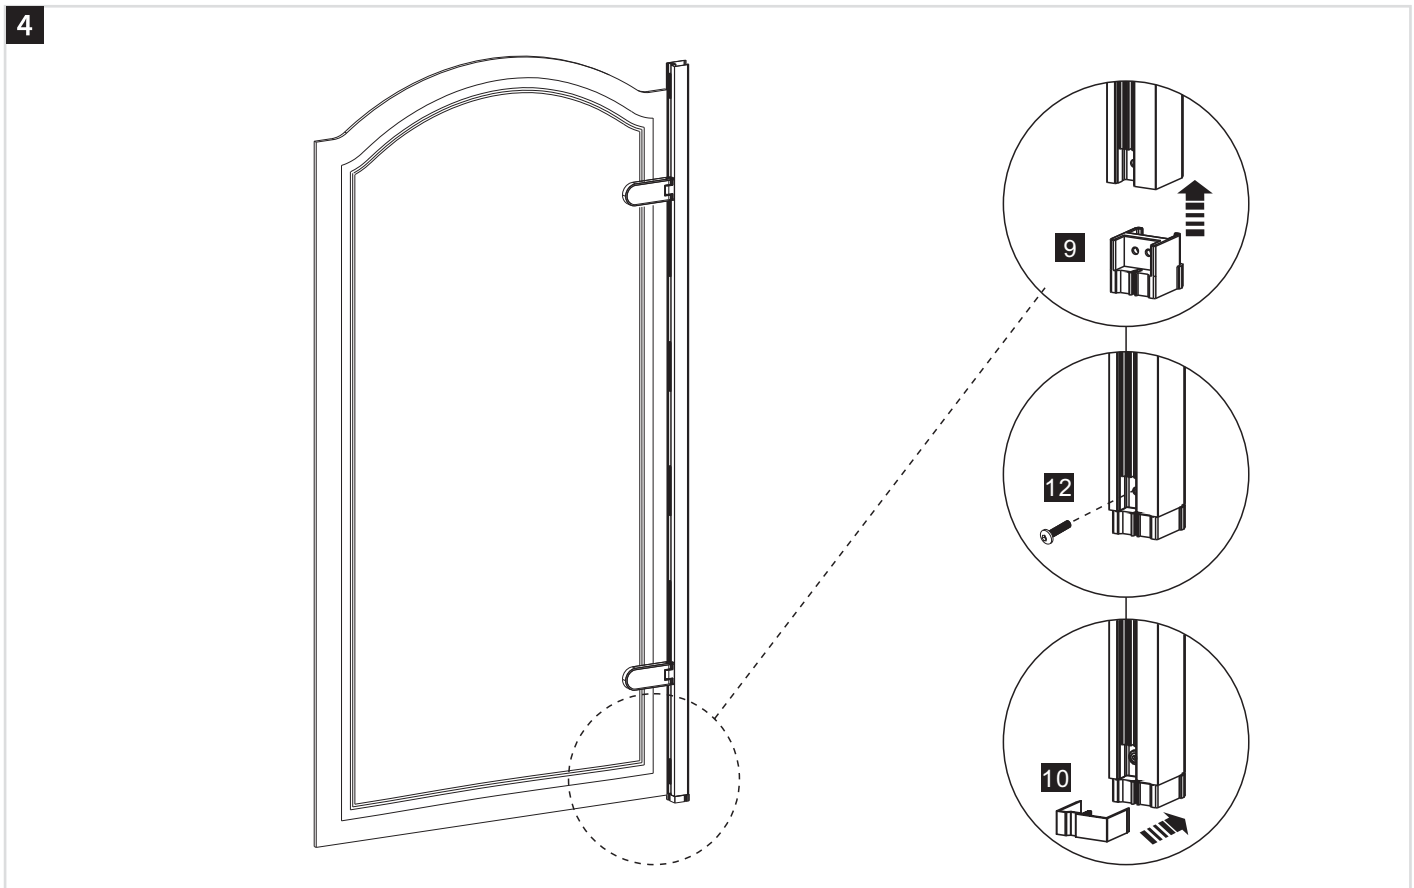


INSTALLATION

Burlington®

5


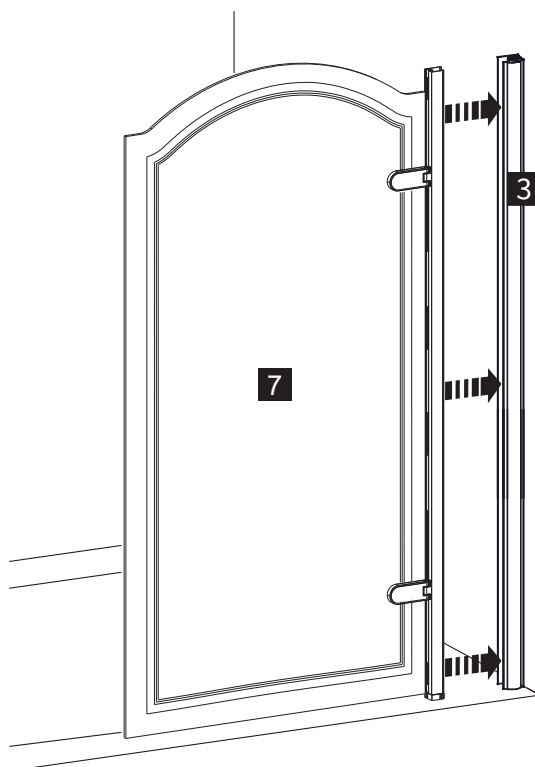



6

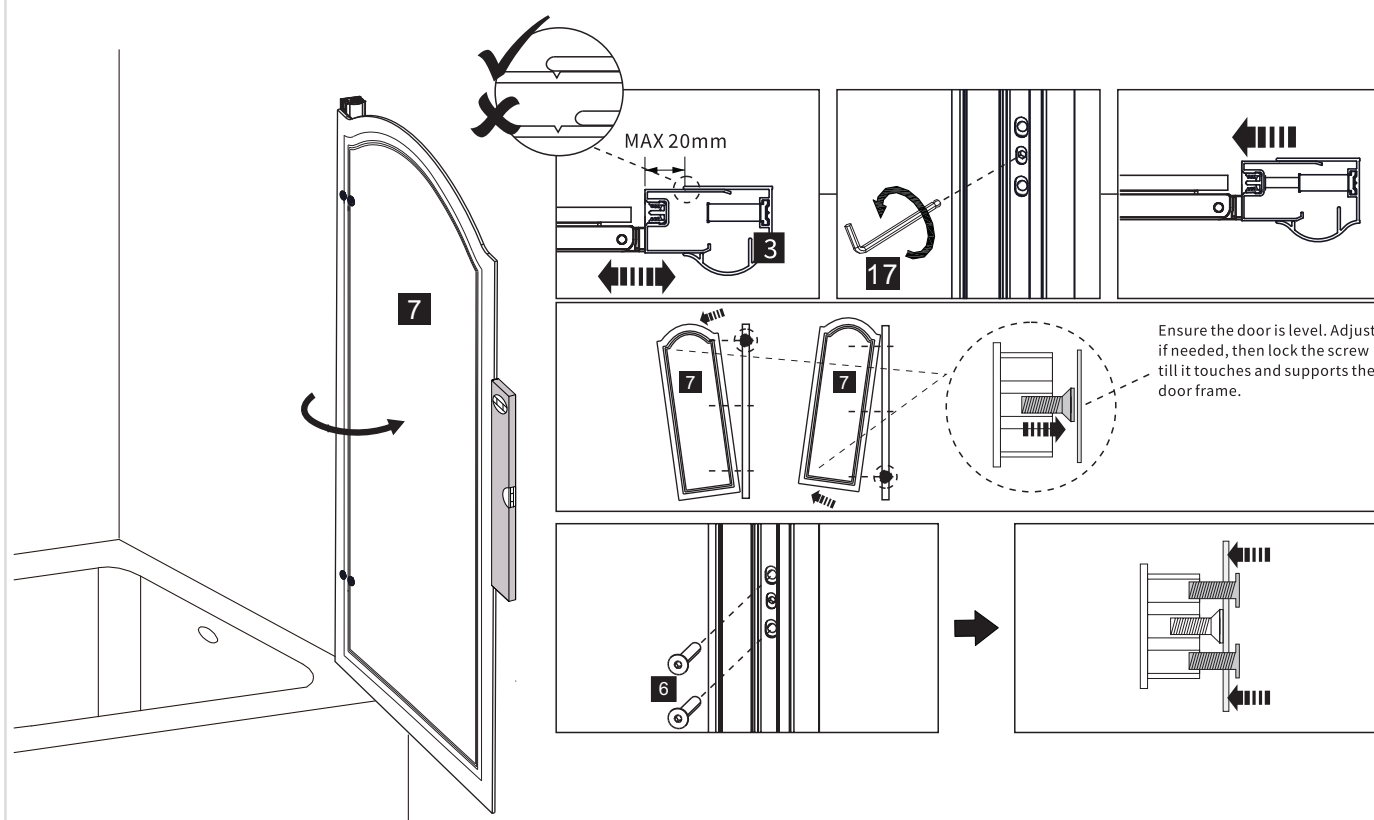

INSTALLATION

Burlington®

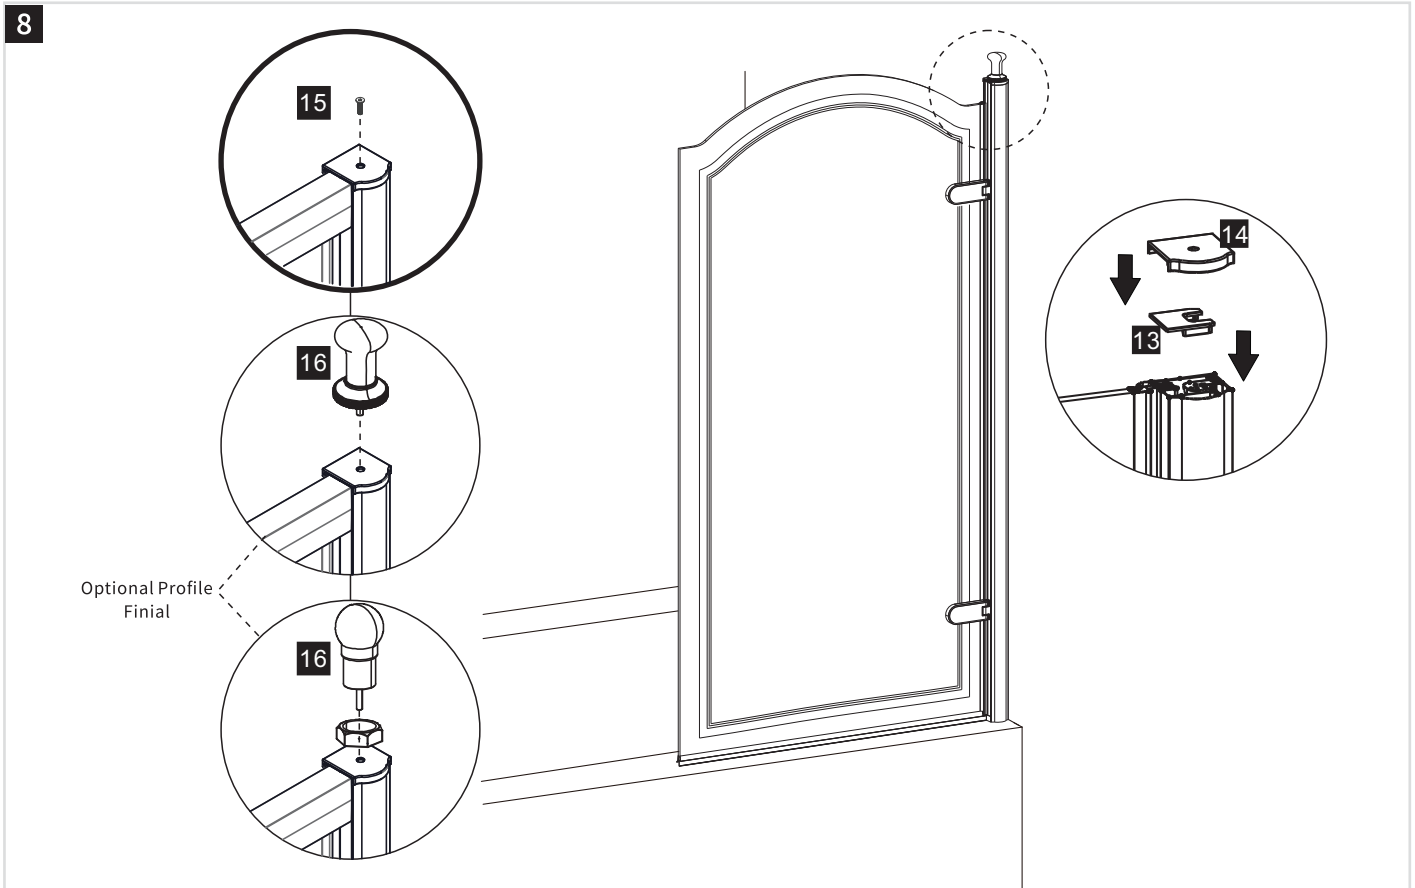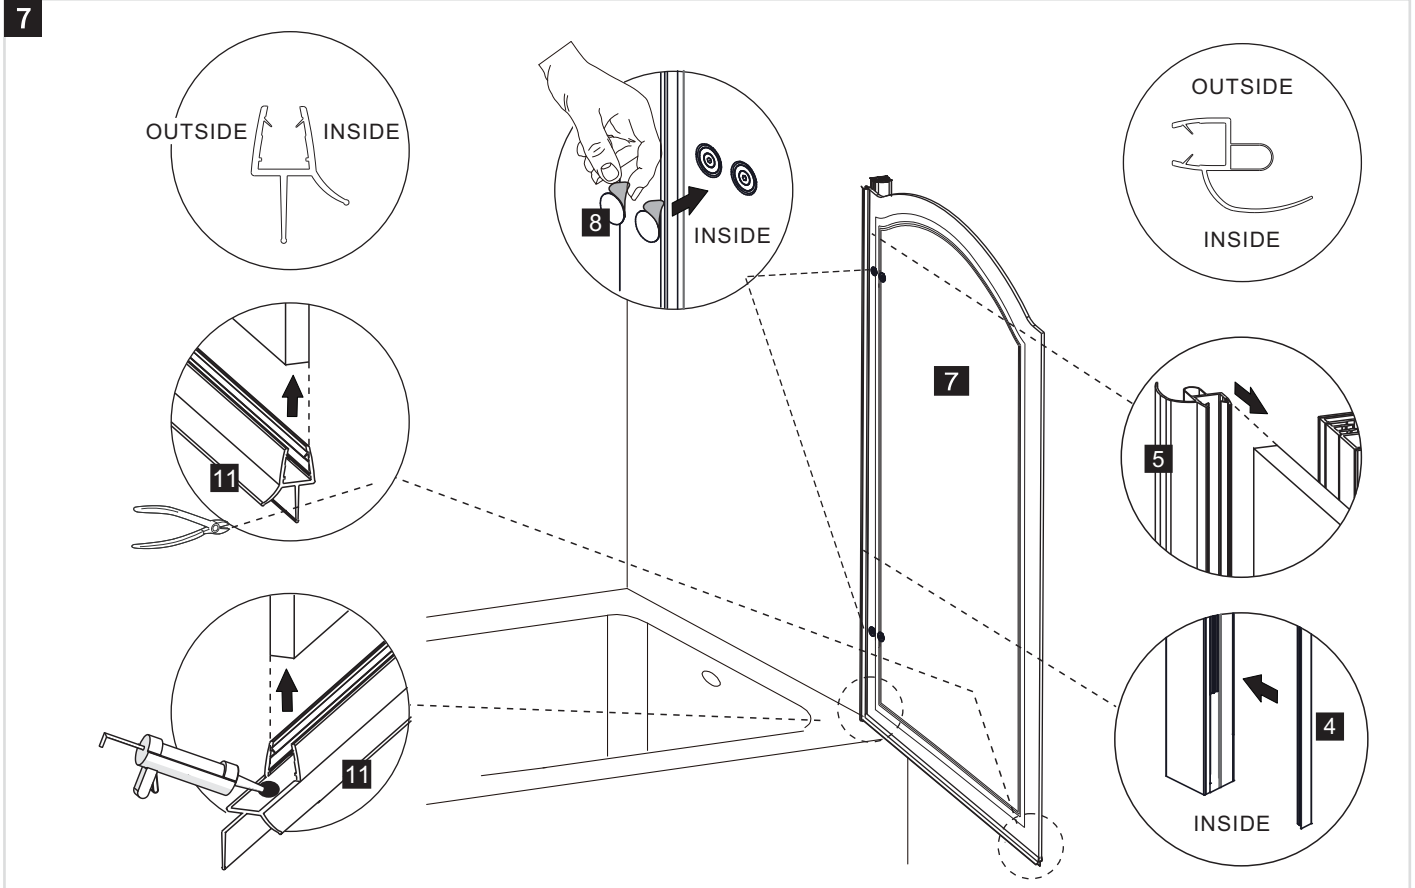

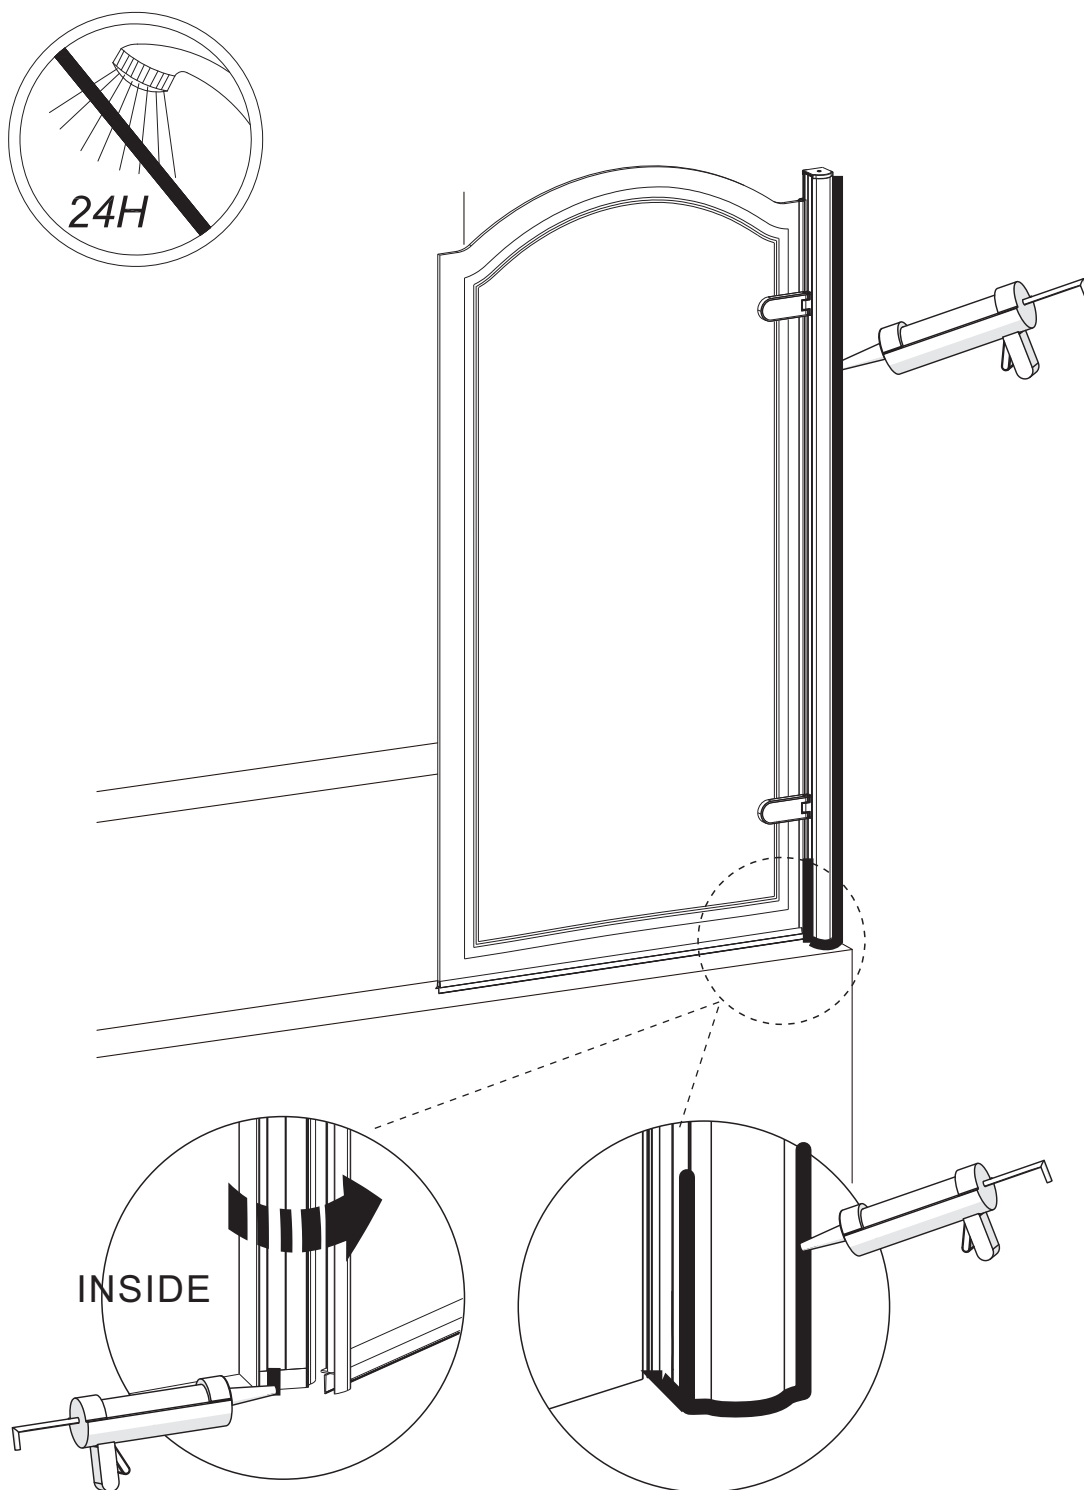

Open the door and apply sealant to the groove of the bottom cover as shown in the diagram.

Burlington[®]

Burlington[®]

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

Burlington[®]

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.crosswater.co.uk