




Cleargreen Bath Installation Instructions

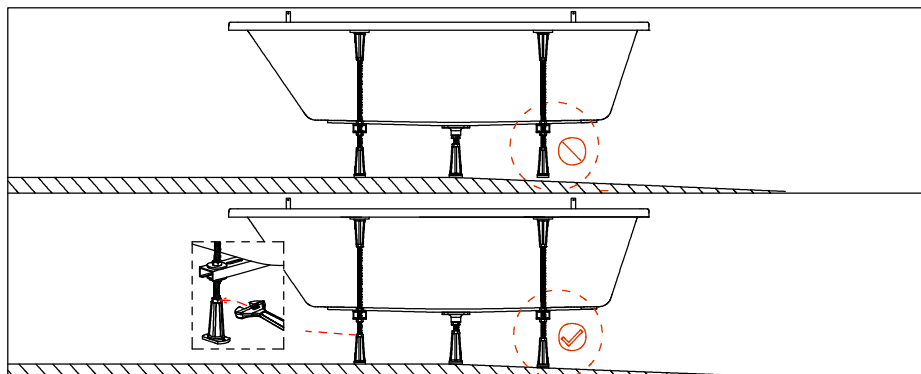


9: Place the bath in position and adjust for level, and determine waste and soil requirements.

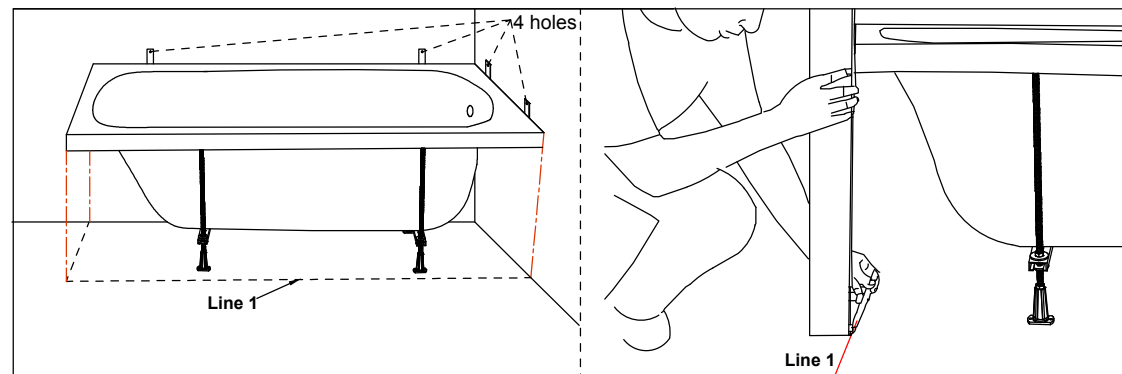


10: Mark the outline of bath and position for the 4 holes.

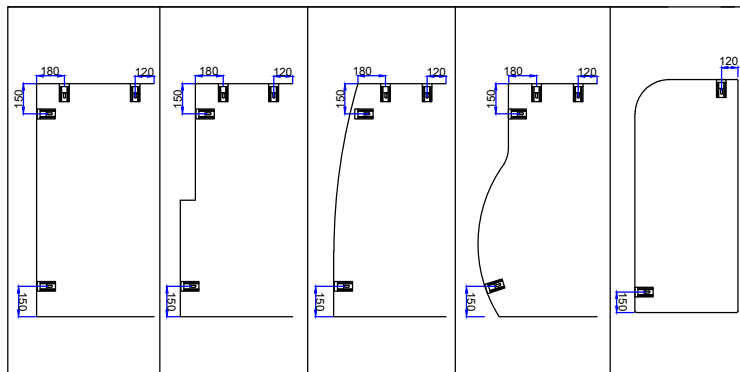


11: As per the shape of each bath, the L brackets are layouted as the diagram above. Note: Dimensions in millimetres.

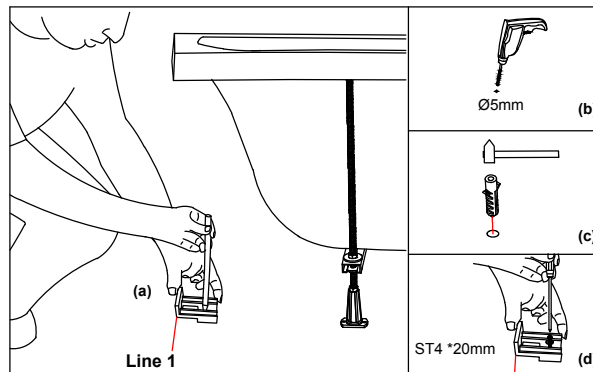


12: Fix the plastic floor L brackets onto the floor as the step above.

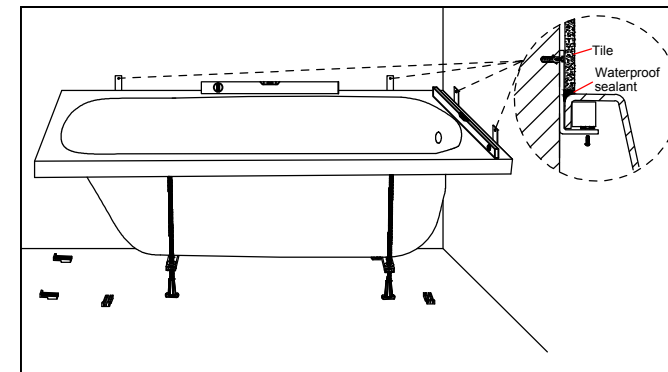


13: Place the bath back into position, fix the wall brackets on the walls and use the waterproof sealant between the bath and tiles.

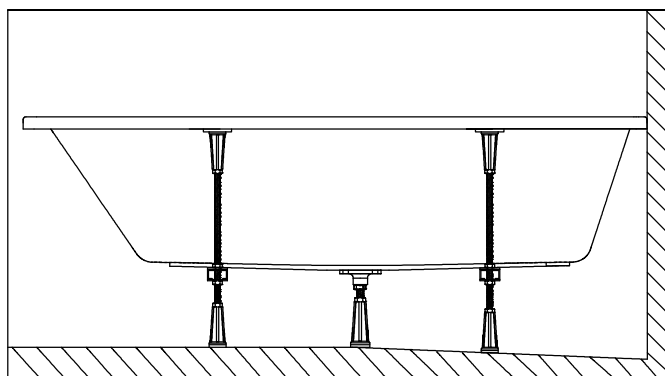

14: Attach all water and waste connections.

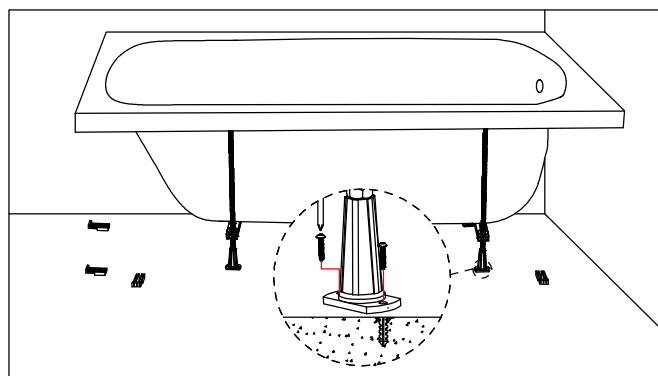


15: It is essential that once the bath is in its final position the bath legs be firmly fixed to and secured to the floor using fixings appropriate for the type of floor surface (such fixing not included)

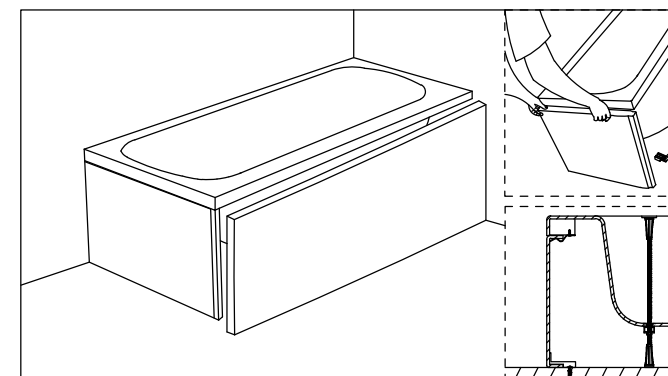


16: Clip the panel into place ensuring it is firmly held in position by the top metal clamps, and the floor L brackets prevent the panel being 'kicked' in.

EcoCurve LH & RH 170cm x 75cm x 50cm

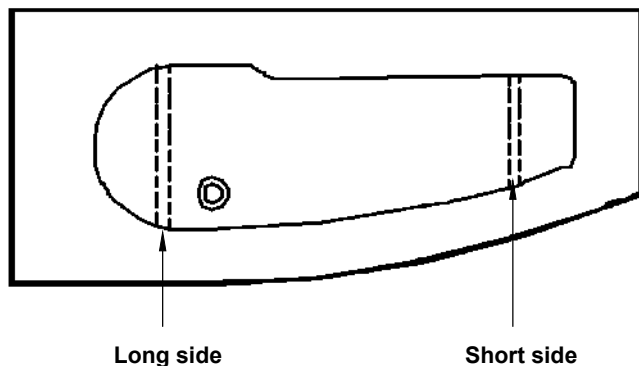


For the Ecocurve, two 750mm frames are supplied.

For the long side, the frame should be cut to 700mm.

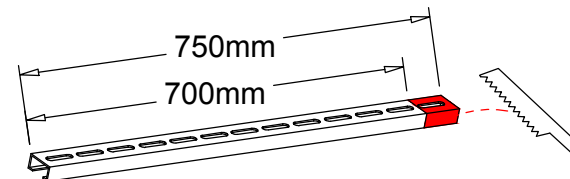


For the short side, the frame should be cut to 550mm.

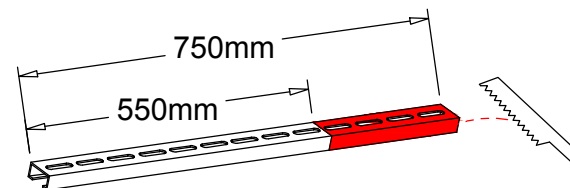

EcoSquare LH & RH 170cm x 85cm x 70cm

EcoRound LH & RH 150cm x 90cm x 74cm


EcoRound LH & RH 170cm x 90cm x 74cm

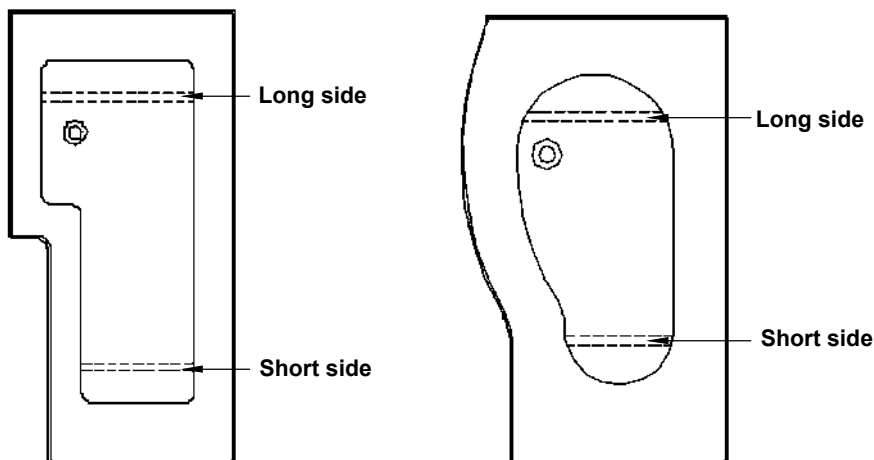

For the EcoSquare & EcoRound bath, two different frames are supplied (850mm and 700mm).

- **EcoRound, the frame supplied can be used directly.**
- **Ecosquare, please follow below instruction.**

For the long side, the frame should be cut to 800mm.

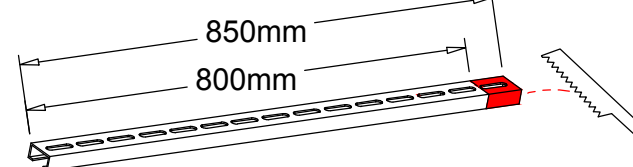

For the short side, the frame should be cut to 650mm.

