


WASTE

Bath Filler with Click Clack Waste

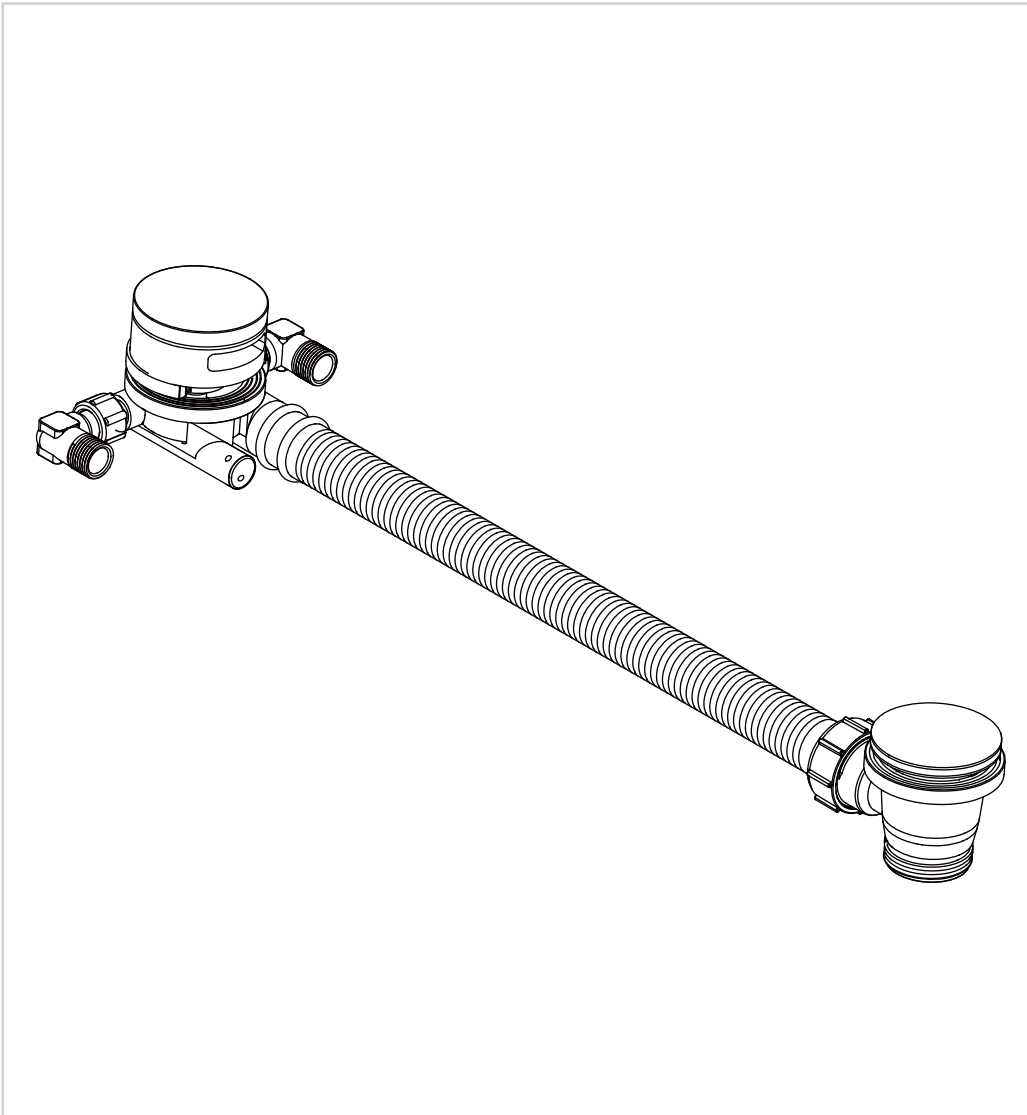

PRODUCT CODES:

PRO0351C_V2	BU_BFW0351C_V2
PRO0355M_V2	BU_BFW0355M_V2
BFW0370F_V2	BU_BFW0370F_V2
PRO0355L_V2	BU_BFW0355L_V2
BFW0360T_V2	
BFW0360BZ_V2	
BFW0360G	



IMPORTANT INFORMATION BEFORE YOU START

Please read carefully and keep this information for further reference.

Thank you for buying a Bathroombrands Product. To ensure that it works to its full potential, it needs to be fitted correctly.

Check the contents of the pack carefully before installation.

Bathroombrands will not be held responsible for any de-fit/re-fit costs where faulty product has been fitted. If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:


1. Full details are supplied to the manufacturer.
2. The product has not been modified or tampered with;

3. The manufacturer is informed of any damage/shortages prior to installation.

4. The product has not been installed, or attempts have been made to install.

We do not accept responsibility for any problems that may occur through incorrect installation. This product should only be installed by a suitably qualified plumber/installer. Should the installation be completed by a non-qualified person any product guarantee may be considered invalid. For a claim made under our warranty, written certification of your installer's qualifications may be required.

DIMENSIONS

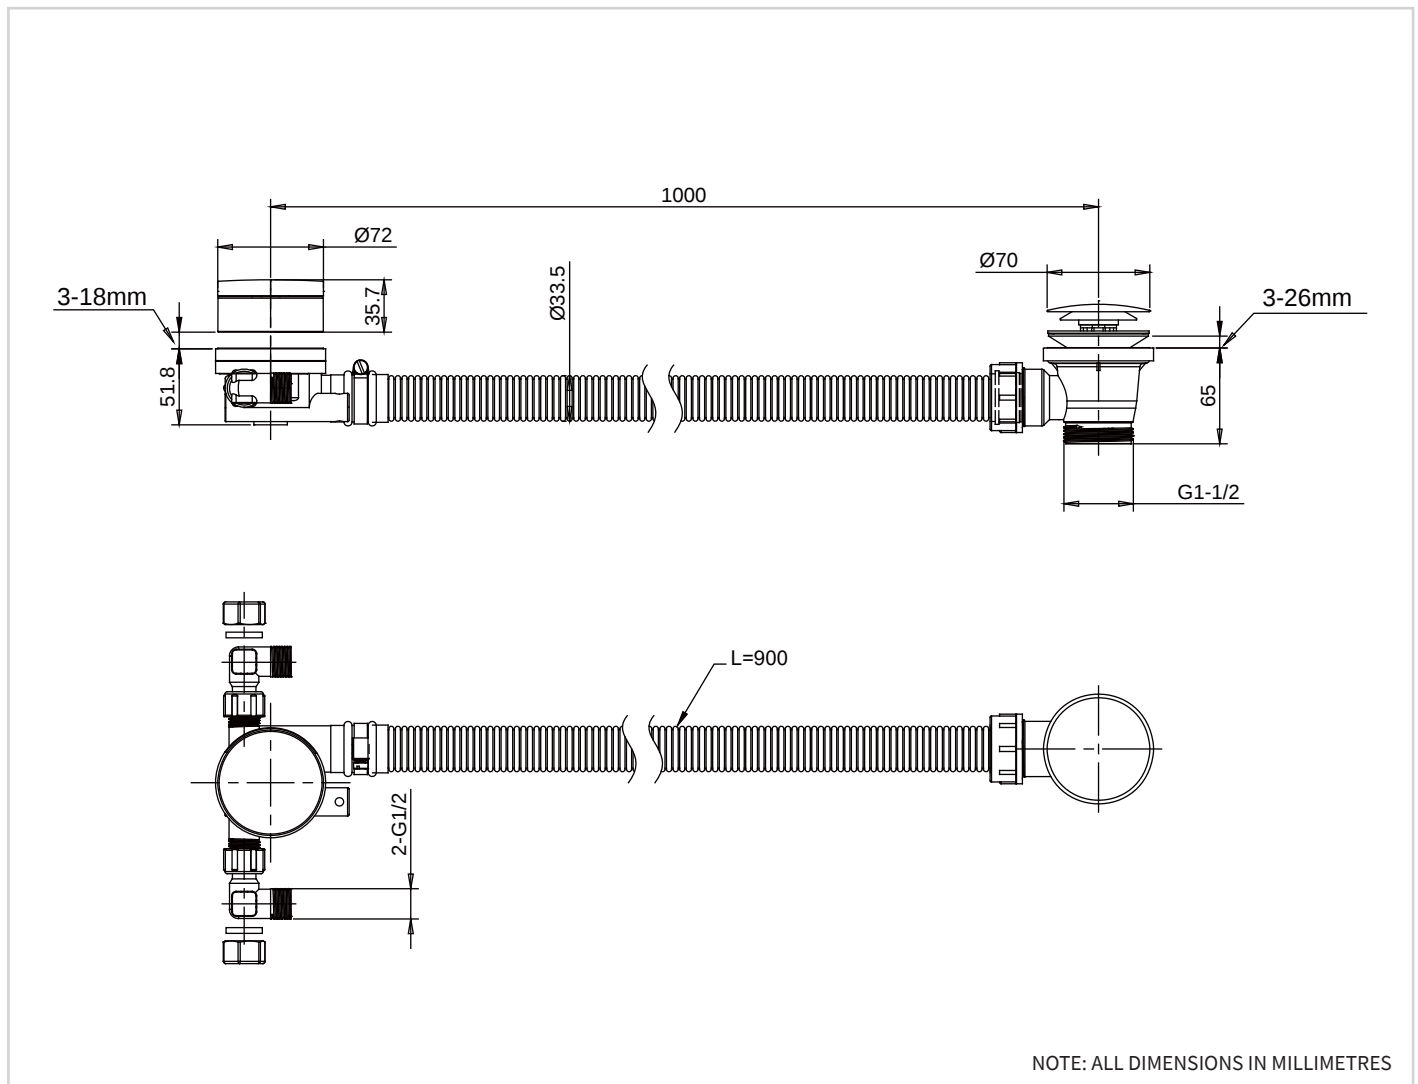

IMPORTANT INFORMATION

Please read carefully and keep this information for further reference.

The product should be installed in compliance with the Water Regulations.

Please check this product immediately to ensure that it has not been damaged and is complete.

Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.

BEFORE YOU START

Important Pre-Installation Notes

Remove all packaging and check the fitting for damage before starting installation.

Warning: Before starting any installation please consider the following: before drilling into walls, check that there are no hidden electrical wires, cables or water supply pipes. This can be checked with the aid of an electronic detector.

If power tools are used do not forget to: -

Wear eye protection

Unplug equipment after use


Important:

Remember to turn off the mains water supply before connecting to any existing pipe work. Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.

Warning: Before installing the new fitting it is essential that you thoroughly flush through the pipework in order to remove any remaining swarf, solder, etc. Failure to carry out this procedure could cause problems or damage to the workings of the fitting.

Take care when handling the 'flexible connecting pipes', do not bend, twist or crush them. Only tighten the pipes by hand. Do not crush or kink the shower hose, this could damage the hose and cause leaks.


INSTALLATION

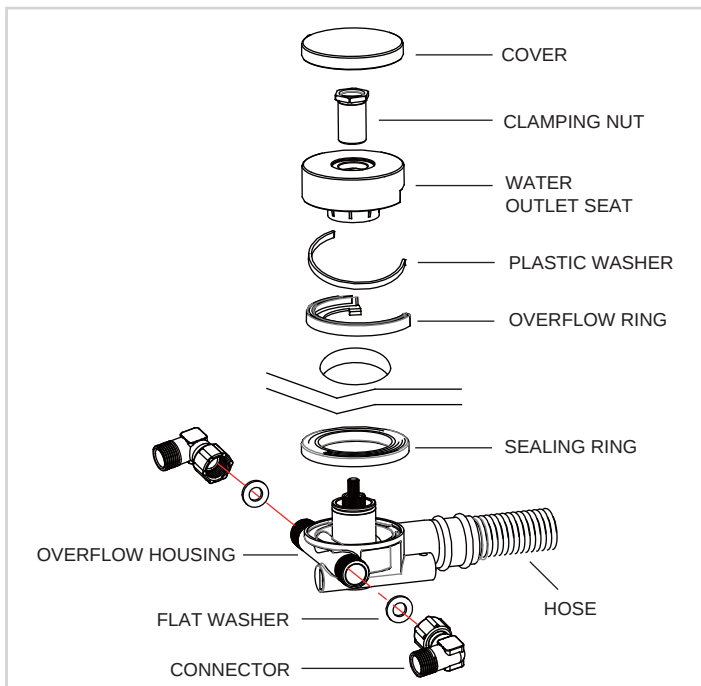

Fit the sealing ring to the overflow housing and secure the unit from outside the bath.

Assemble the overflow: push the plastic washer into the overflow ring, then fit the water outlet seat to the overflow body. Screw on the clamping nut to form a watertight seal at the overflow, then fit the cover.


Attach connectors to the overflow housing (ensure the sealing washer is in place) and tighten the nuts. Connect the water inlet (mountable on either side of the housing). Cap off the unused inlet securely if only one is needed.

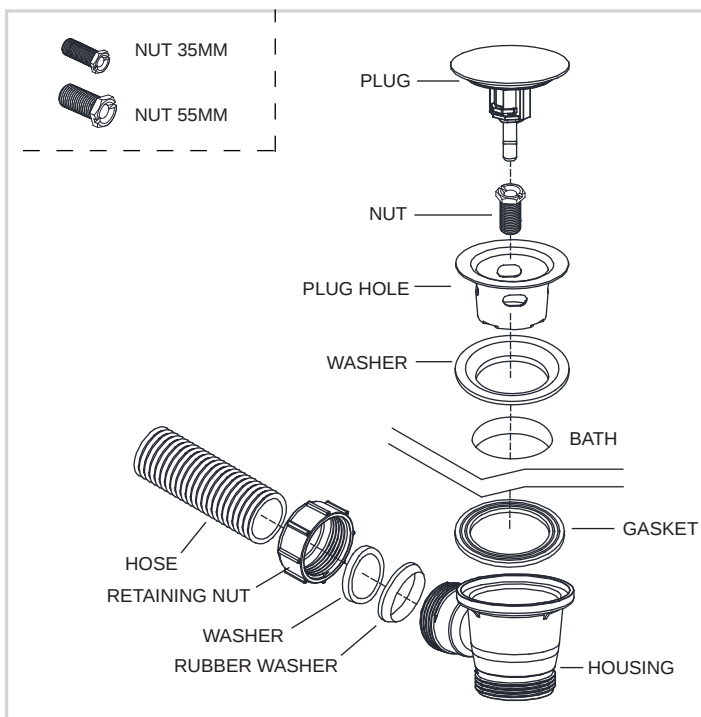

From below push the rubber gasket on the waste housing.

From inside the bath place the washer and plug hole in position on the gasket, screw the nut into the housing and tighten, finally place the plug into the nut.

Note: 2 length nuts are included for bath thicknesses from 3mm to 26mm.

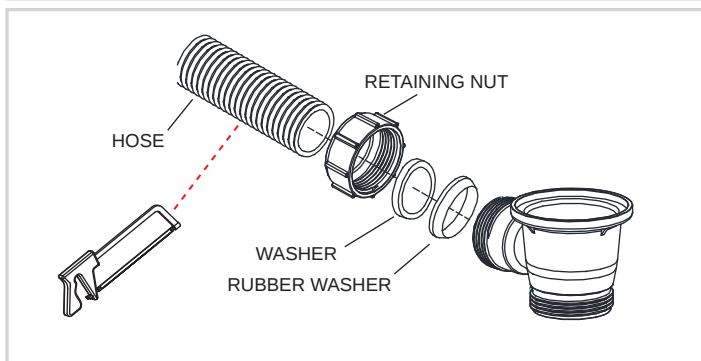

The hose can be cut down depending on the bath onsite.

CARE & MAINTENANCE

The material we use in our brassware is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hairdyes, wine making, and photographic chemicals can cause the surface to go black or peel.

Note: Never use abrasive detergents or disinfectants or those containing alcohol, hydrochloric acid or phosphoric acid.